

43-940.fm Page 1 Tuesday, February 29, 2000 9:15 AM



# CID 940 Wireless Caller ID System



**Owner's Manual**  
Please read before using this equipment.

43-940.fm Page 2 Tuesday, February 29, 2000 9:15 AM

## Contents



<b>Features</b> .....	4
<b>Preparation</b> .....	8
Powering the System's Transmitter .....	8
Powering the System's Receiver .....	9
Installing Batteries .....	9
Using AC Power .....	10
Connecting the System .....	11
Connecting to a Single-Line Phone .....	11
Connecting to an Answering Machine .....	11
Setting the System's	
Identification Code .....	12
Checking the Range .....	12
Setting the Display Contrast, Alert Tone, and Clock Display	
Format .....	13
<b>Operation</b> .....	14
Receiving and Storing Calls .....	14
Message Waiting .....	14
Reviewing Call Records .....	15
Displayed Call Information .....	16
Deleting Calls .....	16
Deleting a Single Call .....	16
Deleting All Calls .....	17


© 2000 Tandy Corporation. All Rights Reserved.  
RadioShack, RadioShack.com, and AdaptaPlug  
are trademarks used by Tandy Corporation.


43-940.fm Page 3 Tuesday, February 29, 2000 9:15 AM

<b>Troubleshooting .....</b>	<b>17</b>
<b>Care and Maintenance .....</b>	<b>18</b>
<b>The FCC Wants You to Know .....</b>	<b>19</b>
<b>Lightning .....</b>	<b>19</b>

**WARNING:** To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
<b>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.</b>		

 This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.

 This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

43-940.fm Page 4 Tuesday, February 29, 2000 9:15 AM

---

## Features

Your RadioShack Wireless Caller ID System lets you screen your phone calls, so you can decide whether or not to answer. When you are up to 100 feet (30.48 meters) away from the phone and you receive a call, the system's transmitter instantly sends the caller's name and phone number (as provided by your local telephone company to Caller ID service subscribers) to its receiver.

**Note:** In some cases, the local environment might affect the transmission (for example, aluminum siding, electrical appliances, computer equipment, and so on).

The system's other features include:

**Caller ID Memory** — stores up to 60 Caller ID records, so you always know who called and when they called.

**Out of Area Indication** — lets you know when an incoming call is from an area code that does not send Caller ID information.

**Support for Unlimited Receivers** — lets you add as many receivers as you need, anywhere within 100 feet of the transmitter.

**3-Line Liquid Crystal Display** — lets you see at a glance whether you have a new call, along with the total number of calls, the last caller's name (if available) and phone number, and the current time and date.

**Page Button** — lets you verify that the receiver is within operating range of the transmitter.

43-940.fm Page 5 Tuesday, February 29, 2000 9:15 AM

**Rubber Duck Antenna** — rotates for the best reception in any location.

**Call Waiting Compatibility** — displays the Caller ID on Call Waiting information when you use a Caller ID on Call Waiting-equipped telephone or if your telephone is connected to a Caller ID on a Call Waiting-equipped device.

**Note:** When you have Call Waiting, the receiver displays the caller's name and number first, then **CALL WAITING** appears, and the two appear interchangeably afterwards.

**Message Waiting** — lets you know you have a voice mail message.

Your system is ETL listed to UL standards and meets all applicable FCC standards.

### IMPORTANT INFORMATION

To use this system, you must be in an area where Caller ID service is available, and you must subscribe to the service.

Where Caller ID is offered, one or more of the following options are generally available:

- caller's number only
- caller's name only
- caller's name and number

**Note:** Your system displays the caller's name only if that option is available in your area.

---

Features

5

43-940.fm Page 6 Tuesday, February 29, 2000 9:15 AM

### FCC INFORMATION

We have designed your system to conform to federal regulations, and you can connect it to most telephone lines. However, each system (and each device, such as a telephone or answering machine) that you connect to the telephone line draws power from the telephone line. We refer to this power draw as the device's ringer equivalence number, or REN. The REN is on the bottom of the system.

If you use more than one telephone or other device on the line, add up all the RENs. If the total is more than five (three in rural areas), your telephone might not ring. If ringer operation is impaired, remove a device from the line.

Your system complies with Part 68 of *FCC Rules*. You must, upon request, provide the FCC registration number and the REN to your telephone company. Both numbers are on the bottom of the system.

**Note:** You must not connect your system to:

- coin-operated systems
- party line systems
- most electronic key telephone systems

6

Features

43-940.fm Page 7 Tuesday, February 29, 2000 9:15 AM

This equipment complies with the limits for a Class B digital device as specified in Part 15 of *FCC Rules*. These limits provide reasonable protection against radio and TV interference in a residential area. However, your equipment might cause TV or radio interference even when it is operating properly. To eliminate interference, you can try one or more of the following corrective measures:

- Reorient or relocate the TV or radio's receiving antenna.
- Increase the distance between the equipment and the radio or TV.
- Use outlets on different electrical circuits for the equipment and the radio or TV.

Consult your local RadioShack store if the problem continues.

FREE

Features

7

43-940.fm Page 8 Tuesday, February 29, 2000 9:15 AM

## □ Preparation

### POWERING THE SYSTEM'S TRANSMITTER

Use the supplied 9V, 200-mA AC adapter to power the system's transmitter.

#### Caution:




You must use a Class 2 power source that supplies 9V DC and delivers at least 200 mA. Its center tip must be set to positive and its plug must fit the transmitter's DC 9V jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the transmitter or the adapter.

- Always connect the AC adapter to the transmitter before you connect it to AC power. When you finish, disconnect the adapter from AC power before you disconnect it from the transmitter.

Plug the adapter's barrel plug into the transmitter's DC 9V jack.

Plug the adapter's other end into a standard AC outlet. The POWER indicator lights.

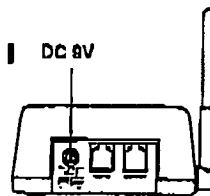

g

Preparation



43-940.fm Page 9 Tuesday, February 29, 2000 9:15 AM

## POWERING THE SYSTEM'S RECEIVER

You can power the system's receiver using four C batteries or an AC adapter (neither supplied).

### Installing Batteries

The system's receiver can use four C batteries (not supplied) for power. For longest operation and best performance, we recommend alkaline batteries, available at your local Radio Shack store.

#### Cautions:

- Always use fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

Follow these steps to install batteries.

1. Use a Phillips screwdriver to remove the screws on the battery compartment cover, then slightly tilt the receiver back to remove the battery compartment cover.
2. Place the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover and secure it with the screws. **ID TO LEARN** appears.

When the display dims or  appears, replace the batteries.

43-940.fm Page 10 Tuesday, February 29, 2000 9:15 AM

**Warning:** Dispose of old batteries promptly and properly. Do not burn or bury them.

**Caution:** If you do not plan to use the receiver with batteries for a month, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

### Using AC Power

You can also power the system's receiver using an optional 9V, 200-mA AC adapter and a size M Adaptaplug™ adapter (available at your local RadioShack store).

#### Cautions:



You must use a Class 2 power source that supplies 9V DC and delivers at least 200 mA. Its center tip must be set to positive and its plug must fit the receiver's DC 9V jack. Using an adapter that does not meet these specifications could damage the receiver or the adapter.

- Always connect the AC adapter to the receiver before you connect it to AC power. When you finish, disconnect the adapter from AC power before you disconnect it from the receiver.

1. Insert the Adaptaplug into the adapter's cord so it reads TIP +.
2. Insert the Adaptaplug into the receiver's DC 9V jack.
3. Plug the adapter into a standard AC outlet. **ID TO LEARN** appears.


43-940.fm Page 11 Tuesday, February 29, 2000 9:15 AM

### CONNECTING THE SYSTEM

The system's transmitter connects to any modular phone jack and your phone. You can also connect it to an answering machine.

#### Connecting to a Single-Line Phone

1. Disconnect the line cord from your phone and plug it into the transmitter's LINE-IN jack.
2. Plug one end of the supplied line cord into the transmitter's LINE-OUT jack.
3. Plug the other end of the cord into the phone's jack.

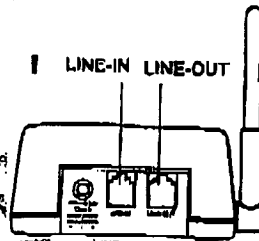

#### Connecting to an Answering Machine

1. Plug a telephone line cord from the phone line into the transmitter's LINE-IN jack.
2. Plug one end of the supplied line cord into the transmitter's LINE-OUT jack and plug the cord's other end into the answering machine's line jack.
3. Plug a third line cord into the answering machine's phone jack and the telephone's modular jack.

43-940.fm Page 12 Tuesday, February 29, 2000 9:15 AM

4. Set your answering machine to answer after two or more rings. This gives the system time to record the call information that the phone company sends between the first and second rings.

### SETTING THE SYSTEM'S IDENTIFICATION CODE

You can install multiple receivers. Each receiver that you install must be set with the same identification code as the transmitter. Follow these steps to set the code.

**Note:** If you hold down **PAGE** for 5 seconds or longer, the transmitter's identification code changes. Be sure to set all receivers to the new code.

1. Place the receiver next to the transmitter.
2. Hold down **SET** on the receiver for about 5 seconds. **WAITING ID** appears.
3. Press **PAGE** on the transmitter within 10 seconds after **WAITING ID** appears. This sends the transmitter identification code to the receiver. The receiver beeps and **ID SET** appears indicating that the ID code is set.

### CHECKING THE RANGE

1. Place the receiver at the desired location.
2. Press **PAGE** on the transmitter.

If the receiver is within the range, it beeps and **PAGED** appears for 30 seconds.

43-940.fm Page 13 Tuesday, February 29, 2000 9:15 AM

If **PAGED** does not appear, move the receiver closer to the transmitter and press **PAGE** again. If it still does not beep, repeat the steps under "Setting the System's Identification Code" on Page 12 to verify that the identification code is properly set.

The receiver checks the range every three hours. If the receiver is out of the range of the transmitter, **OUT OF RANGE** appears. Move the receiver closer to the transmitter and press **PAGE** to check the range again.

**Note:** The transmitter can support an unlimited number of receivers. The distance between receivers should be 2 feet or more to avoid interference.

### SETTING THE DISPLAY CONTRAST, ALERT TONE, AND CLOCK DISPLAY FORMAT

1. Hold down **SET** and **▼ DOWN** for about 5 seconds until **SETTING** appears.
2. Press **▼ DOWN** to set the display contrast (the default setting is 3).
3. Repeatedly press **SET** to select the contrast level (1-4), then press **▼ DOWN**. The current tone setting appears. (The default setting is **BEEP OFF**.)
4. Press **SET** to toggle between **BEEP ON** and **BEEP OFF**, then press **▼ DOWN**. The display shows the current clock format setting (the default setting is a 12-hour format).
5. Press **SET** to toggle between 12- and 24-hour formats, then press **▼ DOWN**. Setup is complete.

Preparation

13

43-9a0.fm Page 14 Tuesday, February 29, 2000 9:15 AM

When you first connect the receiver, the clock displays **12:00PM** and the date **1/01**. When the first call comes in, the current time and date are automatically set from the Caller ID information provided by your phone company.

## Operation

### RECEIVING AND STORING CALLS

Caller ID is a service provided by your telephone company. When you subscribe to this service, the telephone company sends the caller's telephone number (and name, if available) and the call's date and time between the first and second rings.

The system receives and displays this information for each call and updates the display with the current date and time. If the caller's name has more than 16 characters, only the first 16 characters appear. Your system saves up to 60 call records, then replaces the oldest call record with each new one.

### MESSAGE WAITING

If you subscribe to a message waiting service with your local telephone company, **MESSAGE WAITING** appears when you have a new message waiting. **☒** appears when the receiver is in the standby mode and disappears after you have listened to the voice mail message.

K

43-940.fm Page 15 Tuesday, February 29, 2000 9:15 AM

## REVIEWING CALL RECORDS

Each time you receive a call, the system saves a call record in memory and **NEW** appears. Each call record includes the time and date of the call, the call number (the order in which the call was received), the caller's telephone number, and the caller's name (if available).

To scroll through the call records, repeatedly press **▼ DOWN** to see the newer records. Repeatedly press **▲ UP** to see the older records.

### Notes:

- If you do not press a button within about 10 seconds, the system automatically returns to the time and date display.
- If no call information is stored, **NO CALL** appears when you press **▼ DOWN**.
- After you review all calls, **END OF LIST** appears.
- After you review a new call, **NEW** disappears.

---

Operation

15

43-940.fm Page 16 Tuesday, February 29, 2000 9:15 AM

### Displayed Call Information

The system can display the following information.

Display	Description
<b>ERROR</b>	The Caller ID information is garbled.
<b>RPT</b>	You have received a call from the same phone number.
<b>PRIVATE</b>	The caller chose not to send the Caller ID name and number.
<b>MESSAGE WAITING</b> or ☐	A message is waiting. (Only appears if you subscribe to your phone company's message waiting service.)
<b>UNKNOWN</b>	The caller is not within a Caller ID service area.
<b>NEW</b>	Appears when you receive a new Call.
<b>TOTAL</b>	The total number of incoming calls.
<b>NO CALL</b>	No call information is stored in the system.

### DELETING CALLS

#### Deleting a Single Call

Repeatedly press ▼ DOWN or ▲ UP until you see the call record you want to delete, then press DELETE. The receiver deletes the selected call record and renumbers the remaining records. After about 10 seconds, the clock display appears.



43-940.fm Page 17 Tuesday, February 29, 2000 9:15 AM

## Deleting All Calls

Press **▼ DOWN** or **▲ UP** until a call record appears, then hold down **DELETE** for about 5 seconds. The receiver beeps, **00 NEW 00 TOTAL** appears briefly, then the clock display appears.

## ☐ Troubleshooting

If your system is not working as it should, these suggestions might help you eliminate the problem. If you see a message that you do not understand, see "Displayed Call Information" on Page 16.

Problem	Solution
Blank screen	Install or replace the batteries.
	Adjust the contrast level (See "Setting the Display Contrast, Alert Tone, and Clock Display Format" on Page 13).
	Order Caller ID service from your local telephone company.
No dial tone on phone attached to the system	Check all of the connections to make sure they are secure.
	Check for correct installation.
	Disconnect the system and reconnect the phone to see if the phone works without the system.

43-940.fm Page 18 Tuesday, February 29, 2000 9:15 AM

Problem	Solution
Incoming call with no Caller ID information	You answered the call before the system received the call information. Wait until your phone rings at least twice before answering a call.
	Set the receiver's Caller ID identification code. (See "Setting the System's Identification Code" on Page 12.)

## Care and Maintenance

To enjoy your Wireless Caller ID System for a long time

- Keep the system dry. If it gets wet, wipe it dry immediately.
- Use and store the system only in normal temperature environments.
- Handle the system gently and carefully. Don't drop it.
- Keep the system away from dust and dirt.
- Wipe the system with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the system's internal components can cause a malfunction and invalidate its warranty and void your FCC authorization to operate it. If your system is not performing as it should, take it to your local RadioShack store for assistance. If the trouble is affecting the telephone lines, the

43-940.fm Page 19 Tuesday, February 29, 2000 9:15 AM

phone company can ask you to disconnect your system until you have resolved the problem.

### THE FCC WANTS YOU TO KNOW

In the unlikely event that your system causes problems on the telephone line, the telephone company can disconnect your service. The telephone company normally attempts to notify you in advance. If advance notice is not practical, the telephone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

Also, the telephone company can make changes in its lines, equipment, operations, or procedures that could affect the operation of this system. The telephone company notifies you of these changes in advance so you can take the necessary steps to prevent interruption of your telephone service.

### LIGHTNING

Your system has built-in protection circuits to reduce the risk of damage from surges in telephone line and power line current. These protection circuits meet or exceed the FCC requirements. However, lightning striking the telephone or power lines can damage your system.

Lightning damage is not common. Nevertheless, if you live in an area that has severe electrical storms, we suggest that you unplug your system during storms to reduce the possibility of damage.

43-940.fm Page 20 Tuesday, February 29, 2000 9:15 AM

### Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 8th Floor, Fort Worth, TX 76102

*We Service What We Sell*

1288

RadioShack — A Division of  
Tandy Corporation  
Fort Worth, Texas 76102

43-940  
03A00  
Printed in China