

Chase down the bad guys on your block with the RC Police Cruiser!

# RC Police Cruiser

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Police Cruiser is built to handle the road in style, whether in the hallway of your house or on the sidewalk outside.

## THE FCC WANTS YOU TO KNOW

Your Police Cruiser or transmitter might cause TV or radio interference even when they are operating properly. To determine whether your Police Cruiser or transmitter is causing the interference, turn off the car and its transmitter. If the interference goes away, your Police Cruiser is causing it. Try to eliminate the interference by:

- moving your Police Cruiser away from the TV or radio
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Police Cruiser.

Changes or modifications to this product not expressly approved by RadioShack, or operation of this product in any way other than as detailed by the Owner's Manual, could void your authority to operate the product.

## INSTALLING BATTERIES

Your Police Cruiser requires four AA batteries (not supplied) to power your car, and one 9V battery (not supplied) for the transmitter. For the best per-

formance and longest life, we recommend RadioShack alkaline batteries.

**Warning:** Dispose of old batteries promptly and properly. Do not burn or bury them.

### Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the Police Cruiser for a week or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

When the car moves slowly or not at all, replace the batteries in both the transmitter and the car.

## In the Police Cruiser

1. Slide OFF/ON on the car to OFF.
2. Use a Phillips screwdriver to loosen the screw on the car battery compartment cover, then lift and remove it.
3. Place four AA batteries in the battery compartment, as indicated by the polarity symbols (+ and -) marked inside the compartment.

4. Replace the cover and secure it with screw.

## In The Controller

1. Use a Phillips screwdriver to loosen the screw in the controller's battery compartment cover, then lift and remove it.
2. Place a 9V battery in the battery compartment, as indicated by the polarity symbols (+ and -) marked inside the compartment.
3. Replace the cover and secure it with the screw.

## OPERATION

**Warning:** Never play with your Police Cruiser in the street.

1. Slide OFF/ON on the car to ON.
2. Hold down the transmitter's power button. The Police Cruiser goes in a straight line with the emergency lights flashing and the police siren sounding.
3. Release the button to stop the car.

4. Hold it down again to make the car turn in reverse.

5. When you finish driving the car, slide OFF/ON to OFF to turn off the car.

**Note:** Your Police Cruiser stops when it runs into anything, but the motor keeps running. When this happens, release the transmitter's power button, then hold it down, so the car changes direction, or move the car by hand.

## CARE

Keep the Police Cruiser dry; if it gets wet, wipe it dry immediately. Use and store the Police Cruiser only in normal temperature environments. Handle the Police Cruiser carefully; do not drop it. Keep the Police Cruiser away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the Police Cruiser's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If your Police Cruiser is not performing as it should, take it to your local RadioShack store for assistance.

**Limited Ninety-Day Warranty**

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTY CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CONSUMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, into the product and the RadioShack store receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All repaired parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by an accident or misuse of the product, including, but not limited to, misuse, abuse, neglect, or improper use; (b) any repair, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lighting at other locations of excess voltage or current; (c) any repairs other than those provided by a RadioShack Authorized Service Facility; (d) consumables such as tapes or batteries; (e) accidental damage; (f) transportation, shipping or insurance costs; or (g) acts of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 208 Taylor Street, 6th Floor, Fort Worth, TX 76102

**We Service What We Sell**

**RadioShack**  
www.radioshack.com

© 2001 RadioShack Corporation. All Rights Reserved. RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

RadioShack Corporation  
Fort Worth, Texas 76102

60-2782  
03A01  
Printed in Hong Kong

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

**However,** there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
Rearranging or relocating the receiving antenna.  
Increasing the separation between the equipment and receiver.  
Connecting the equipment into an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.