

# Single Channel FRS


## Owner's Manual

- Single FRS Channel
- 25mW RF Output
- No License Required!
- Clear Communication Up to 1Km
- Automatic Squelch
- Audible Page

## **Introduction**

The FRS Two-Way Radio is a lightweight, palm-sized radio that you can carry almost anywhere. Use it at shopping malls, amusement parks, or sports events to contact family and friends, or in a neighborhood watch for vital communications. You can talk with other FRS radio users whose radios are turned to the same channel as yours. With the auto-squelch feature, you will not hear anything until the sound quality is reasonably clear.

## **Control & Operation**

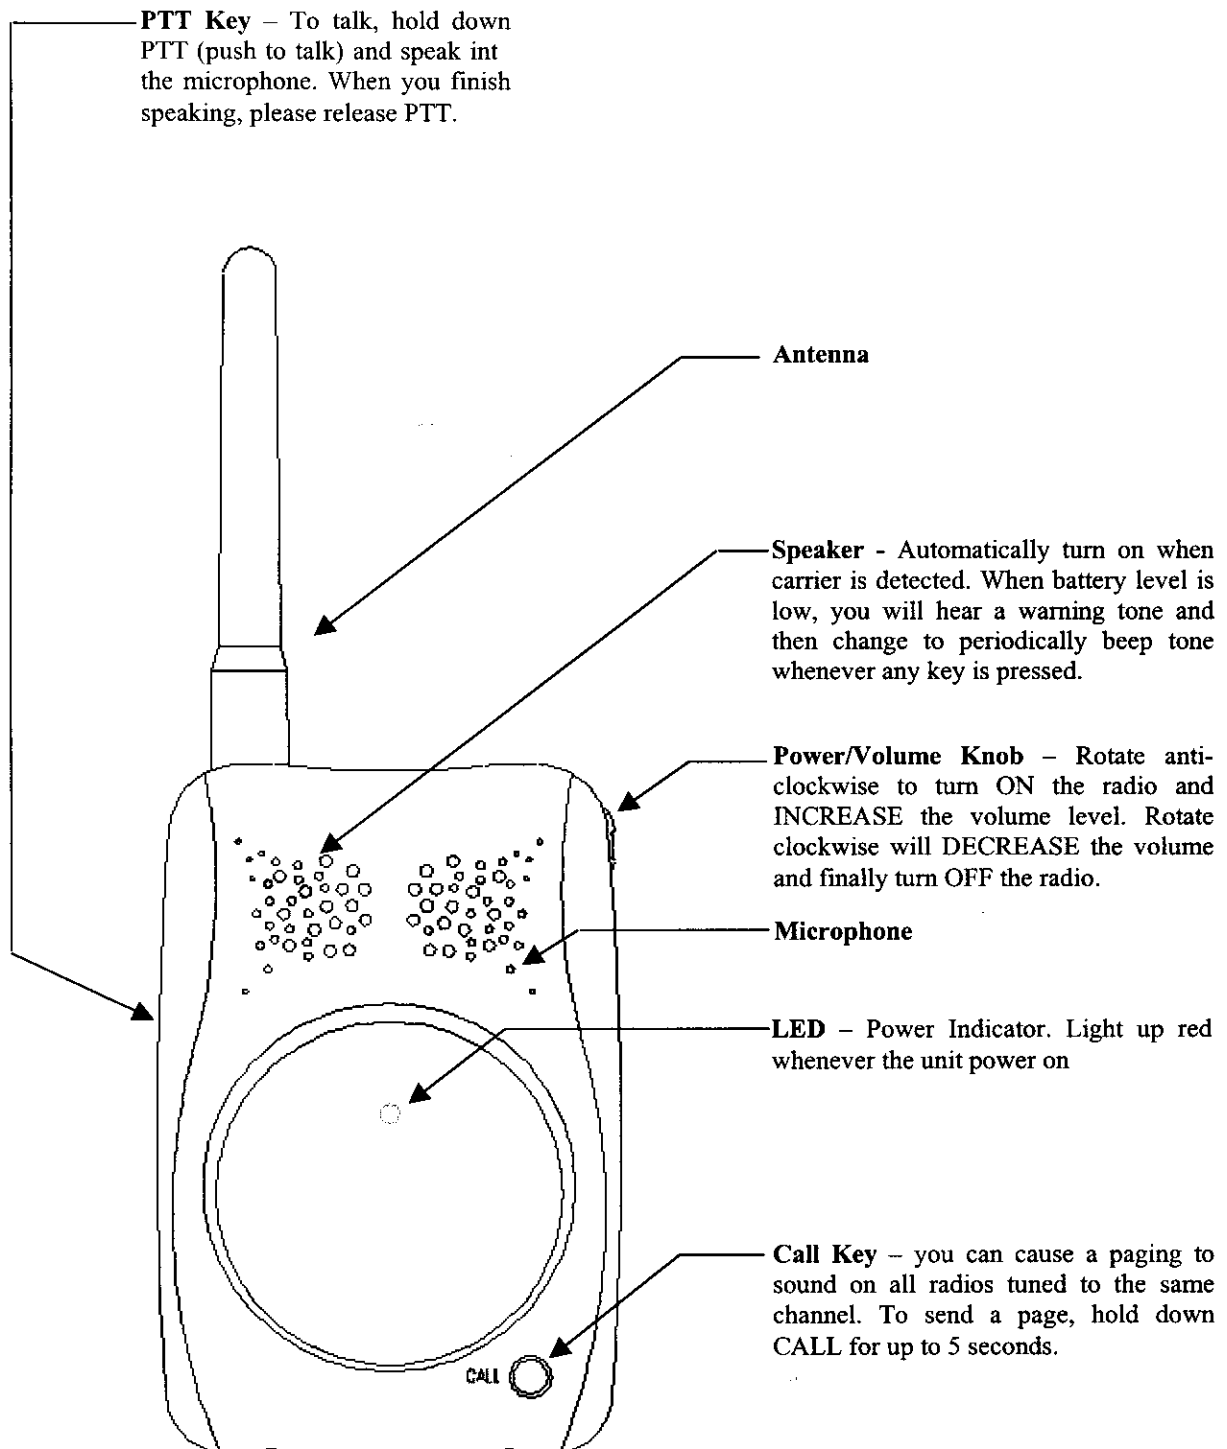

missing four corners  
of cropmarks

## Kid Talker

OWNER'S MANUAL — Please read before using this equipment.

### KID TALKER

Get ready to have lots of fun with your RadioShack walkie talkie! It requires no special license to operate, and you can use it within short distances such as around the house, on campouts and hikes, or anywhere else you want to talk. It has fixed squelch which prevents humming noise while in use. To keep your hands free, you can attach the walkie talkie's belt clip to your belt. This walkie talkie is recommended for children ages 8 and up.

### PREPARATION

You need 3 AAA batteries (not supplied) to power the walkie talkie. For the best performance and longest life, we recommend RadioShack alkaline batteries.

To install batteries in the walkie talkie:

1. Press down on the cover and slide it down to remove it.
2. Insert 3 fresh alkaline or rechargeable batteries in the battery compartment, according to the polarity symbols marked inside.
3. Replace the cover.

If the walkie talkie does not transmit properly or a warning tone sounds for about 5 seconds, replace the batteries.

Note: If no signal is received for about a minute, the walkie talkie turns off to save power.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.


Caution:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries or different types of batteries.
- If you do not plan to use your walkie talkie for a week or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

### USING THE BELT CLIP

To use the supplied belt clip, slide it up on the slots at the back of the radio until it clicks. To remove the belt clip, pull up on the middle tab of the clip and slide it down.

### OPERATION

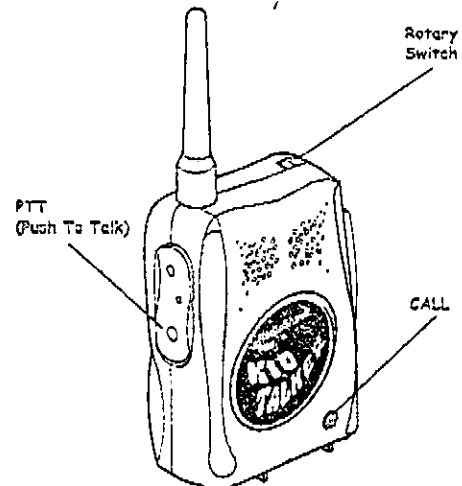

1. To turn on the walkie talkie, turn the rotary switch counterclockwise until it clicks. Ringing tones sound and the power indicator lights.
2. To transmit, hold down PTT (push to talk), and speak into the microphone. Release PTT when you finish talking.
3. Press CALL, to send a page to another walkie talkie with the same channel frequency.
4. Adjust the rotary switch to a comfortable listening level.
5. To turn off the walkie talkie, rotate the rotary switch clockwise until it clicks.

Note: The rubber duck antenna is attached to the walkie talkie. It is not removable. Never try to pull it off.

### CARE AND MAINTENANCE

To enjoy your walkie talkie for a long time:

- Keep the walkie talkie dry. If it gets wet, wipe it dry immediately.
- Use and store the walkie talkie only in normal temperature environments.
- Handle the walkie talkie gently and carefully. Don't drop it.
- Keep the walkie talkie away from dust and dirt.

Long Range FRS Band Communication for Kids 8 and Up!

 **RadioShack.**  
www.radioshack.com

© 2000 RadioShack Corporation. All Rights Reserved.  
RadioShack and RadioShack.com are trademarks  
used by RadioShack Corporation.

page 4

- Wipe the walkie talkie with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the walkie talkie's internal components can cause a malfunction and invalidate its warranty and void your FCC authorization to operate it. If your walkie talkie is not performing as it should, take it to your local RadioShack store for assistance.

### THE FCC WANTS YOU TO KNOW

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Your RadioShack walkie talkie might cause TV or radio interference even when it is operating properly. To determine if your walkie talkie is causing the interference, turn it off. If the interference goes away, the walkie

talkie is causing the interference. Try to eliminate the interference by:

- moving the walkie talkie away from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using the walkie talkie.

**Important:** Do not open your radio to make any internal adjustments. Your radio is set up to transmit a regulated signal on an assigned frequency. It is against the law to alter or adjust the settings inside the radio to exceed those limitations. Any adjustments to your radio must be made by a qualified technician using the proper test equipment.

To be safe:

- Never open your radio's case.
- Never change or replace anything in your radio except the batteries.

#### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as tubes or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

1399