

Parts List

Item	RSU #
Whole Car Assembly	12333696
Front Wheel	12333704
Right Rear Wheel	12333712
Left Rear Wheel	12333720
Chassis And Figure Assembly	12333738
Right Hand Assembly	12333746
Left Hand Assembly	12333753
Left Leg Assembly	12333761
Right Leg Assembly	12333779
Receiver Battery Box Assembly	12333787
Transmitter (27 MHz)	12333795
(49 MHz)	12333845
Transmitter Control Box Assembly	12333803
Rod Antenna	12333811
Transmitter Battery Door	12333829
Owner's Manual	12333837

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack Corporation
Fort Worth, Texas 76102

60-4284
05A01

Printed in Hong Kong

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CARE

Keep the car dry; if it gets wet, wipe it dry immediately. Use and store the car only in normal temperature environments. Handle the car carefully; do not drop it. Keep the car away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the car's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If your car is not performing as it should, take it to your local RadioShack store for assistance.

Spin-out and slide down the tube with extreme sport sonic speed!

OWNER'S MANUAL — Please read before using this equipment.

Razor Blade

Your RadioShack Razor Blade slides around corners on your block or hallways in your home just like an Olympic luger! The driver uses his feet to help him slide into spins and turns his head to watch where he's going. Built to 1/8 scale, your car can reach speeds of up to 450 feet per minute. The car comes in two frequencies (27 MHz and 49 MHz), so you can race with a friend.

THE FCC WANTS YOU TO KNOW

Your car might cause TV or radio interference even when it is operating properly. To determine whether your car is causing the interference, turn off your car. If the interference goes away, your car is causing it. Try to eliminate the interference by:

- moving your car away from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your car.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this product not expressly approved by RadioShack, or operation of this product in any way other than as detailed by the Owner's Manual, could void your authority to operate the product.

INSTALLING BATTERIES

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

If you do not plan to use the car for a week or more, remove the batteries from both the transmitter and the car. Batteries can leak chemicals that can destroy electronic parts.

In the Transmitter

The transmitter requires one 9-volt battery (not supplied). For the best performance and longest life, we recommend a RadioShack alkaline battery.

1. Slide ON/OFF on the transmitter to OFF.

© 2001 RadioShack Corporation. All Rights Reserved. RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

 **RadioShack.**

www.radioshack.com

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

HOWEVER, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

2. Use a Phillips screwdriver to loosen the screw from the battery compartment cover and slide the cover in the direction of the arrow to remove it.
3. Place a battery in the compartment according to the polarity symbols (+ and -) marked inside.
4. Replace the cover and secure it with the screw.

When the transmitter's range decreases, replace its battery.

In The Car

Your car uses 4AA batteries or a 6V rechargeable battery pack (neither supplied, available at your local RadioShack store) for power.

You can install and use the AA batteries while the battery pack is charging.

1. Slide OFF/ON on the bottom of the car to OFF.
2. If you are using AA batteries, place them in the supplied battery box according to the polarity symbols (+ and -) marked inside. Then turn the box over so the batteries face in toward the car and snap it into the battery compartment. Then slide the box in the direction of arrow.

If you are using a 6V rechargeable battery pack, place it in the battery compartment according to the polarity symbols (+ and -) marked inside. Then slide it in the direction of arrow.

Note: Be sure to line up the metal contacts on the battery pack, or battery box, with the contacts inside the compartment.

3. Turn the battery compartment latch to lock the compartment.

DRIVING THE CAR

1. Slide ON/OFF to ON. The top button on the driver's suit lights.
2. Fully extend the antenna on the transmitter and slide OFF/ON on the transmitter to ON. The indicator on the transmitter lights.
3. Use the transmitter's control levers to move and steer the car.

Left Control Lever

- Push forward to move forward
- Pull backward to move back
- Release to stop

Right Control Lever

- Push left to turn left
- Push right to turn right
- Release to go straight

4. When you finish driving the car, slide OFF/ON on the car and the transmitter to OFF.

Wheel Alignment

If the car does not drive in a straight line when you release the right control lever, adjust the wheel alignment control between the front wheels on the bottom of the car.

Turn the control toward L if the car is pulling to the right, or toward R if the car pulling to the left.

Helpful Hints

These hints can help you get the most enjoyment from your car.

- Running your car continuously for long periods generates high heat levels. Heat causes wear and tear on the motor. To help keep heat levels down, when your car's battery pack dies, let the car cool at least 10 minutes before

installing new batteries or a newly charged battery pack.

- If someone uses a CB nearby, it might interfere with control of the car. If this happens, move the car away from the CB.
- You cannot operate your car near devices with transmitters that use the

same frequency as your car (27 MHz or 49 MHz). Check your car's box to see which frequency it uses.

- If the car moves slowly and you just installed a fully charged battery pack, check the wheel mechanisms for lint, thread, hair, or dust.

USER-REPLACEABLE PARTS

You can order these easily replaceable parts through your local RadioShack store. Simply identify the part(s) you need from the exploded view, then find the part number on the parts list.

Exploded View

