

## Mini Transbot

What 's cool! Your RadioShack Mini Transbot have a special transforming stunt, buggy transform to a mini robot ! The Mini Transbot moves forward is a buggy , and automatic transform to a robot reverse spins . The Mini Transbot comes in two frequencies (27 MHz & 49 MHz) so you can operate with a friend. Check your Mini Transbot box to see which frequency the buggy uses.

**NOTE:** You need 2 AA alkaline batteries (not supplied) to power the Mini Transbot and one 9V battery (not supplied) for the transmitter. For the best performance and longest playing life, we recommend RadioShack alkaline batteries. This vehicle is not recommended for children under the age of 4 years. Please read all of the instructions before operating this vehicle.

## INSTALLING BATTERIES

**WARNING:** Dispose of batteries promptly and properly; do not bury or burn them.

### Cautions:

- \*Use only fresh batteries of the required size and recommended type.
- \*Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- \*Never leave dead or weak batteries in the Mini Transbot or the transmitter.
- \*If you will not be using the Mini Transbot for a week or more, remove the batteries from both the transmitter and the buggy. Batteries can leak chemicals that can damage electronic parts.

### In the Transmitter

The transmitter requires one 9-volt battery (not supplied). For the best performance and longest life, we recommend a RadioShack alkaline battery.

1. Press and slide the battery compartment cover off the transmitter.
2. Place a battery in the compartment according to the polarity symbols (+and-) marked inside.
3. Slide the cover back into place. Be sure it snaps shut.

When the transmitter's range decreases, replace its battery.

## In the Mini Transbot

You need two AA batteries (not supplied) to power your Mini Transbot. For the best performance and longest life, we recommend RadioShack alkaline batteries.

1. Slide ON/OFF switch on the back of the Mini Transbot to OFF.
2. Turn the battery compartment cover's latch counterclockwise until it stops, then grasp the ribs on the cover and lift the cover up to remove it.
3. Install the batteries in the compartment as indicated by the polarity symbols (+and-) marked inside.
4. Replace the cover, and then turn the latch clockwise until it stops to secure it.

If the Mini Transbot moves slowly or not at all, replace the Mini Transbot's batteries.

## DRIVING THE MINI TRANSBOT

Warning: Never play with the Mini Transbot in the street.

1. Slide ON/OFF switch on the rear side of the Mini Transbot to ON.
1. The Mini Transbot's transmitter has two control buttons. Hold down the right button to transform the robot to car and then the car moves forward in a straight line. Hold down the left button to transform the car to robot and then the robot spins in a circle. The Mini Transbot stops when you release the button.
2. When you finish driving the Mini Transbot, slide ON/OFF switch to OFF.

## HELPFUL HINTS

Follow these hints to get the most enjoyment from the Mini Transbot.

The Mini Transbot running on flat wooden or cement floor will have better performance.

If the Mini Transbot's motor runs but the Mini Transbot does not respond to the transmitter, move the transmitter closer to the Mini Transbot and try again.

Running your Mini Transbot continuously for long periods cause wear and tear on the motor. To keep heat levels down, when your Mini Transbot 's batteries run down, let the Mini Transbot cool for at least 10 minutes before installing new batteries.

If the Mini Transbot moves slowly and you have installed fresh batteries, check the Mini Transbot mechanism and remove any lint, thread, hair, or dust you see.

If someone uses a CB nearby, it might interfere with control of the Mini Transbot. If this happens, move the Mini Transbot and its transmitter away from the CB.

You cannot operate your Mini Transbot near devices with transmitters that use the same frequency (27 or 49 MHz). Check the Mini Transbot 's box to see which frequency of Mini Transbot you use.

## CARE

The following suggestions will help you care for your Mini Transbot so you can enjoy it for years.

- Do not expose the Mini Transbot or its transmitter to temperature extremes, and do not store them in direct sunlight or near a heat source.
- Wipe the Mini Transbot and transmitter with a damp cloth occasionally to keep them looking new. Do not use harsh chemicals to clean them.
- Do not drive the Mini Transbot through puddles or mud, on a wet floor, or in sand, rain, or snow. These can damage it.
- Do not leave the Mini Transbot or its transmitter outside overnight. Night dampness can damage their electronic circuits.
- To protect the Mini Transbot's mechanisms from lint and hair, do not drive the Mini Transbot on carpet.

## THE FCC WANTS YOU TO KNOW

Your Mini Transbot or its transmitter might cause TV or radio interference even when it is operating properly. To determine whether your Mini Transbot or transmitter is causing the interference, release the transmitter's control buttons and turn off your Mini Transbot. If the interference goes away, your Mini Transbot or transmitter is causing it. Try to eliminate the interference by:

- \*Moving your Mini Transbot and its transmitter away from the TV or radio
- \*Contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Mini Transbot and transmitter.

Changes or modifications to this product not expressly approved by RadioShack, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product.

### Limited Ninety-Day Warranty

RadioShack warrants this product against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store.

RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products, on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of

product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights, which vary, from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

03/02

2002 Tandy Corporation.

All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.