

Limited Ninety-Day Warranty

RadioShack warrants this product against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store.

RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products, on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights, which vary, from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

03/02

©2002 Tandy Corporation.

All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

Cat. No. 60-4314

Load Shifter

Your RadioShack Load Shifter is transformable to 2 different style Heavy Duty Truck!

You can operate in either digger mode or dipper mode to complete your duty. In the transforming action, you can see the tank and the exhaust pipe move up and down, and the driver chamber turn from front side to back side.

The moving tank can pick up or drop down specified light weight stuff!

Your Load Shifter transmitter have a visual screen. The operator and your Load Shifter will moving on the screen and you can listen to what he is saying!

Built to 1/20 scale, your Load Shifter can reach speeds up to 180 feet per minute. The Load Shifter comes in two frequencies (27 MHz & 49 MHz) so you can operate with a friend. Check your Load Shifter box to see which frequency the truck uses.

NOTE: You need 4 AA alkaline batteries (not supplied) to power the Load Shifter and 4 AA alkaline batteries (not supplied) for the transmitter. For the best performance and longest playing life, we recommend RadioShack alkaline batteries.

The Load Shifter is perfect for beginner play, ages 4 & ups.

THE FCC WANTS YOU TO KNOW

Your Load Shifter or its transmitter might cause TV or radio interference even when it is operating properly. To determine whether your Load Shifter or its transmitter is causing the interference, release the transmitter's buttons and turn off your Load Shifter. If the interference goes away, your Load Shifter or its transmitter is causing it. Try to eliminate the interference by:

- *Moving your Load Shifter and its transmitter away from the TV or radio
- *Contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your

Load Shifter and transmitter.

Changes or modifications to this product not expressly approved by RadioShack, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product.

INSTALLING BATTERIES

WARNING: Dispose of batteries promptly and properly; do not bury or burn them.

Cautions:

- *Use only fresh batteries of the required size and recommended type.
- *Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- *Never leave dead or weak batteries in the Load Shifter or the transmitter.
- *If you will not be using the Load Shifter for a week or more, remove the batteries from both the transmitter and the truck. Batteries can leak chemicals that can damage electronic parts.

In the Transmitter

The transmitter requires 4 AA alkaline batteries (not supplied). For the best performance and longest life, we recommend a RadioShack alkaline battery.

1. Slide ON/OFF switch on the transmitter to OFF
2. Slide the battery compartment in the direction of the arrow to remove it.
3. Put the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
4. Replace the cover. Be sure it snaps in.

When the transmitter's range decreases, replace its battery.

In the Load Shifter

Your Load Shifter requires 4 AA alkaline batteries for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

1. Slide ON/OFF switch on the Load Shifter to OFF
2. Press the seat-plate and pull it up to remove the seat.
3. Turn the battery compartment cover's latch in the direction of the arrows until they stop, then lift up the cover and remove it.
4. Install the batteries in the compartment as indicated by the polarity symbols (+ and -) marked outside the compartment.
5. Close the battery compartment cover and turn the latches to secure the battery compartment.

NOTES:

If the Load Shifter moves slowly or not at all, replace the Load Shifter 's batteries.

DRIVING THE LOAD SHIFTER

Warning: Never play with the Load Shifter in the street.

Caution: When the Load Shifter goes outside the transmitter's control range, it stops. Hold the transmitter as high as possible with the antenna vertical to try to re-establish contact. If you cannot, you must move closer to the Load Shifter to control it again.

1. Slide ON/OFF switch on the bottom of the Load Shifter to ON.
 2. Slide ON/OFF switch on the transmitter to ON.
 3. Use the transmitter's control buttons to control the movement and the transforming of the Load Shifter .
 4. Left Control Buttons for movement (Dipper mode)
 - Press front button to move forward
 - Press back button to move backward and make it turn
 - Release to stop
- Right Control Buttons for transforming
- Press left button to change digger to dipper
 - Press right button to change dipper to digger
 - Release to stop transform
5. When you finish driving the Load Shifter, slide all ON/OFF switch to OFF.

PLAYING THE TRANSMITTER

The visual screen cover can move from left to right , you can find a operator on the left side and your Load Shifter on the right side.

1. Slide ON/OFF switch on the transmitter to ON.
2. Press either the left top button or the right top button can make the visual screen picture moving with human voice messages and engine sound.
3. The 4 messages as below:
 - “OK Guys...Dump that load”
 - “ Lets go for a pick up”
 - “Steady !..move it across the site”
 - “We're done for the day...good job!”

CARE

The following suggestion will help you to take care of the Load Shifter so you can enjoy it for years.

- *Do not drive the Load Shifter through puddles or mud, on a wet floor, or in sand, rain or snow. These may damage it.
- *Do not expose the Load Shifter or transmitter to temperature extremes, and do not store them in direct sunlight or near a heat source.
- *Do not leave the Load Shifter or transmitter outside overnight. Night dampness can damage their electronic circuits.
- *To protect the Load Shifter's mechanisms from lint and hair, do not drive the Load Shifter on carpet.
- *Wipe the car and transmitter's internal components can cause a malfunction and might invalidate the Load Shifter's warranty and void your FCC authorization to operate it. If your Load Shifter is not performing, as it should, take it and the transmitter to your local RadioShack store for assistance.

HELPFUL HINTS

Follow these hints to get the most enjoyment from the Load Shifter.

Running your Load Shifter continuously for long periods cause wear and tear on the motor. To keep heat levels down, when your Load Shifter's batteries run down, let the

Load Shifter cool at least 10 minutes before installing new batteries.

If the Load Shifter moves slowly and you have installed fresh batteries, check the Load Shifter mechanism and remove any lint, thread, hair, or dust you see.

If someone uses a CB nearby, it might interfere with control of the Load Shifter. If this happens, move the Load Shifter and its transmitter away from the CB.

You cannot operate your Load Shifter near devices with transmitters that use the same frequency (27 or 49 MHz). Check the Load Shifter's box to see which frequency of Load Shifter you use.

USER-REPLACEABLE PARTS

You can order replacement parts for your car at your local RadioShack store.