

## **Contemporary - Indoor HDTV Antenna**

*Thank you for purchasing your HDTV/FM HD Radio Antenna from **RadioShack**. Please read this user's guide before installing, setting up, and using your new antenna.*



## **39-inch, telescoping antennas**

Adjust to get the best VHF and FM reception.



## **12-Position Fine-Tuning Control**

Rotate for better UHF quality.

# Check package contents

- HDTV/FM HD Radio Antenna
- User's Guide
- Quick Start
- Coaxial Cable

## ① Install your antenna

1. Connect the supplied 75-ohm coaxial cable to your TV's antenna input terminal or your radio's FM antenna input terminal.



2. Place your antenna on top of your TV. Make sure the front of the antenna faces the general direction of the nearest television or radio station's broadcasting antenna.



### **Notes:**

- Visit [www.AntennaWeb.org](http://www.AntennaWeb.org) to find the location of antennas in your area.
- To get the best performance from your antenna, select an indoor flat surface as high as possible.
- Make sure the antenna is not placed near metal objects such as cabinets, shelves, refrigerators, a metal door or wall, or a water pipe behind a wall. Metal objects can greatly reduce the antenna's ability to receive signals.

## ② Use your antenna

1. Fully extend the telescoping antenna elements.
2. For VHF TV Channels 2-13 and FM HD radio stations, adjust the rotary knob until you get the best picture and sound.

For UHF TV channels 14-69, rotate the base of the antenna until you get the best picture and sound.



### **Notes:**

- *Higher broadcast frequencies are noticeably affected by obstructions.*
- *In weak-signal areas, you might get better reception by doing the following:*

*For Channels 7-13 and FM HD radio, shorten the telescoping elements slightly.*

*For all other VHF channels, adjust the angle of the telescoping elements.*



- *If your TV has screw terminals for VHF/UHF connection, connect a 75 to 300-ohm transformer (not supplied) between the coaxial cable and the VHF/UHF terminals.*
- *If your TV has a 75-ohm VHF connector and a 300 ohm UHF connector, connect a signal splitter (not supplied) between the coaxial cable and the TV's VHF/UHF connector.*

# Specifications


Reception ..... FM, VHF, and UHF  
Operating Bands ..... 88-108 MHz, 54-806 MHz  
Output Impedance ..... 75 ohms  
Dimensions (HWD) ..... 9.5×9.13×4.5 in (24×23×11 cm)  
Weight ..... 1.5 lbs. (0.64 kg)

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

[www.RadioShack.com](http://www.RadioShack.com)

	<b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b>		<b>WARNING:</b> To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture
--	---	---	--

**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

	<b>The lightning symbol is intended to alert you to the presence of uninsulated, dangerous voltage within this product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.</b>
---	--

	<b>The exclamation symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.</b>
---	---



Protect the environment by recycling used electronics. Go to [E-CyclingCentral.com](http://E-CyclingCentral.com) to find a recycling location near you.

# Limited Warranty

**RadioShack** warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a **RadioShack**-owned store or an authorized **RadioShack** franchisee or dealer. **RADIOSHACK** MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store in the U.S. **RadioShack** will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

**RADIOSHACK** EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, **RADIOSHACK** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF **RADIOSHACK** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact **RadioShack** at:

**RadioShack** Customer Relations

300 RadioShack Circle, Fort Worth, TX 76102

04/08

©2009. **RadioShack** Corporation.

All rights reserved. **RadioShack** and **RadioShack.com** are trademarks used by **RadioShack** Corporation.

AO0328AAA1

Printed 09A09  
in China 15-246