

## RL036T2400MHZ User Manual

### Turn on transmitter's power switch

1. Pull the throttle stick down to the lowest position
2. Draw out the antenna on the transmitter
3. Turn on the power for model helicopter, press chip touchable switch for seconds until receiver LED starts glittering. While LED light comes to stable state, code matching function is OK.
4. Check if Gyro indicator light could be powered normally or not

If indicator light glitters slowly and continuously, it means the battery in model helicopter is at low voltage.

If indicator light glitters fast, it means model helicopter is on preparing status.

When indicator light stops glittering, it means the model helicopter has been ready for flight.

### Function definiens for Joy sticks

Throttle channel--- control helicopter's ascending and descending

Rudder channel--- control helicopter's turn around

Elevator channel--- control helicopter's moving forward and backward

Aileron channel--- control helicopter's moving left and right.

Pls do turn off power on model helicopter before turn off the transmitter while ending the flight.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.