

intelliroute® TND™ 710

User's Guide



Version 2.0.1

Trademarks

Rand McNally and IntelliRoute are registered trademarks and TND is a trademark of Rand McNally.

NAVTEQ ON BOARD is a trademark of NAVTEQ.

The Trucker's Friend and National Truck Stop Directory are registered trademarks of TR Information Publishers.

Truck Down is a registered trademark of Truck Down, Inc.

InfoGation is a registered trademark of InfoGation Corporation.

Other products and companies mentioned herein may be trademarks of their respective owners.

© 2009-2011 Rand McNally

All rights reserved.

Rand McNally follows a continuous improvement process and reserves the right to provide enhancements that may not be reflected in the pictures and specifications in this manual.

The information contained herein may be changed at any time without prior notification. Neither this manual nor any parts thereof may be reproduced for any purpose whatsoever without the express written consent of Rand McNally, Inc, nor may it be transmitted in any form either electronically or mechanically, including photocopying and recording. All technical specifications, drawings, etc. are subject to copyright law.

FCC Notice

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and may cause harmful interference to radio communications if not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet that is on a different circuit from the GPS unit.
- Consult the dealer or an experienced radio/TV technician for help.

Contents

Trademarks	ii
FCC Notice	iii
Welcome	
Your IntelliRoute® TND™ 710	1
About GPS	2
Customer Support	3
Getting Started	
What's Included	4
Important Safety Information	5
Navigation Safety	5
Installation Safety	6
Device Safety	7
Battery Power Light	8
Charge the Battery	9
Charge with the Wall Charger	9
Charge with the Vehicle Charger	9
Install the Cradle and Mount	10
Power the Device	11
Turn the Device On	11
Turn the Device Off	11
Enter or Return from Standby (Sleep) Mode	11
Reset the Device	12

Basic Operation

Start the IntelliRoute® TND™	13
The Main Menu	14
Tapping the Screen	15
Using Keyboards	16
Special Keys.....	16
Basic Settings	17
Select Driver Status	17
Select Load Option	17
Select a Language	18
Select a Keyboard Type	18
Volume Settings	19
Set Truck Information	20
Set ETA Adjustment	20
Select Truck or Car Mode	21
Set Truck Yard Time Zone	21
Set to Calculate Shortest Route or Fastest Route	22
Select a Voice for Spoken Instructions	22
Select a Vehicle Icon	23
Set Warnings	24

Destinations

Ways to Search for Locations	25
Location Searches	26
Destination Selection Window	26

Destination Search Auto-Complete Feature	27	In a City	48
About City Street Names	28	Along the Route	49
Expand Search for Street Names	28	Near End of Day Location	50
Select a City	29	Select a Custom POI Location Nearby	51
Find Addresses	30	Find a Location by Tapping on the Map	52
Location Selection Window	30	Tap on the Map and Avoid the Location	52
Search for an Address	31	Tap on the Map and Route to the Location	53
Search Near a City Center	32	Rate a Truck-Related Point of Interest	54
Search For an Intersection	33	Manage Destinations	55
Search by ZIP Code for an Address	34	Set Your Current Location as Home Using GPS	55
Search by ZIP Code for an Intersection	35	Search for a Location and Set as Home	56
Search by Latitude/Longitude	36	Delete Your Home Address	56
Point of Interest Windows	37	Address Book	57
Points of Interest Selection Window	37	Save a Location in the Address Book	57
Points of Interest (POI) Category Window	38	Sort Address Book Entries by Name or Distance	58
Points of Interest (POIs) Searches	39	Select a Location from the Address Book	59
Select a Quick Stop POI	40	Create an Address Book Group	60
Select a Custom POI Location	41	Add an Address to a Group	61
Select a Truck Related Point of Interest	42	Remove an Address From a Group	62
Select and Filter Travel Center Amenities	43	Select a Location From a Group	63
Select and Filter Truck Services	44	History List	64
Select a Consumer Point of Interest By Category	45	Select a Location from the History List	64
Select a Consumer Point of Interest by Name	46	 	
Search for Nearby Points of Interest (POIs)	47	Multi-Stop Routes	
Near the Current Vehicle Location	47	Create a Multi-Stop Route	65

Add Locations to a Multi-Stop Route	66	Virtual Dashboard	85
Remove a Stop from a Route	67	Show/Hide the Virtual Dashboard	86
Select and Run a Saved Route	68	Gather Trip Information	86
Delete a Route	69	Automatically Reset Trip Information	87
Optimize Routes	70	Detours	88
Optimize a Route Manually	70	Detour Around Part of the Route	88
Optimize a Route Automatically	71	Detour Around a Specific Roadway	89
 		Detour Using the Detail View Map Display Option	90
Destination Confirmation Windows		Detour Using the Highway View Map Display Option ..	90
Address Confirmation Window	72	Cancel a Route	91
Consumer Point of Interest Confirmation Window	73	 	
Truck-Related Point of Interest Confirmation Window	74	Traffic	
Address Book Confirmation Window	75	Traffic Window	92
 		Access the Traffic Window.....	92
Maps		Predicted Traffic	93
Route Map Window	76	View Predicted Traffic Information	93
Slide-Out List	78	View Real-Time Traffic	94
Detail View	78	 	
Highway View	79	Truck Tools	
Route Summary	80	Truck Tools Window	95
Summary Map View	81	Timers and Logs	96
Select a Route Display Option	82	View Timers and Odometer Readings	96
Current Road Information	83	Change or Reset a Timer	97
View Current Road Information	83	View Driver Logs	98
Junction View	84	Delete a Driver Log	99
		Set Warnings	100

 
Calculate a Mileage and Driving Time	101
View Rand MCRA Atlas Information	102
Send a Message to Rand McNally	103
Send a Message About Your Current Location	103
Send a Message About a Different Location	104
Send a Message About a Location on the Map	105
Use the Unit Converter	106
Use the Calculator	107
Use the Calendar	107
Use the NotePad	108
Create a Note	108
Edit an Existing Note	108
Delete a Note	108
Customize	
Truck Information	109
Vehicle Options (Truck or Car)	110
Route Options	112
Device Options	114
Warning Options	117
Custom POI Locations	
Custom POI Information	119
Sample Custom POI Location File	120
Using Commas and Spaces	120
Create a Custom POI Location File	121

Add a Custom POI Location Method 1 (Latitude/Longitude)	121
Add a Custom POI Location Method 2 (Street Address)	122
Add a Custom POI Location Method 3 (Full Information)	123
Update the Custom POI Location File.....	124
Delete Custom POI Locations	124
Troubleshooting	124
TND Dock	
Install TND Dock Software	125
TND Dock Main Window	126
Sign Up for Road Construction Updates.....	127
Go to The Rand McNally Consumer Website.....	128
Check for IntelliRoute TND Updates.....	129
View IntelliRoute TND Information	130
Backup TND Information	131
Restore TND Information	132
View Manual	133
Tell Rand McNally	134
Send Custom Locations File to Your TND.....	135
Go to the Rand McNally Commercial Transportation Website	136
Export State Mileage Breakdown File	137

Index

Welcome

Your IntelliRoute® TND™ 710

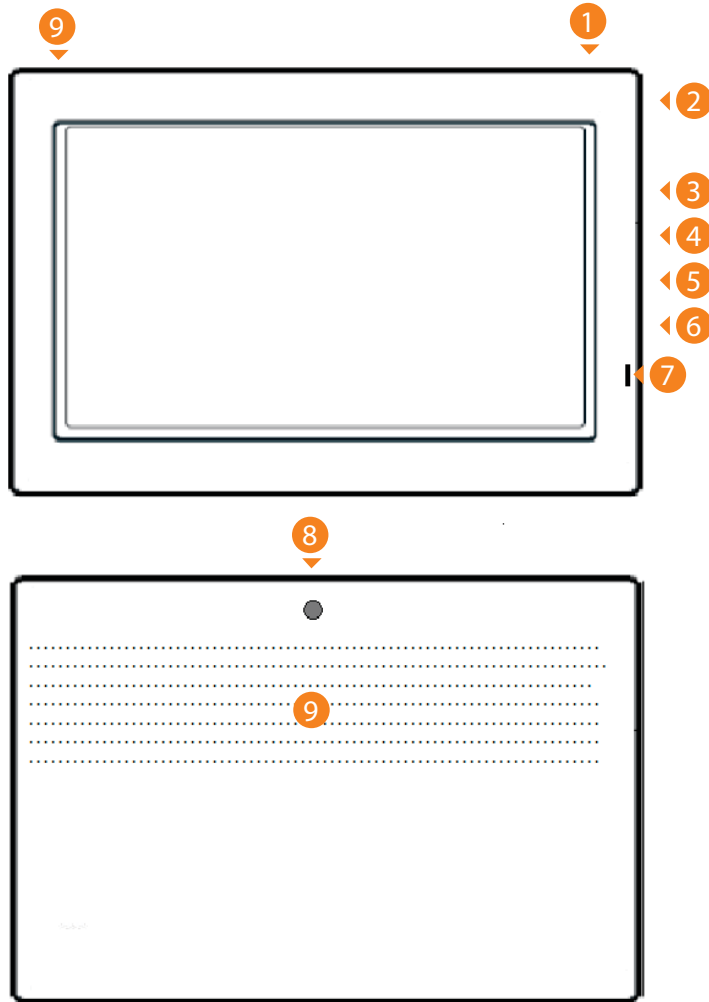

- 1 Power Key**
Turns the device On, Off, and used to enter/return from Standby mode.
- 2 Stylus (in cradle)**
Use the stylus to select options on the touch screen.
- 3 Micro SD Card Slot**
Provides additional storage.
- 4 Mini-USB Port**
Connects to a power source (computer, car charger, or wall charger). Also used for updates using TND Dock .
- 5 Audio Output Socket**
Connect to external speaker (not provided).
- 6 Reset Button**
Restores factory settings and restarts the device.
Note: Use this button only when instructed to do so by Rand McNally Customer Support Personnel.
- 7 Battery Power Indicator**
Shows charging status.
- 8 External GPS Port**
Used with an optional GPS antenna in cases where clear view of the sky is blocked by metal objects or metalized windshields. (Antenna not provided.)
- 9 Speaker**
Issues spoken road instructions and maneuvers.

About GPS

The Global Positioning System (GPS) is a constellation of satellites that a GPS receiver uses to calculate geographical positions. To determine a position, data from at least three satellites is required. To determine altitude, the data from four or more satellites is required. Accuracy of the positioning varies from 10 feet to several hundred feet, depending on vehicle placement and the surrounding environment.

Geographical terrain (such as mountains), man-made structures (such as highway overpasses, bridges, and tall buildings), as well as weather can interfere with the GPS signal. For best GPS reception, position the IntelliRoute® TND™ 710 and mount with a clear line of sight to the sky.

Some vehicles may have a limited view of the sky due to metal sun shields or a metallized windshield coating. If your unit does not appear to receive signals well inside your vehicle but works well outside, contact Rand McNally for an available external antennae.

Map data used by the IntelliRoute® TND™ 710 includes the geographical coordinates for address locations and points of interest (POIs). With GPS reception, your device calculates a route to your selected location.

Customer Support

Call toll-free:
800-333-0136

Service hours:
Monday through Friday, 8 a.m. to 5 p.m. CT
(except official holidays)

E-mail:
TNDsupport@randmcnally.com

Getting Started

What's Included

Your IntelliRoute® TND™ 710 includes:

- IntelliRoute® TND™ 710 navigation device
- Mount and cradle
- 12V truck charger with extended length cable
- Home charger (100/240V)
- USB cable
- Extra fuse
- Quick Start Guide

Important Safety Information



Navigation Safety

Caution: Use this navigation device at your own risk.

Caution: Use this navigation device only when it is safe to do so.

Caution: Look at the display only when it is safe to do so.

Caution: Traffic regulations always have priority over any instructions from the navigation system.

Caution: Follow navigation system instructions only when local regulations and road traffic allow you do so.

Caution: Make sure that the mount is securely mounted and properly adjusted before each trip.



Note

Note: If you do not understand the spoken instructions, or are unsure of what to do next, refer to the Navigation map on your navigation device.



Installation Safety

- Caution: Make sure that the mount does not impair the driver's visibility.
- Caution: Do not attach the mount within the airbag deployment zone.
- Caution: When installing the mount, make sure that it does not pose a risk in the event of an accident.
- Caution: Do not run cables directly next to safety-relevant devices and power supplies.
- Caution: After installation, check all safety-relevant equipment in the car.
- Caution: Connect the wall charger to a 120V or 240V outlet only.
- Caution: Connect the vehicle charger to a 12V outlet only.



Device Safety

Caution: Do not use sharp-edged objects on the device touch screen.

Caution: The device is not waterproof and is not protected against water damage.

Caution: Protect the device from extreme temperatures. Operating temperature for the device is between 32 degrees F and 120 degrees F.

Caution: When parking the vehicle for an extended time, to avoid battery drain, hold down the power button for 10 seconds to power off the device. For shorter periods of inactivity, see "Enter or Return from Standby (Sleep) Mode" on page 11.

Caution: Do not open the navigation device casing.

Caution: Do not attempt to replace the battery. For problems with the battery, contact Rand McNally Customer Support.

Caution: Always follow local regulations when disposing of this device.



Note

 
Note: Make sure that there are no kinks in the cable and that it will not be damaged by any sharp objects.

Note: Use only a moist cloth to clean the navigation device.

Note: Do not pull the cable to unplug the unit.

Battery Power Light

When the device is charging, the power light on the front of the device displays the status of the built-in battery:

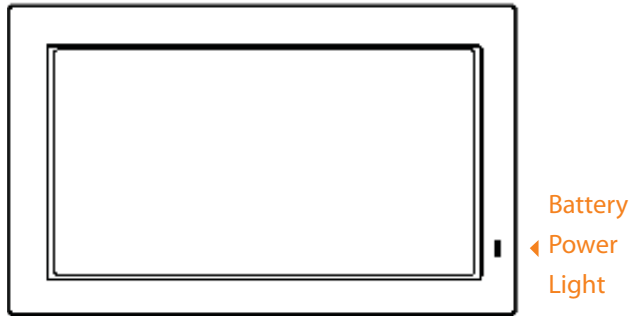

No Light Device is running on the battery. Battery power is sufficient.

Green Device is plugged in and the battery is fully charged.

Red Device is plugged in and the battery is charging.

Note: The red battery light may display when a fully charged device is plugged into the charger. This is normal behavior.

Charge the Battery

 
Note: The IntelliRoute TND 710 requires two amps to charge. Third party chargers (such as for cell phones or other devices) that typically supply only one amp will not charge your device.

First Time Use

To maximize battery life, plug in the IntelliRoute® TND™ 710 for the first two (2) hours of use. Use the:

- Home charger to power the device from a wall outlet, or
- Vehicle charger to power the device from the battery.


Charge with the Wall Charger

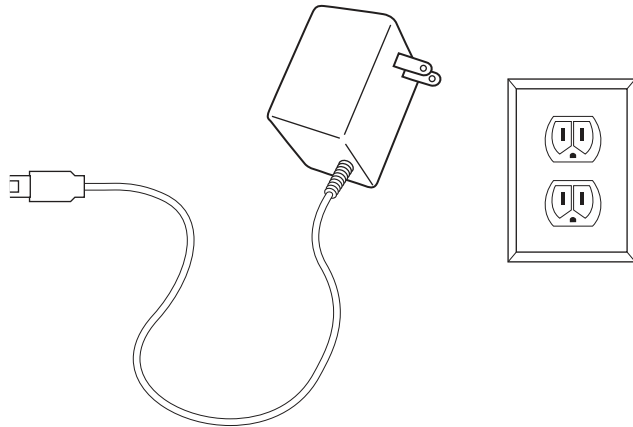

Charge with the Wall Charger

1. Plug the mini-USB socket into the port on the side of the device.
2. Plug the wall charger into a wall socket.

 Charge with the Vehicle Charger

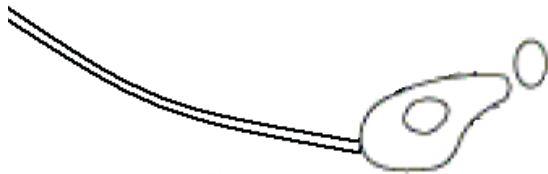

Charge with the Vehicle Charger

1. Plug the mini-USB socket into the port on the side of the device
2. Plug the vehicle charger into the vehicle power outlet or cigarette lighter.
3. The vehicle may need to be on for the device to charge.

Install the Cradle and Mount

Select an area with a line of sight to the sky and GPS satellites to ensure reliable GPS information.

Note: Obey all local regulations governing the placement of the mount.

 
Note: Do not place the mount in an airbag deployment area.

1. Clean and dry the mounting area.
2. Remove the suction cup protective film.
3. Adjust the angle of the mount using the thumbscrew and slide the mount onto the cradle.
4. Pull the suction cup lever up to release suction.
5. Place and hold the mount suction cup against the mounting surface.
6. Press the suction cup lever down until it snaps into place.
7. Angle the bottom of the device into the cradle and align the two slots on the bottom of the device into the two projections on the cradle.
8. Press the top of the device towards the cradle until you hear the upper clip latch into place.
9. Plug the power cord into the device and the vehicle's 12 volt power source.
10. Adjust the navigation device so that it can be easily seen and does not block the driver's line of sight.



Power the Device

Note: To maximize battery life, plug in the IntelliRoute® TND™ 710 for the first two (2) hours of use. See “First Time Use” on page 9.

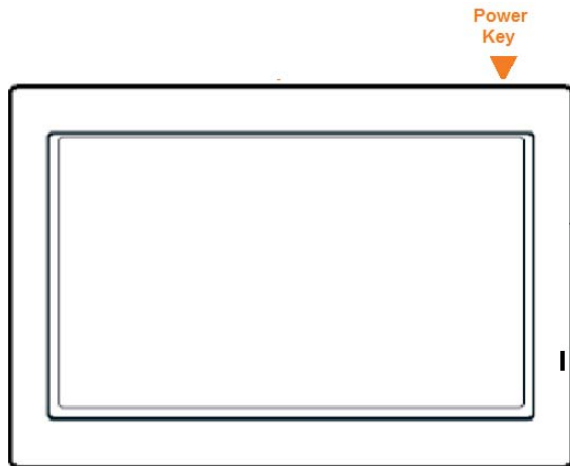

Turn the Device On

- Press and hold the **Power Key** for two (2) seconds, then release. (After 5-10 seconds, the Rand McNally splash window displays as the device powers on.)

Turn the Device Off

- Press and hold the **Power Key** for five (5) seconds, then release. A message displays indicating that the device is powering off.

Enter or Return from Standby (Sleep) Mode

Note: Standby mode is not available with all models.

- Press and release the **Power key**.

Note: The device performs a status check when returning from Standby mode. The IntelliRoute TND 710 restarts if the status check determines it is necessary to do so.

Reset the Device

Note: This feature is not available on all models.

Resetting the device restores some settings back to their original settings and restarts the device.

When you reset the device, your current route information is lost. Address Book entries, trips, settings, ratings, and messages to Rand McNally are not affected.

 
- Use a paper clip to press the reset button located on the side of the device case.

Basic Operation


Install TND Dock Window



Warning and Legal Consent Window

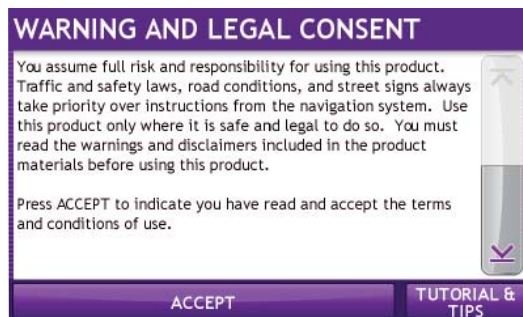

Warning and Legal Consent Window (Mid Route)

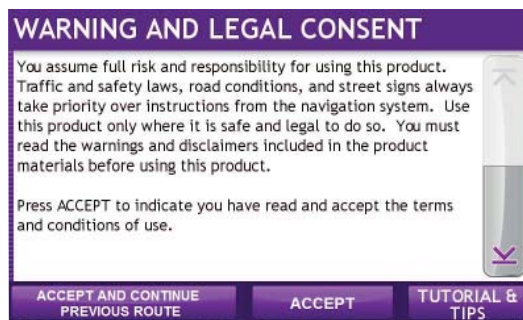

Start the IntelliRoute® TND™

 
1. Press and hold the device **Power Key** for two (2) seconds.
(Device powers on in 5 seconds.)
2. On first use and occasionally on subsequent use, the Install TND Dock Window displays.
3. Tap **OK**.
The Warning and Legal Consent Window displays.
4. To view Frequently Asked Questions (FAQs), tips, or a short tutorial on device use, tap **Tutorial & Tips**.
5. Tap **Accept** or if you turned the device off while on a route, tap **Accept and Continue Previous Route**.

The Main Menu displays.



The Main Menu

Different buttons display on the Main Menu, depending on whether the vehicle type is set to Truck or Car. See “Select Truck or Car Mode” on page 21.

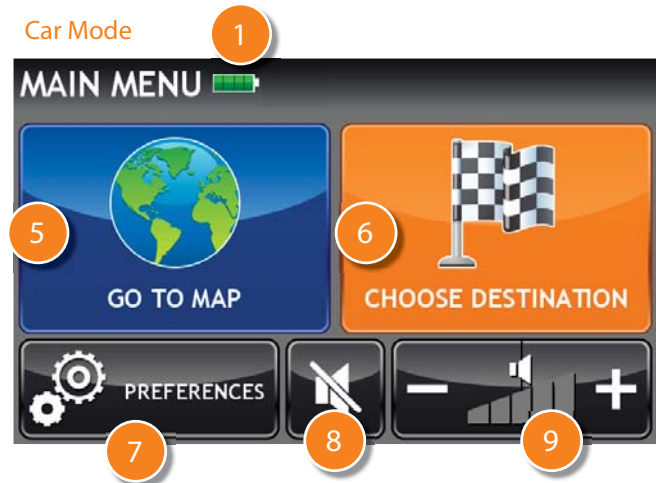

1 Battery Power

Icons shown in this area indicate battery power status.



When on battery, indicates battery power is sufficient.



When on battery, indicates battery power is low.

2 Load Option

Select the trailer load option.

Note: Not Available in Car mode.

Note: Does not display if load option is set to Always Loaded. (See “Select Load Option” on page 17 for more information.)

3 Driver Status

Select driver status.

Note: Not available in Car mode.

4 Truck Tools

Select to enter truck information, access other tools (such as the Unit Converter, Calculator), or to set warnings.

Note: Not available in Car mode.

5 Go To Map

Tap to view location on the map.

6 Choose Destination

Tap to select an address or point of interest (POI).

7 Preferences

Tap to set device or routing options.

8 Mute/Unmute the Speaker

Tap to mute or unmute spoken instructions.

9 Set Volume Louder or Softer

Tap to increase or decrease spoken instructions volume.

Tapping the Screen

You can tap many areas on the IntelliRoute TND 710 screen to select options or view more information.

These include:

Buttons

On many windows tapping a button selects an option or goes to another page. An example would be **Choose Destination** on the Main Menu. Tap this button to display the Destination Selection Window and search for locations.



Fields

On some windows, fields can be tapped to view more information. An example would be the Road Information field on the Route Map Window. Tap this field to view information on the current road.



Tabs

Some windows have tabs across the top of the window indicating specific categories. For example, Preferences has three tabs, Truck/Car, Route, and Device. Tap the **Device** tab to display available device settings.

 
Page Up/Page Down

Some tabs have more than one page of options. On these windows, the Page Up  and Page Down  buttons can be used to move between pages.

Increase/Decrease

Some options can be set to specific values. On these windows, tap on increase  and decrease  buttons to change settings.


Fields

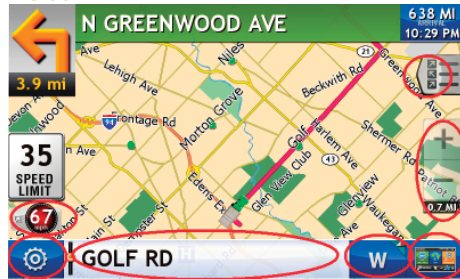


Tabs



 Page Up/Page Down Buttons

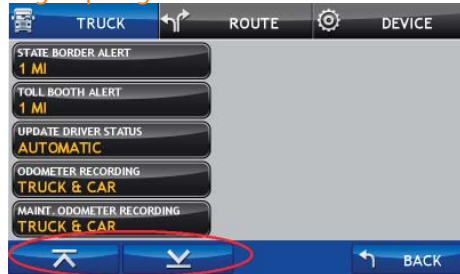

Increase/Decrease Buttons

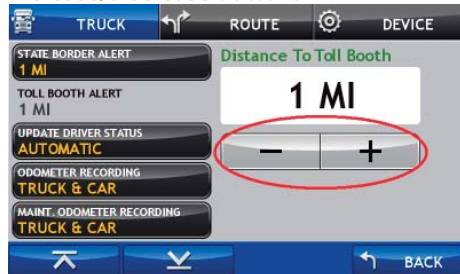 

Using Keyboards

Software keyboards are used when entering text. See “Select a Keyboard Type” on page 18

ABC Keyboard



QWERTY Keyboard



Special Keys



Tap to search for a location by ZIP code.



Return to previous window.



Tap to view a longer list of names matching the typed characters.



Tap to view a list of previously selected locations.



Add a space.



Delete last character and move back one space.

Basic Settings

 
 
Select Driver Status

Note: Only available in Truck mode. See “Select Truck or Car Mode” on page 21.

From the Main Menu:

- Tap on the driver status.

Note: An Automatic Mode setting lets you specify if the driver timers can be set automatically based on vehicle movement. (See page 110). However, when the driver status is set to Automatic mode, tapping a driver status buttons on the Main Menu temporarily overrides the automatic setting.

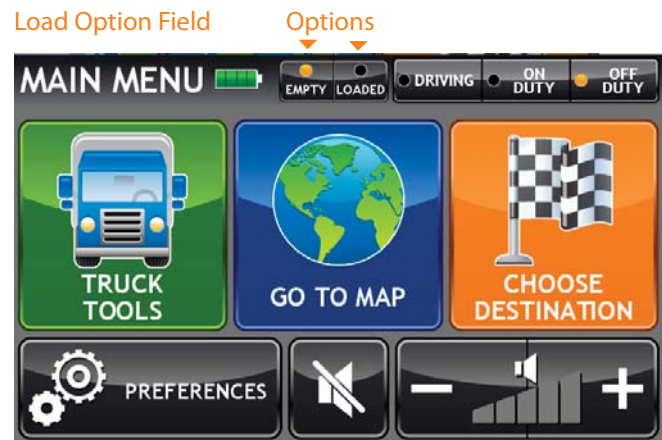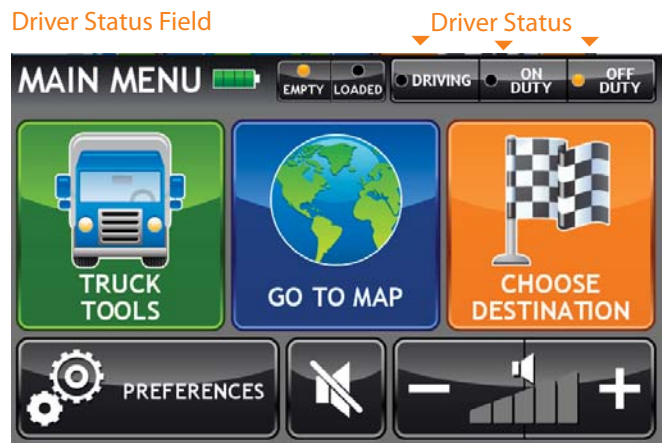

Select Load Option

Note: Only available in Truck mode. See “Select Truck or Car Mode” on page 21.

From the Main Menu:

- Tap on the load option (Empty or Loaded).



Note: The load option lets you specify whether the trailer is always loaded or whether you want to be prompted each time a route is calculated. (See page 110).

Language Setting



Select a Language

From the Main Menu:

1. Tap **Preferences**.
2. Tap on the **Device** tab.
3. Tap  and  to view the options.
4. Tap on the **Language** option and select a language.
5. Tap **Back** to save changes.



Keyboard Setting



 
Select a Keyboard Type

For more information, see “Using Keyboards” on page 16.

From the Main Menu:

1. Tap **Preferences**.
2. Tap on the **Device** tab.
3. Tap  and  to view the options.
4. Tap on the **Keyboard** option and select the keyboard type.
5. Tap **Back** to save changes.


Volume Controls

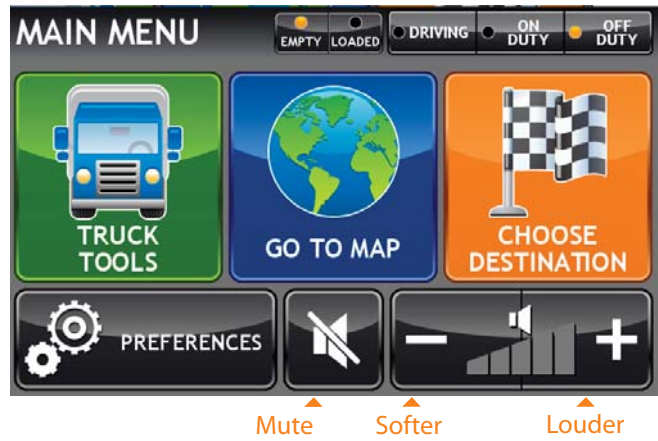


Volume Settings

Set the volume for spoken navigation instructions. .



Increase Volume

 - Tap .



Decrease Volume

- Tap .

Mute Spoken Instructions

- Tap . Button changes to .

UnMute Spoken Instructions



- Tap . Button changes to .

Set Truck Information

Note: Only available when in Truck mode.

The IntelliRoute® TND™ 710 uses truck information to calculate a route for your specific type of truck and load. For more, see “Truck Information” on page 109.

From the Main Menu:

1. Tap **Truck Tools > Truck Info**.
2. Tap  and  to view the options.
3. Tap the option to be set.
4. Enter the new information.
5. Tap **Back** to save changes.

Truck Info Window



TRUCK INFO

HAZMAT TYPE: NONE

WEIGHT: 80,000 LBS

HEIGHT: 13'6"

WIDTH: 8'6"

TRAILERS: 48'

NOTE: Trucks over 80,000lbs should consult State/Provincial authorities. See Motor Carriers Road Info for phone numbers.

Buttons: Edit, -, #, +, BACK

Truck Info Window



TRUCK INFO

ETA ADJUSTMENT: ETA OK



Buttons: INCREASE ETA MORE, INCREASE ETA SOME, ETA OK, DECREASE ETA SOME, DECREASE ETA MORE, BACK

Set ETA Adjustment

Set adjustments to your ETA due to weather or traffic conditions. You can add (increase) time to make the trip take longer or subtract (decrease) time to make the trip take less time. Adjust the ETA a little (some) or more.

Note: Only available when in Truck mode. See “Truck Information” on page 109 for more information.

From the Main Menu:

1. Tap **Truck Tools > Truck Info**.
2. Tap  and  to view the options.
3. Tap on the **ETA Adjustment** option and select the type of adjustment to be performed.
4. Tap **Back** to save changes.



Vehicle Mode Setting



Select Truck or Car Mode

Select the type of vehicle. The IntelliRoute® TND™ 710 calculates routes based on this type of vehicle. When Car/Light Truck is selected, some truck-related features are not available. When set to Truck, routing is calculated for the specified truck and load. (See “Set Truck Information” on page 20. Also, when set to Truck, the driver status setting controls how timers are calculated.

From the Main Menu:

1. Tap **Preferences**.
2. Tap on the **Truck** tab.
Note: If currently set to Car/Light Truck, the tab is labeled Car Mode.
3. Tap  and  to view the options.
4. Tap on the **Vehicle Type** option and select Truck or Car.
5. Tap **Back** to save changes.



Truck Yard Time Zone



Set Truck Yard Time Zone

Select the time zone of the truck yard. With GPS reception, the IntelliRoute® TND™ 710 displays times for your current location and your destination. As you travel between time zones, the device automatically reflects the correct time.

From the Main Menu:

1. Tap **Preferences**.
2. Tap on the **Truck** tab.
Note: If the mode is currently set to Car, the tab is labeled Car Mode.
3. Tap  and  to view the options.
4. Tap on the **Yard Time Zone** option and select the time zone.
5. Tap **Back** to save changes.

Set Route Type Option





Set to Calculate Shortest Route or Fastest Route

Set the IntelliRoute® TND™ 710 to calculate the fastest route to a location.

For more routing options, see “Route Options” on page 112.

From the Main Menu:

1. Tap **Preferences**.
2. Tap on the **Route** tab.
3. Tap  and  to view the options.
4. Tap on the **Route** option and select the route type.
5. Tap **Back** to save changes.



Voice Setting



Select a Voice for Spoken Instructions





Note: Male voice (Tom) is only available in English.

From the Main Menu:


1. Tap **Preferences**.
2. Tap on the **Device** tab.
3. Tap  and  to view the options.
4. Tap on the **Voice Name** option and select a voice.
5. Tap **Back** to save changes.

Select a Vehicle Icon


From the Main Menu:

1. Tap **Preferences**.
2. Tap on the **Device** tab.
3. Tap  and  to view the options.
4. Tap on the **Truck Icon** or **Car Icon** option.
5. Tap  and  to view all vehicle icon options.


With the selected vehicle icon displayed:

6. Tap and drag the  on the color bar to select a color.
The selected icon and color display above the color bar.
7. Tap **Back** to save changes.

 Device Window - Truck Icon Option

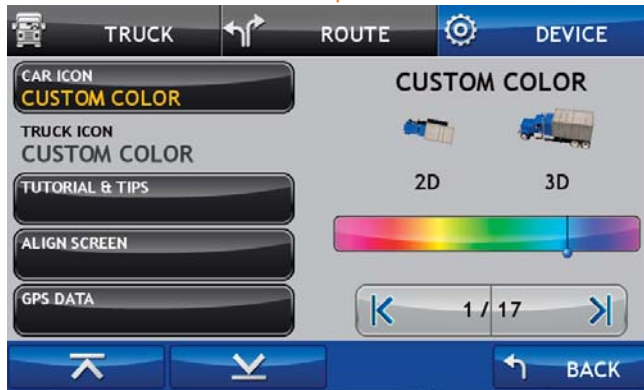

Device Window - Car Icon Option

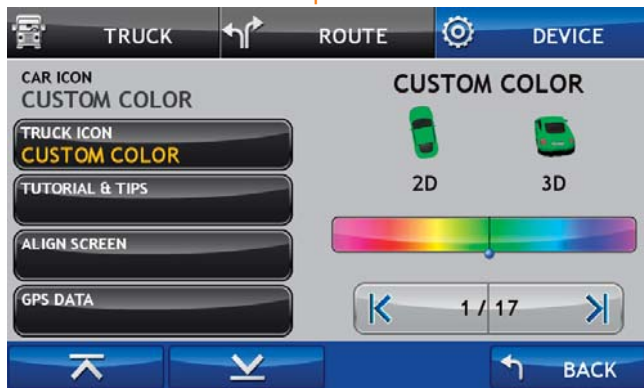 

Warnings Window





Set Warnings

For more on warning options, see “Warning Options” on page 117.


Note: Only available in Truck mode. See “Select Truck or Car Mode” on page 21.

From the Main Menu:

1. Tap **Truck Tools > Warnings**.
2. Tap  and  to view the options.
3. Tap the warning to be set.

Note: Tap  (decrease) and  (increase) to specify the number of miles or hours.

4. Tap **Back** to save changes.

Note: To turn warnings off completely, tap the  button until “Off” displays.

Ways to Search for Locations

Find Addresses

To find an address, you can:

- “Search for an Address” on page 31.
- “Search Near a City Center” on page 32.
- “Search For an Intersection” on page 33.
- “Search by ZIP Code for an Address” on page 34
- “Search by ZIP Code for an Intersection” on page 35
- “Search by Latitude/Longitude” on page 36

Find Nearby Points of Interest (POIs)

You can find points of interest (POIs) by:

 
- “Select a Quick Stop POI” on page 40.
- “Near the Current Vehicle Location” on page 47 .
- “In a City” on page 48
- “Along the Route” on page 49.
- “Near End of Day Location” on page 50.

Location Searches

Destination Selection Window

To access this window from the Main Menu, tap Choose Destination.

Truck Mode

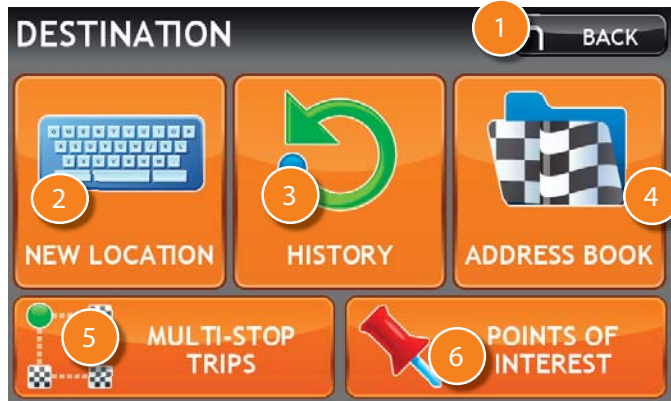

- 1 Back**
Tap to return to the Main Menu.
- 2 New Location**
Tap to find a new address.
- 3 History**
Tap to view a list of previous locations.
- 4 Address Book**
Tap to view a list of saved locations.
- 5 Multi-Stop Trips**
Tap to view a list of saved multi-stop routes or to create a new one.

Car Mode



- 6 Points of Interest/ POI**
Tap to search for a point of interest (POI) such as a gas station, restaurant, etc.
- 7 Set as Home**
Note: Only available in Car mode. See “Select Truck or Car Mode” on page 21.
Set a location as Home to quickly calculate routes to or from the location. Once Home has been set, this button will change to Take Me Home.

Destination Search Auto-Complete Feature

Enter the first few characters in a name and a short list displays a couple of names that start with the typed characters.

On the keyboard, the only keys available are for the next valid characters in a search name.

Continue entering characters until the searched for name displays in the list. Tap on the name to select it.

Other buttons on this window include:



Tap to search for a location by ZIP code.



Tap to return to the previous window.



Tap to view a longer list of matching names matching the typed characters.



Tap to view a list of previously selected locations.



Tap to enter a space.



Tap to delete the last character and move the cursor back one space.



About City Street Names

Some cities with common names such as “Concord” have several types of names associated with a city.

If a name does not display, continue typing characters until the name you are looking for displays in the list.



Expand Search for Street Names

The Expand Search button on the street name selection window can help locate addresses that may actually be in a different town, spelled slightly differently, or in a neighboring town.

If the next letter in the street name can not be selected on the keyboard, tap **Expand Search** to search a greater area.

First Use



Short City List



Long City List



City/State List



Select a City

First Use

On first use, the Select City Name Window displays. On the keyboard, type the first few characters in the city name.

On the next use, the city name selected in the previous search displays. Tap on the city name to search for a location in the city. To find locations in a different city, type the first few characters in the new city name.

Short City List

As you type the characters in the city name, a short list of matching city names displays. Tap on a city to select it.

Long City List

If the city is not displayed on the short name list, continue typing characters in the city name or tap ENTER to display a long list of city names. Use the up and down arrows to view all cities/states. Tap on a city to select it.

City/State List

The City/State List displays cities of the selected name in different states. Use the up and down arrows to find the correct city/state. Tap on the city/state name to select it.

Special note: If a city name appears twice within a state, you may need to check both for your specific address.

Find Addresses

Location Selection Window



- 1 Address**
Tap to search for an address by entering the city, street, and number.
- 2 City Center**
Tap to search for an address in a city.
- 3 Intersection**
Tap to search for an address by entering the city and two intersecting roads.
- 4 Back**
Tap to return to the Destination Selection Window.
- 5 Enter Lat/Long**
Tap to search for a location by latitude and longitude.
- 6 Menu**
Tap to return to the Main Menu.

Search for an Address

From the Main Menu:

1. Tap **Choose Destination** > **New Location** > **Address**.
2. Type the first few characters in the city name.
The Select From City List displays.
3. Tap on the city/state from the displayed list.
4. Type the first few characters in the street name, or if the next characters of the street name can not be selected on the keyboard, tap **Expand Search** and search a wider area.
The Select Street List displays.
5. Tap on the street name from the displayed list.
6. Tap the street number or tap **List** to show a list of street numbers.
The Select From the List displays valid address ranges.
7. Tap on the street number range from the list.
The Confirmation Window displays.

 
Select City List



Select Street List



Enter House Number

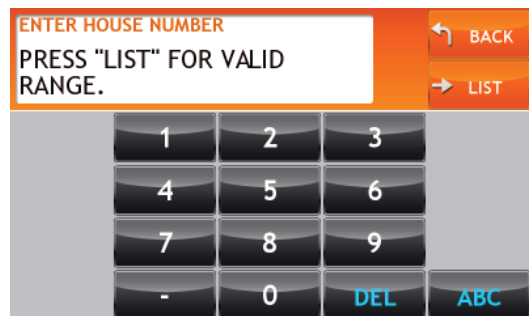

8. Tap **Begin New Route** to navigate to the location.
See "Address Confirmation Window" on page 72 for more options.
9. If the vehicle mode is set to **Truck** and the **Load Option** is set to **Prompt**, a Confirmation Window asked if the Truck is empty or loaded.
10. Tap the appropriate truck load option to create a route.

Search Near a City Center

From the Main Menu:

1. Tap **Choose Destination > New Location > City Center**.
2. Type the first few characters in the city name.
The Select From the List window displays.
3. Tap on the city/state name.
The Confirmation Window displays.


Select From the List



4. Tap **Begin New Route** to navigate to the location.
See "Address Confirmation Window" on page 72 for more options.
5. If the vehicle mode is set to **Truck** and the **Load Option** is set to **Prompt**, a Confirmation Window asked if the Truck is empty or loaded.
6. Tap the appropriate truck load option to create a route.

Search For an Intersection

From the Main Menu:

1. Tap **Choose Destination > New Location > Intersection.**
 2. Type the first few characters in the city name.
The Select From the List Window displays.
 3. Tap on the city name.
The Enter Primary Street Window displays.
 4. Type the first few characters in the primary street name, or if the next characters of the street name can not be selected on the keyboard, tap **Expand Search** and search a wider area.
 5. Tap on the street name in the list.
The Select Intersecting Street List shows streets that intersect with the primary street.
 6. Type the first few characters in the street name
The Select Intersecting Street List displays.
 7. Tap on the intersecting street name.
The Confirmation Window displays.
- 
8. Tap **Begin New Route** to navigate to the location.
See "Address Confirmation Window" on page 72 for more options.
 9. If the vehicle mode is set to **Truck** and the **Load Option** is set to **Prompt**, a Confirmation Window asked if the Truck is empty or loaded.
 10. Tap the appropriate truck load option to create a route.

Select From The List Window



Enter Primary Street Window



Select Intersecting Street List



Enter City Name Window



 
Enter Zip Code Window



Enter Street Name List



Enter House Number

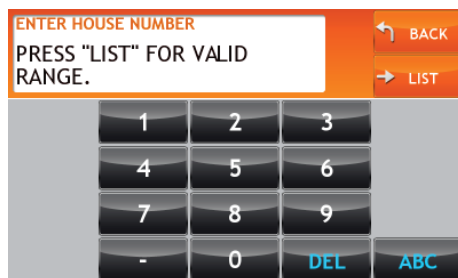

Search by ZIP Code for an Address

Note: For Canada, only three digit postal codes are supported.

From the Main Menu:

1. Tap **Choose Destination** > **New Location** > **Address**.
2. Tap **ZIP Code Search**.
3. The Enter ZIP Code Window displays.
4. Type the ZIP code.
The Enter Street Name window displays.
5. Type the first few characters in the street name or if the next characters of the street name can not be selected on the keyboard, tap **Expand Search** and search a wider area.
The Select Street List displays.
6. Tap on the street name from the displayed list.
7. Tap the street number or tap **List** to show a list of street numbers.
The Select From the List displays valid address ranges.
8. Tap on the street number range from the list.
The Confirmation Window displays.



9. Tap **Begin New Route** to navigate to the location.
See "Address Confirmation Window" on page 72 for more options.
10. If the vehicle mode is set to **Truck** and the **Load Option** is set to **Prompt**, a Confirmation Window asked if the Truck is empty or loaded.
11. Tap the appropriate truck load option to create a route.

Search by ZIP Code for an Intersection

From the Main Menu:

1. Tap **Choose Destination > New Location > Address.**
2. Tap **Zip Code Search.**
The Enter ZIP Code Window displays.
3. Type the ZIP code.
The Enter Primary Street Name window displays.
4. Type the first few characters in the street name or if the next characters of the street name can not be selected on the keyboard, tap **Expand Search** and search a wider area.
The Select Primary Street List displays.
5. Tap on the street name from the displayed list.
The Select Intersecting Street window displays.
6. Type the first few characters in the street name.
The Select Intersecting Street List displays.
7. Tap on the intersecting street name from the list.
The Confirmation Window displays.

Enter Zip Code Window



Enter Primary Street Name Window



Select Intersecting Street Window



 
8. Tap **Begin New Route** to navigate to the location.
See "Address Confirmation Window" on page 72 for more options.
9. If the vehicle mode is set to **Truck** and the **Load Option** is set to **Prompt**, a Confirmation Window asked if the Truck is empty or loaded.
10. Tap the appropriate truck load option to create a route.

Search by Latitude/Longitude

From the Main Menu:

1. Tap **Choose Destination > New Location > Enter Lat/Long.**
The Enter Geographic Coordinate Window displays.
2. Tap in the Latitude field.
The Enter Latitude Window displays.
3. Enter the latitude of the location and tap Enter.
The Enter Geographic Coordinate Window redisplay.
4. Tap in the Longitude field.
The Enter Longitude Window displays.
5. Enter the longitude of the location and tap **Enter.**
The Enter Geographic Coordinate Window redisplay.
6. Tap **Go.**
The Confirmation Window displays.



Enter Geographic Coordinate Window

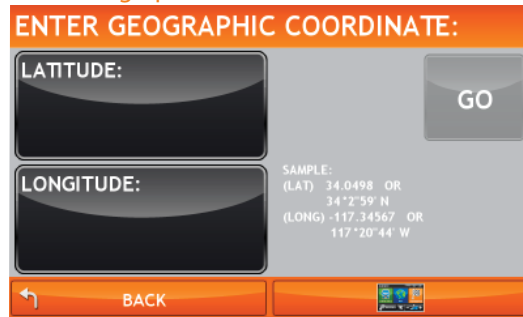

Enter Latitude Window



  Enter Longitude Window

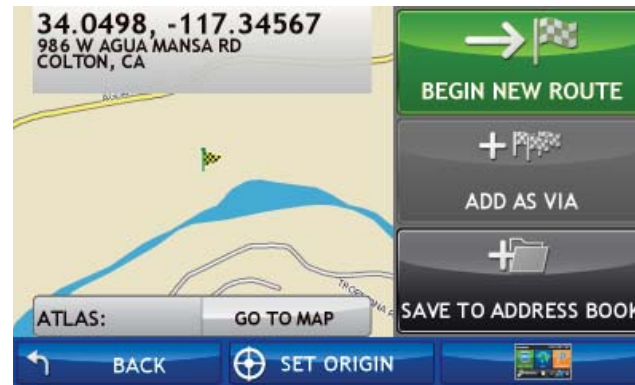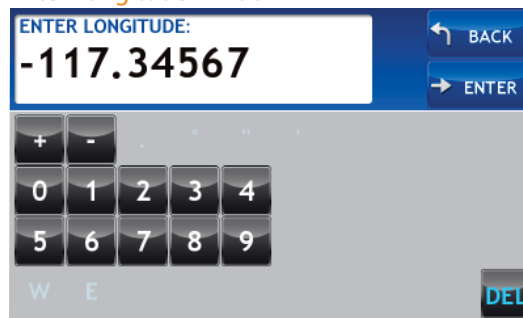

7. Tap **Begin New Route** to navigate to the location.
See "Address Confirmation Window" on page 72 for more options.
8. If the vehicle mode is set to **Truck** and the **Load Option** is set to **Prompt**, a Confirmation Window asked if the Truck is empty or loaded.
9. Tap the appropriate truck load option to create a route.

 
Point of Interest Windows

Points of Interest Selection Window

Different buttons display on the POI Selection Window, depending on whether the device is set to Truck or Car mode.

See “Select Truck or Car Mode” on page 21 for more information.

POI Selection Window - Truck Mode

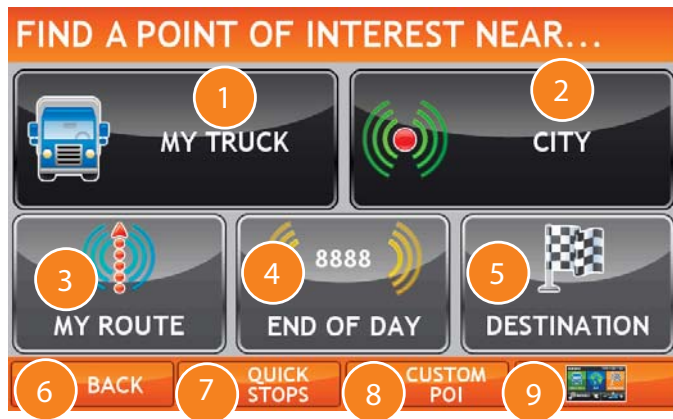


- 1 My Truck/Near Car**
Tap to search for a point of interest near the current Vehicle location.
- 2 City**
Tap to search for a point of interest in a city.
- 3 My Route**
Tap to search for a point of interest along the vehicle route.

- 4 End of Day**
Tap to search for a point of interest near your end of day location.
Note: Not available in Car mode.


This search is based on your remaining driving hours. (See “Timers and Logs” on page 96.) The search along your route is based on your estimated end of day location. The search includes the last 30 minutes of your trip.

- 5 Destination**
Tap to find a point of interest near the route destination.
- 6 Back**
Tap to return to the Destination Selection Window.
- 7 Quick Stops**
Tap to find a truck-friendly POI near the current truck location. See “Select a Quick Stop POI” on page 40.
- 8 Custom POIs**
Tap to select a custom POI location. See “Custom POI Locations” on page 119.
- 9 Menu**
Tap to return to the Main Menu.

 POI Selection Window - Car Mode

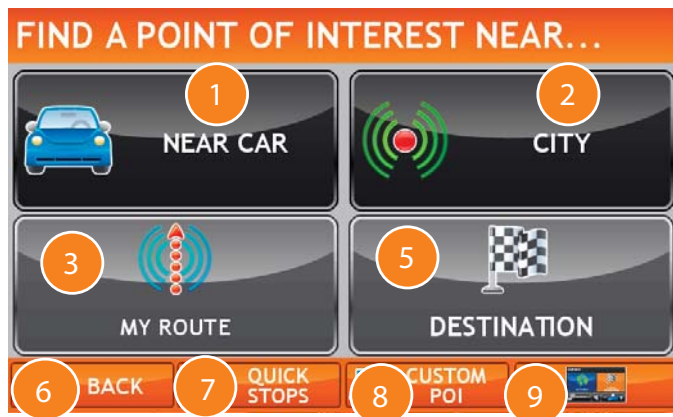

POI Category Window

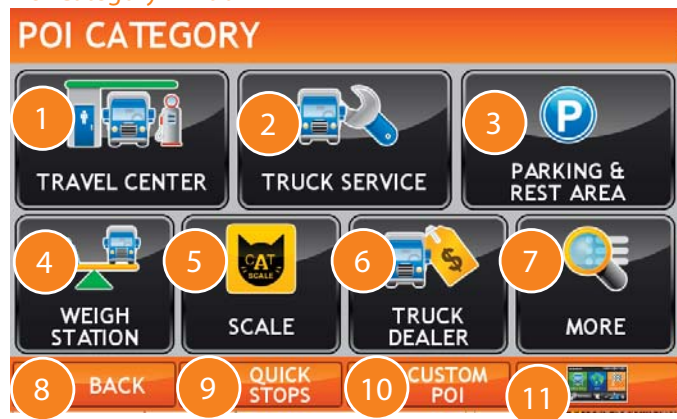 

Points of Interest (POI) Category Window

- 1 **Travel Center**
Tap to search for a travel center with truck amenities.
- 2 **Truck Services**
Tap to search for a truck services POI
- 3 **Parking & Rest Area**
Tap to search for truck parking or a rest stop.
- 4 **Weigh Station**
Tap to search for a truck weigh station.
- 5 **Scale**
Tap to search for a CAT scale location.
- 6 **Truck Dealer**
Tap to search for a truck dealership.
- 7 **More**
Tap to select a consumer (non-truck) related point of interest.
- 8 **Back**
Return to previous window.
- 9 **Quick Stops**
Tap to find a truck-friendly POI near the current truck location. See "Select a Quick Stop POI" on page 40.
- 10 **Custom POI**
Tap to select a custom POI location. See "Custom POI Locations" on page 119.
- 11 **Menu** Tap to return to the Main Menu.

Points of Interest (POIs) Searches

The IntelliRoute® TND™ offers thousands of Points of Interest. Truck-related POIs include Truckers Friend and Rand McNally locations that offer many amenities to address trucking professional needs.

Truck-Related POIs

See “Select a Truck Related Point of Interest” on page 42.

- **Travel Center**
Amenities include: Fueling stations, Food stores, Restaurants, Showers, etc.
See “Select and Filter Travel Center Amenities” on page 43.
- **Truck Service**
See “Select and Filter Truck Services” on page 44.
- **Parking and Rest Area**
- **Weigh Station**
- **CAT Scale**
- **Truck Dealer**

-----Truck-Related POIs-----



-----Consumer-Related POIs-----



Consumer POIs

You can select a POI by category (see page 45) or by name (see page 46).

- **More**

Select a Quick Stop POI

Select Quick Stop Window



From the Main Menu:

1. Tap **Choose Destination** > **Points of Interest**.
2. Tap **Quick Stops**.
The Select Quick Stop Window displays.
3. Tap on a POI type.
The Quick Stop List displays.



4. Tap on a location from the list.

Select a Custom POI Location

See “Custom POI Locations” on page 119 for more information.

.From the Main Menu:

1. Tap **Choose Destination > Points of Interest**.
2. Tap **Custom POI**.
The My POI Window displays.
3. Tap on a location from the list.

Find a POI Window



POI Category Window



Select a Truck Related Point of Interest

1. Tap **Choose Destination > Points of Interest**.
2. Select a search type (**My Truck/My Car, City, My Route, End of Day, or Destination**).

On the POI Category Window:

3. Tap:
 - **Travel Center** (See “Select and Filter Travel Center Amenities” on page 43), or
 - **Truck Service** (See “Select and Filter Truck Services” on page 44), or
 - **Parking & Rest Area**, or
 - **Weigh Station**, or
 - **CAT Scale**, or
 - **Truck Dealer**.



4. Tap on a location from the list.

 
POI Category Window



Select Travel Center Window



Select Travel Center Services Window

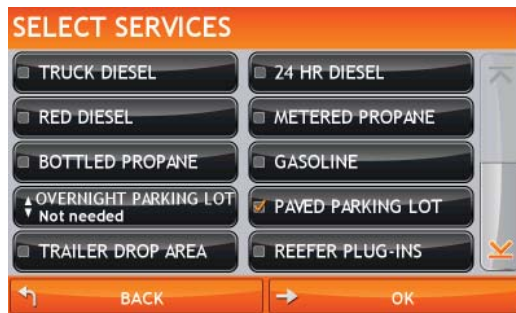


Select and Filter Travel Center Amenities

Truck-related Travel Center points of interest can include over 70 different types of amenities. To select only amenities that you are interested in, filter your search results.

1. Tap **Choose Destination** > **Points of Interest**.
2. Select a search type (**My Truck/My Car, City, My Route, End of Day, or Destination**).

On the POI Category Window:

 3. Tap **Travel Center**.
The Travel Center Window displays all travel centers in your area.
4. Tap **Select Services**.
The Select Services Window displays.
5. Click on the checkbox of each amenity to be included in the search.
6. Tap **OK**.
The Travel Center Window displays POI locations with your selected amenities.

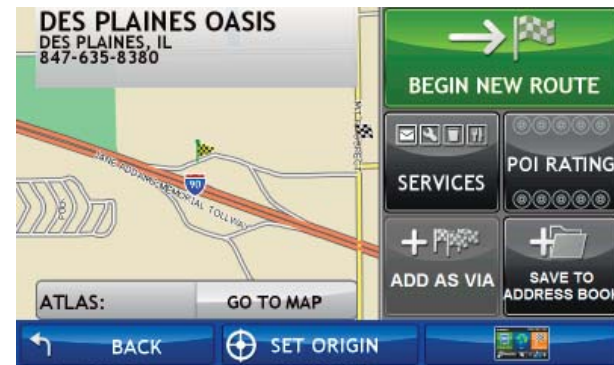

7. Tap on a location from the list.

POI Category Window



Select Truck Service Window



Select Truck Service Window



Select and Filter Truck Services

Truck Service points of interest include many different types of services. To select only services that you are interested in, filter your search results.

1. Tap **Choose Destination > Points of Interest**.
2. Select a search type (**My Truck/My Car, City, My Route, End of Day, or Destination**).

On the POI Category Window:

3. Tap **Truck Service**.
The Truck Service Window displays all service locations in your area.
4. Tap **Select Services**.
The Select Services Window displays.
5. Click on the checkbox of each service to be included in the search.
6. Tap **OK**.
The Truck Service Window displays POI locations with your selected services.



7. Tap on a location from the list.

Select a Consumer Point of Interest By Category

1. Tap **Choose Destination > Points of Interest**.
2. Select a search type (**My Truck/My Car, City, My Route, End of Day, or Destination**).

On the POI Category Window:

3. Tap **More**.
The Select Category Window displays.
4. Tap on a category. (For example, tap Hospital/Emergency.)
5. If necessary, tap on a subcategory type. (For example, tap Pharmacy.)
The Select Point of Interest Window displays POI locations.

 
POI Category Window



Select Category Window



Select Subcategory Window

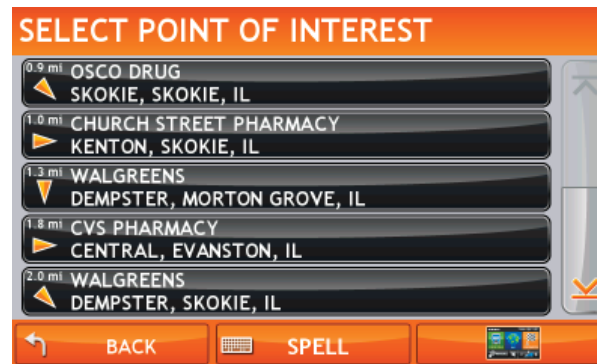

6. Tap on a location from the list.

Select a Consumer Point of Interest by Name

Note: The spell function is only available for searches near My Truck/My Car or City.

1. Tap **Choose Destination > Points of Interest**.
2. Select a search type (**My Truck/My Car** or **City**).

On the POI Category Window:

3. Tap **More**.
The Select Category Window displays.
4. Tap **All**.
The Select Point of Interest Window displays.
5. Tap on the **Spell** button to display the keyboard.
6. Type the first characters in the POI name.
The Select From the List Window displays.
7. Tap on the POI name in the displayed list.
8. The Select Point of Interest Window displays POI locations.

 
Select Category Window



Select Point of Interest Window



Enter POI Name Window

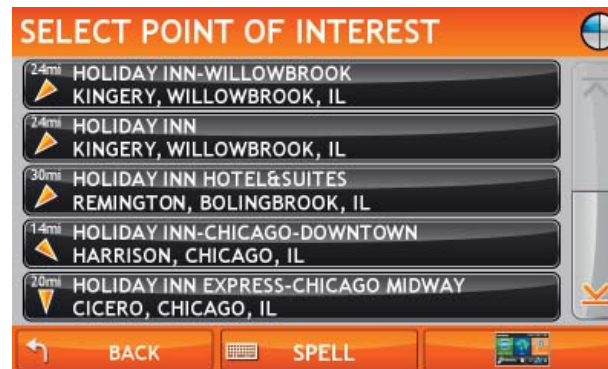

9. Tap on a location from the list.

Search for Nearby Points of Interest (POIs)

Near the Current Vehicle Location

POI Category Window



Select <Point of Interest Type> Window



From the Main Menu:

 
1. Tap **Choose Destination > Points of Interest > My Truck.**

The POI Category Window displays.

2. Tap:
 - **Travel Center** and filter for amenities. (See page 43.)
 - **Truck Service** and filter for services. (See page 44.)
 - **Parking & Rest Area, Weigh Station, CAT Scale, or Truck Dealer.**
 - **More** and select a Consumer POI. See page 45 and page 46.

Note: If no locations are found, a message displays.

3. Tap on a location on the list.
The Confirmation Window displays:

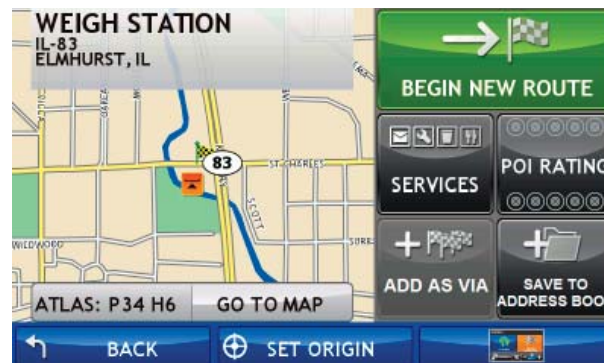

4. Tap **Begin New Route** to navigate to the location.
See "Truck-Related Point of Interest Confirmation Window" on page 74 for more options.
5. If the vehicle mode is set to **Truck** and the **Load Option** is set to **Prompt**, a Confirmation Window asked if the Truck is empty or loaded.
6. Tap the appropriate truck load option to create a route.

Select Address List



POI Category Window



Select <Point of Interest Type> Window



In a City

From the Main Menu:

1. Tap **Choose Destination** > **Points of Interest** > **City**.
2. Type the first few characters in the city name.
The Select Address List displays.
3. Tap on the city/state from the displayed list.
The POI Category Window displays.
4. Tap:
 - **Travel Center** and filter for amenities. (See page 43.)
 - **Truck Service** and filter for services. (See page 44.)
 - **Parking & Rest Area, Weigh Station, CAT Scale, or Truck Dealer.**
 - **More** and select a Consumer POI. See page 45 and page 46.

The Select <Point of Interest Type> Window displays POI locations.

Note: If no locations are found, a message displays.

5. Tap on a location on the list.
The Confirmation Window displays:



6. Tap **Begin New Route** to navigate to the location.
See "Truck-Related Point of Interest Confirmation Window" on page 74 for more options.
7. If the vehicle mode is set to **Truck** and the **Load Option** is set to **Prompt**, a Confirmation Window asked if the Truck is empty or loaded.
8. Tap the appropriate truck load option to create a route.

POI Category Window



Select <Point of Interest Type> Window



Along the Route

 
From the Main Menu:

1. Tap **Choose Destination > Points of Interest > My Route**.
The POI Category Window displays.
2. Tap:
 - **Travel Center** and filter for amenities. (See page 43.)
 - **Truck Service** and filter for services. (See page 44.)
 - **Parking & Rest Area, Weigh Station, CAT Scale, or Truck Dealer**.
 - **More** and select a Consumer POI. See page 45 and page 46.

The Select <Point of Interest Type> Window displays POI locations.

Note: If no locations are found, a message displays.

3. Tap on a location on the list.
The Confirmation Window displays.

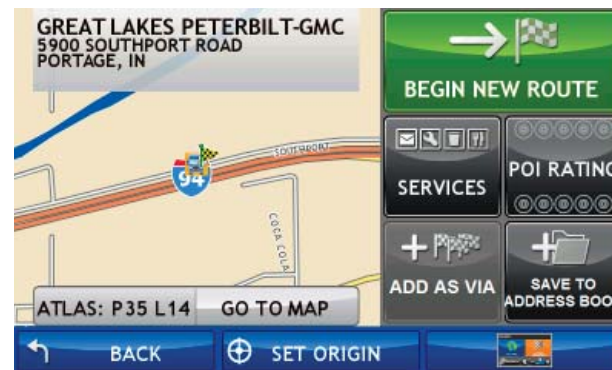

4. Tap **Begin New Route** to navigate to the location.
See "Destination Confirmation Windows" on page 72 for more options.
5. If the vehicle mode is set to **Truck** and the **Load Option** is set to **Prompt**, a Confirmation Window asked if the Truck is empty or loaded.
6. Tap the appropriate truck load option to create a route.

POI Category Window



Select <Point of Interest Type> Window



Near End of Day Location

Note: This feature uses your remaining hours of service and average speed to estimate your end of day location. The device then searches for the selected POI category around the estimated location. To use this feature, driver timers must be properly used. See “Timers and Logs” on page 96.

1. Create a route or load a trip.

From the Main Menu:

2. Tap **Choose Destination > Points of Interest > End of Day.**
The POI Category Window displays.
3. Tap:
 - **Travel Center** and filter for amenities. (See page 43.)
 - **Truck Service** and filter for services. (See page 44.)
 - **Parking & Rest Area, Weigh Station, CAT Scale, or Truck Dealer.**
 - **More** and select a Consumer POI. See page 45 and page 46.

The Select <Point of Interest Type> Window displays POI locations.

Note: If no locations are found, a message displays.

4. Tap on a location on the list.
The Confirmation Window displays:



5. Tap **Begin New Route** to navigate to the location.
See “Address Confirmation Window” on page 72 for more options.
6. If the vehicle mode is set to **Truck** and the **Load Option** is set to **Prompt**, a Confirmation Window asked if the Truck is empty or loaded.
7. Tap the appropriate truck load option to create the route.

POI Category Window



Select a Custom POI Location Nearby

See "Custom POI Locations" on page 119 for more information.

1. Tap **Choose Destination > Points of Interest**.
2. Select a search type (**My Truck/My Car, City, My Route, End of Day, or Destination**).

On the POI Category Window:

3. Tap **Custom POI**.
The My POIs Window displays.
4. Tap on a location from the list



Find a Location by Tapping on the Map

Tap on the Map and Avoid the Location

From the Main Menu:

 
1. Tap on **Go to Map** to display the map.
2. Use the **+** (zoom in) and **-** (zoom out) buttons to display the road segment on the map
3. Tap on the road segment you want to avoid.

The crosshairs  display at the tapped location.

4. Tap **Avoid**.

The button label changes to **Remove Avoid**.


Map Window

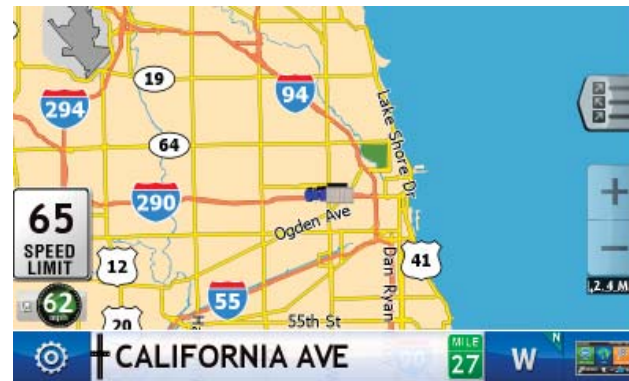


Note: When **Avoid** is selected, the location is permanently blocked. Tap the location and choose **Remove Avoid** to remove the block and include the location in routes.

5. Tap **Back** to return to the map.
See "Route Map Window" on page 76 for more options.

 
Map Window

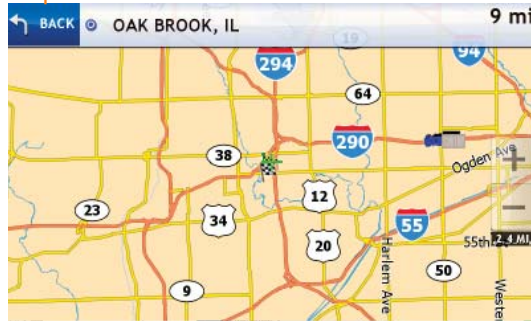

Tap on Map Location Window

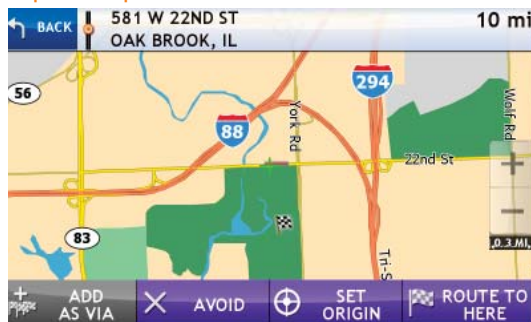 

Tap on the Map and Route to the Location

1. Tap on **Go to Map** to display the map.
2. Use the **+** (zoom in) and **-** (zoom out) buttons to display the location on the map
3. Tap on the location you want to route to.
The crosshairs  display at the tapped location.
4. Tap **Route to Here**.
5. Tap **Back** to save changes.
The Confirmation Window displays.



6. Tap **Begin New Route** to navigate to the location.
See "Address Confirmation Window" on page 72 for more options.
7. If the vehicle mode is set to **Truck** and the **Load Option** is set to **Prompt**, a Confirmation Window asked if the Truck is empty or loaded.
8. Tap the appropriate truck load option to create a route.

Rate a Truck-Related Point of Interest

Confirmation Window



POI Ratings Window





 
Create Comment Window



1. Search for and select a truck-related point of interest. (See “Select a Truck Related Point of Interest” on page 42.
The Confirmation Window displays.

On the POI Rating button, the top row indicates the community rating from fellow drivers for the point of interest. The bottom row indicates your individual rating.

2. Tap on the **POI Ratings** button.
The POI Ratings Window displays the Personal Rating tab.
3. Use  and  to rate the facility.
4. Tap **Create Comment** and type a personal comment on the facility.
5. Tap **Enter** to save the comment.
The Ratings Window redisplay.
6. Tap **Back** to save changes.
The Confirmation Window displays.
Your rating displays on the button.

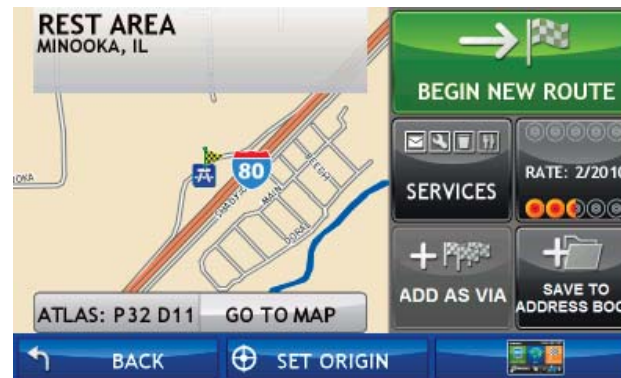

Note: To share ratings with fellow drivers, you must install the TND Dock software.

Manage Destinations

Set Your Current Location as Home Using GPS

Note: Only available in Car mode.

From the Main Menu:

1. Tap **Choose Destination** > **Set as Home**.

 
The current location is saved in your Address Book as "Home". The button changes to Take Me Home.



2. Tap the **Take Me Home** button to calculate a route from your current location to your home location.

To reset to a new Home, simply delete the Home entry from your Address Book.

Confirmation Window

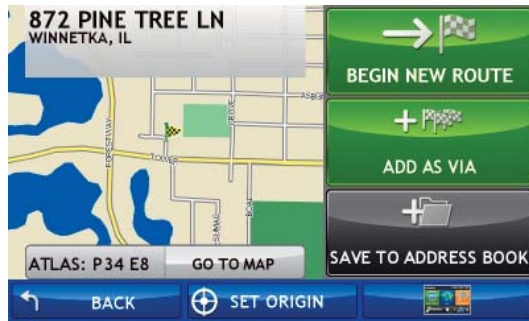

Address Book - All Addresses Tab - Before



Address Book - All Addresses Tab - After



Search for a Location and Set as Home

Note: Only available in Car mode.

Any location can be set as Home. To manually set a location other than where you are, make sure you are indoors and have no GPS reception.

From the Main Menu:

1. Search for and select a location.
2. On the Confirmation window, tap **Set Origin**.
3. Tap **Choose Destination > Set as Home**.

The selected location is saved in your Address Book as "Home". The button changes to Take Me Home.

4. Tap the **Take Me Home** button to calculate a route from your current location to your home location.

To reset to a new Home, simply delete the Home entry from your Address Book.

Delete Your Home Address

From the Main Menu:

1. Tap **Choose Destination > Address Book**.
2. Tap the **All Addresses** tab.
3. The Home address is saved as "Home".
4. Tap on the **X** next to Home entry. A confirmation window displays.
5. Tap **Yes** to delete the entry.

The All Addresses tab redisplay. The Home entry has been deleted.

Address Book

 
Save a Location in the Address Book

1. Search for a Destination.


On the Confirmation Window:

2. Tap **Save to Address Book**.
The Default Name Confirmation Window displays.
3. Tap **Yes** to accept the default name or tap **No** to display a keyboard.
4. Type a the name of the location and tap **Enter** to save the location in the Address Book.
The Confirmation Window redisplayes
5. Tap **Close** to redisplay the Confirmation Window. .

Confirmation Window

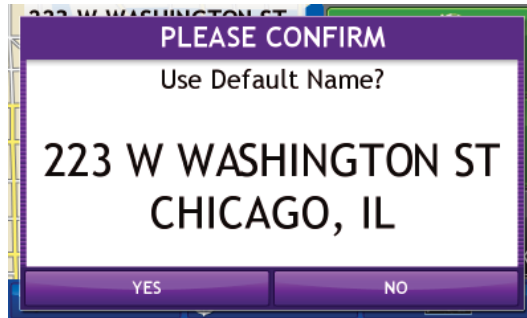

Enter Name Window

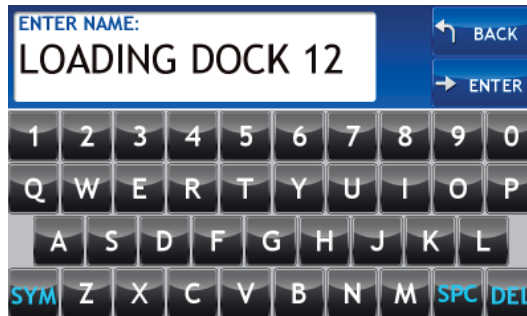 

6. Tap **Begin New Route** to navigate to the location.
7. If the vehicle mode is set to **Truck** and the **Load Option** is set to **Prompt**, a Confirmation Window asked if the Truck is empty or loaded.
8. Tap the appropriate truck load option to create a route.

Sort Address Book Entries by Name or Distance

Address Book Window - Sorted by Name





Sort By Window



Address Book Window - Sorted by Distance



From the Main Menu:

1. Tap **Choose Destination > Address Book**.
The Address Book Window displays.
The All Addresses tab is shown.
Entries are alphabetically sorted by name.
2. To sort by distance, tap .
The Sort By Window displays.
3. Tap **Sort by Distance**.
Addresses are sorted by distance. The button is labeled Sort by Distance.
4. When finished:
 - Tap **Back** to return to the Destination Selection Window.
 - Tap  to return to the Main Menu.

Select a Location from the Address Book

From the Main Menu:

1. Tap **Choose Destination > Address Book**.
2. Tap on the **All Addresses** tab.
The Address List displays.
3. Tap on an address to select it.
The Confirmation Window displays.

Address List




4. Tap **Begin New Route** to navigate to the location.
See "Address Confirmation Window" on page 72 for more options.
5. If the vehicle mode is set to **Truck** and the **Load Option** is set to **Prompt**, a Confirmation Window asked if the Truck is empty or loaded.
6. Tap the appropriate truck load option to create a route.

 
Create an Address Book Group

You must create the group before you can add addresses to it.

From the Main Menu:

1. Tap **Choose Destination > Address Book**.
The Address Book Window displays.
2. Tap on the **Groups** tab.
3. Tap **New Group**.
The Enter Name Window displays.
4. Type the group name.
5. To select a different color folder, tap .
The Choose Folder Color Window displays.
6. Tap on a color, then tap **Close**.
7. When finished, tap **Enter**.
The Groups tab redisplay.
The new group name is shown.


Address Book Group Tab

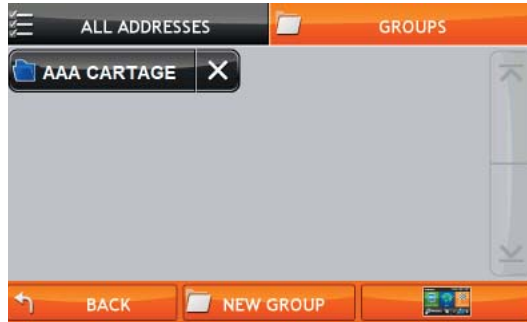

Enter Name Window



 Choose Folder Color Window

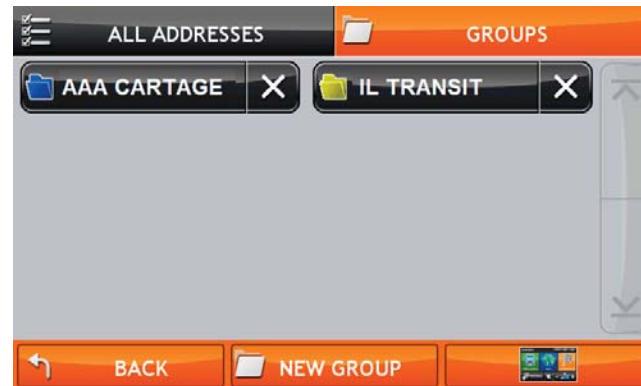

Add an Address to a Group

 
From the Main Menu:

1. Tap **Choose Destination > Address Book**:
2. Tap the **Groups** tab.
3. Tap on the Group you want to add an address to.
4. Tap **New Location**.

The Add Destination Window displays.

5. Tap:
 - **Enter New Address** and search for an address. (See page 31.)
 - **History** and select a History List location. (See page 52.)
 - **Saved** and select an Address Book location. (See page 49.)
 - **POI** and select a point of interest. (See page 34.)
6. If you selected:
 - **History, Saved, or POI**, the selected location is added to the group.
 - **Enter a New Address**, the Default Name Confirmation Window displays. Tap **Yes** to accept the default name or tap **No** to display a keyboard.

Address Book Group List

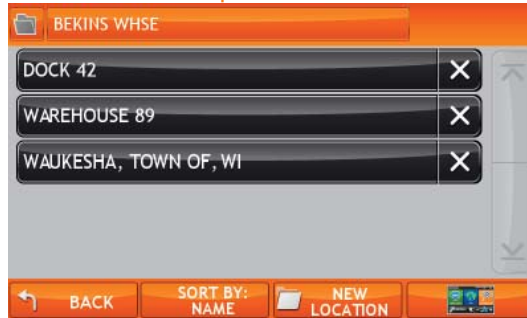


Add Destination Window



Remove an Address From a Group

 
From the Main Menu:

1. Tap **Choose Destination > Address Book**.
1. Tap on the **Group** tab.
2. Tap on the Group you want to remove the address from.
3. Tap on the  next to the address to be removed.
A confirmation window displays.
4. Tap **Yes**.
The Address Book Group redisplay with the address removed.

Group Address List



Confirmation Window

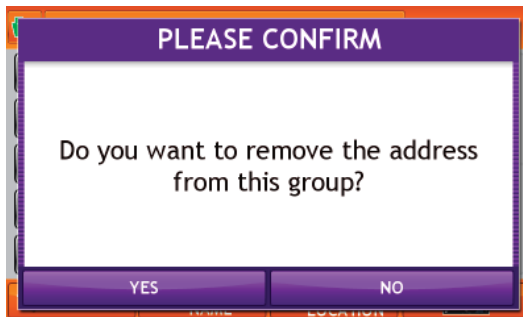


Select a Location From a Group


From the Main Menu:

1. Tap **Choose Destination > Address Book**.
2. Tap on the **Groups** tab.
The Groups List displays.
3. Tap on the Group that contains the location.
The Group Address List displays.
4. Tap on the location.
The Confirmation Window displays.

 Groups List

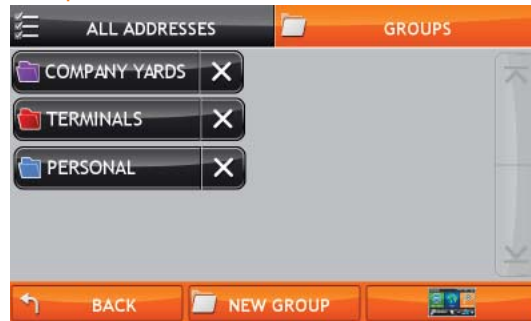

Group Address List

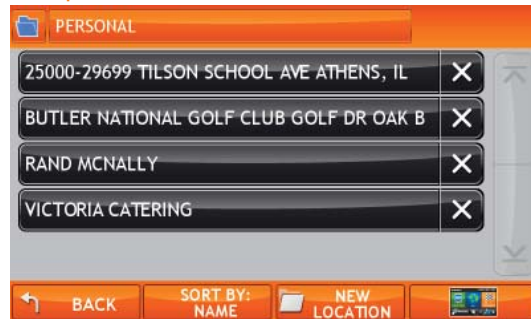 

5. Tap **Begin New Route** to navigate to the location.
See "Address Confirmation Window" on page 72 for more options.
6. If the vehicle mode is set to **Truck** and the **Load Option** is set to **Prompt**, a Confirmation Window asked if the Truck is empty or loaded.
7. Tap the appropriate truck load option to create a route.

History List

Destination History List



Select a Location from the History List

From the Main Menu:

 
1. Tap **Choose Destination > History**.
The Destination History List displays.
2. Tap on the destination to select it.
The Confirmation Window displays.



3. Tap **Begin New Route** to navigate to the location.
See "Address Confirmation Window" on page 72 for more options.
4. If the vehicle mode is set to **Truck** and the **Load Option** is set to **Prompt**, a Confirmation Window asked if the Truck is empty or loaded.
5. Tap the appropriate truck load option to create a route.

Multi-Stop Routes

Multi-Stop Trips Window

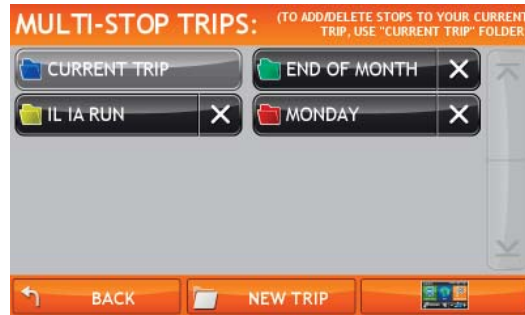

Enter Name Window




Choose Folder Color Window



Create a Multi-Stop Route

From the Main Menu:

1. Tap **Choose Destination > Multi-Stop Trips**.
The Multi-Stop Trips Window displays.
2. Tap **New Trip**.
The Enter Name Window displays.
3. Type the trip name.
4. To select a different color folder, tap .
The Choose Folder Color Window displays.
5. Tap on a color, then tap **Close**.
6. When finished, tap **Enter**.
The Multi-Stop Trips Window redisplay.
The new trip name is shown.



Add Locations to a Multi-Stop Route

Note: Add locations in the order you want to route to them.

From the Main Menu:

1. Tap **Choose Destination > Multi-Stop Trips**.
The Multi-Stop Trips Window displays.
2. Tap on the route.
The Route Stop Window displays.
3. Tap **Add Address**.
The Add Destination Window displays.
4. To add an address, tap:
 - Enter New Address and search for an address. (See page 31.)
 - History and select a History List location. (See page 52.)
 - Saved and select an Address Book location. (See page 49.)
 - POI and select a point of interest. (See page 34.)

A Confirmation Window asks if you want to add another stop.

5. Tap:
 - **Yes** to add another stop
 - **No** if the route is complete.
6. Tap **Back**.

The Route Stop Window redisplay. The location has been added to the end of the route.

 
Route Stop Window



Add Destination Window




New Route Stop Window


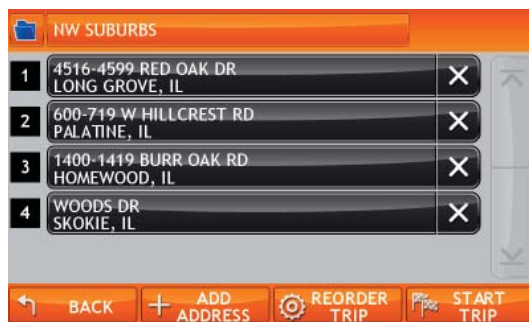


Remove a Stop from a Route

From the Main Menu:

1. Tap **Choose Destination > Multi-Stop Trips**.
The Multi-Stop Trips Window displays.
2. Tap on the route.
The Route Stop List displays.
3. Tap on the  next to the stop to be removed.
A confirmation window displays.
4. Tap **Yes**.
The Route Stop List redisplay with the stop removed.

  Route Stop List

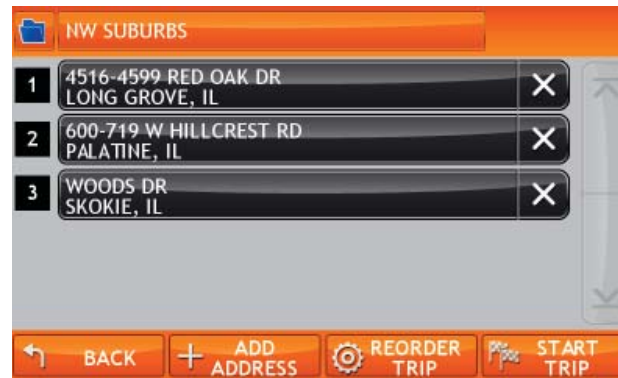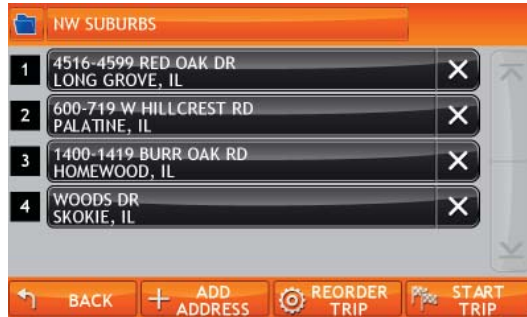

Select and Run a Saved Route

From the Main Menu:

 
 
1. Tap **Choose Destination > Multi-Stop Trips**.
The Multi-Stop Route List displays.
2. Tap on the route to select it.
The Route Stop Window displays.
3. Tap **Start Trip**.
The Confirmation Window displays.
4. Tap **Begin New Route** to navigate to the location.
See "Address Confirmation Window" on page 72 for more options.
5. If the vehicle mode is set to **Truck** and the **Load Option** is set to **Prompt**, a Confirmation Window asked if the Truck is empty or loaded.
6. Tap the appropriate truck load option to create a route.

The IntelliRoute TND calculates the route to your first stop.
When you have reached the stop, a message displays.

Multi-Stop Route List




Multi-Stop Route List

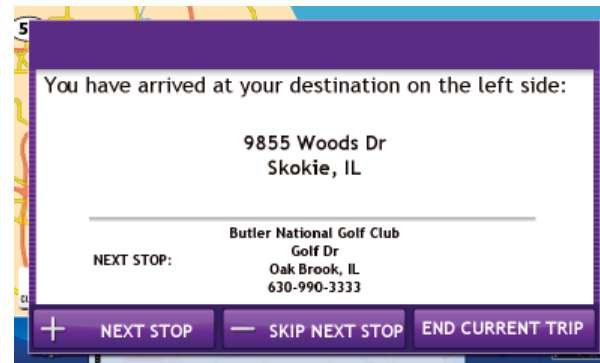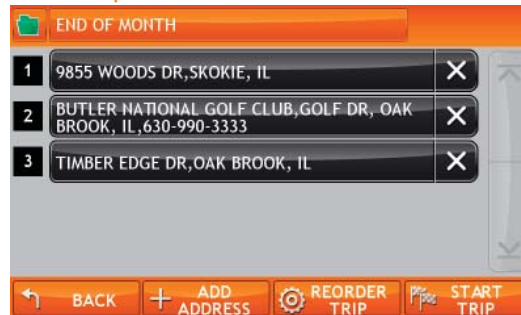

7. Tap:
 - **Next Stop** - To calculate a route to the next stop in the route
 - **Skip Next Stop** - To skip the next stop and calculate a route to the stop after the next one.
 - **End Current Trip** - To end the route at the current stop.

 Multi-Stop Route List

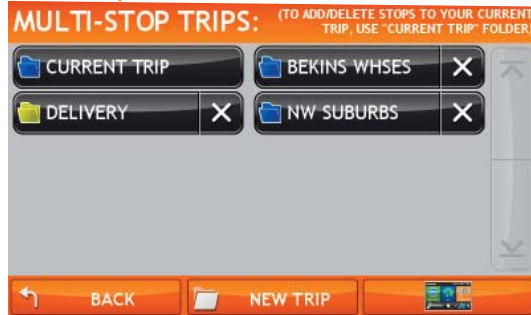

Delete a Route

From the Main Menu:

1. Tap **Choose Destination > Multi-Stop Trips**.
The Multi-Stop Trips Window displays.
2. Tap on the **X** next to the route to be deleted.
3. A confirmation message displays.
4. Tap:
 - **Yes** to delete the route.
 - **No** to keep the route.
5. The Multi-Stop Trips Window redisplay.

If you tapped Yes, the selected route has been removed.



Optimize Routes

 
Optimize a Route Manually

1. Tap **Choose Destination > Multi-Stop Trips**.
The Multi-Stop Trips Window displays.
2. Tap on the route you want to optimize.
The Route Stop Window displays.
3. Tap **Reorder Trip**.
The Select Reorder Option Window displays.
4. Tap **Manual**.
The Reordering <Route Name> Window displays
5. Tap on the stop to be moved and tap:
 - ▲ To move the stop up in the route.
 - ▼ To move the stop down in the route.
6. When finished, tap **OK**.
The Route Stop Window redisplay.

Select Reorder Option Window



Reordering <Route Name> Window

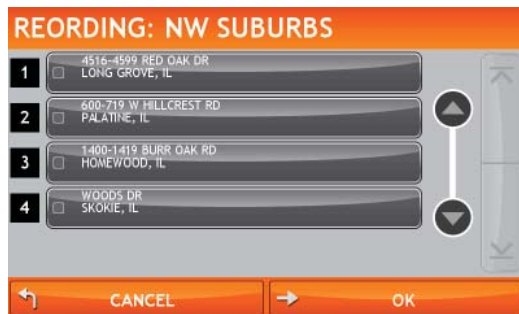

7. Tap **Start Trip** to begin the route.

Optimize a Route Automatically

After all locations have been added to a multi stop route, you can run the optimizer wizard to organize your trip.

From the Main Menu:

1. Tap **Choose Destination > Multi-Stop Trips**.
The Multi-Stop Trips Window displays.

2. Tap on the route you want to optimize.
The Route Stop Window displays.

3. Tap **Reorder Trip**.
The Select Reorder Option Window displays.

4. Tap **Automatic/Optimize**.
The First Stop Window displays.

5. Tap:
 - **Select First Stop** and select the first stop, or
 - **No Preference**.

The Last Stop Window displays.

6. Tap:
 - **Select Last Stop** and select the last stop, or
 - **No Preference**.

The Return to Current Location Window displays

7. Tap:
 - **Yes** to return to your current location to complete the route.
 - **No** to complete the route at the last stop.

The Route Stop Window redisplay.

 
8. Tap **Start Trip** to begin the route.

Note: There is a limit of ten stops that can be optimized.

Select Reorder Option Window



Reordered Route Stop Window

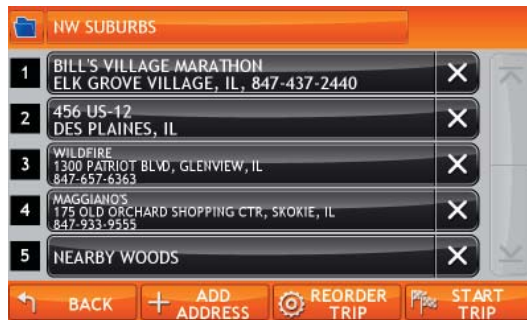

Destination Confirmation Windows

Address Confirmation Window



Address Confirmation Window

- 1 Destination Address**
The selected location address.
- 2 Begin New Route**
Tap to begin routing to destination.
- 3 Add as Via**
Add this location as an interim stop between the origin and destination.
- 4 Save to Address Book**
Add the location to the Address Book.
- 5 Atlas**
View Rand McNally Motor Carriers' Road Atlas. "P" refers to the Road Atlas page number. The letter-number combination refers to the grid location.
- 6 Go to Map**
Tap to view this location on a map.
- 7 Back**
Tap to return to previous window.
- 8 Set Origin**
Tap to set the location as the start of a route.
- 9 Menu**
Tap to return to the Main Menu.

Consumer Point of Interest Confirmation Window

Consumer Point of Interest Confirmation Window



- 1 Destination Address**
The selected location address.
- 2 Begin New Route**
Tap to begin routing to destination.
- 3 Add as Via**
Add this location as an interim stop between the origin and destination.
- 4 Save to Address Book**
Add the location to the Address Book. See “Address Book” on page 57.
- 5 Atlas**
Cross-reference to printed Rand McNally Motor Carriers’ Road Atlas. “P” refers to the Road Atlas page number. The letter-number combination after that refers to the grid location
- 6 Go to Map**
Tap to view this location on a map.
- 7 Back**
Tap to return to previous window.
- 8 Set Origin**
Tap to set the location as the origin in a route.
- 9 Menu**
Tap to return to the Main Menu.

Truck-Related Point of Interest Confirmation Window

Truck-Related Point of Interest (POI) Confirmation Window



- 1 Destination Address**
The selected location address.
- 2 Begin New Route**
Tap to begin routing to destination.
- 3 Services**
Tap to view trucker amenities at this location.
- 4 POI Rating**
Tap to rate amenities at this location.
- 5 Add as Via**
Add this location as an interim stop between the origin and destination.
- 6 Save to Address Book**
Add the location to the Address Book. See “Address Book” on page 57.
- 7 Atlas**
Cross-reference to printed Rand McNally Motor Carriers’ Road Atlas.
- 8 Go to Map**
Tap to view this location on a map.
- 9 Back**
Tap to return to previous window.
- 10 Set Origin**
Tap to set the location as the origin in a route.
- 11 Menu**
Tap to return to the Main Menu.

 
Address Book Confirmation Window

Address Book Confirmation Window



- 1 Destination Address**
The selected location address.
- 2 Begin New Route**
Tap to begin routing to destination.
- 3 Edit Entry**
Tap to edit the location address book entry.
- 4 Note**
Tap to create a note about the location.
- 5 Add as Via**
Add this location as an interim stop between the origin and destination.
- 6 Atlas**
Cross-reference to printed Rand McNally Motor Carriers' Road Atlas.
- 7 Go to Map**
Tap to view this location on a map.
- 8 Back**
Tap to return to previous window.
- 9 Set Origin**
Tap to set the location as the origin in a route. This can be used for routes that start from somewhere other than the last known location.
- 10 Menu**
Tap to return to the Main Menu.

Maps

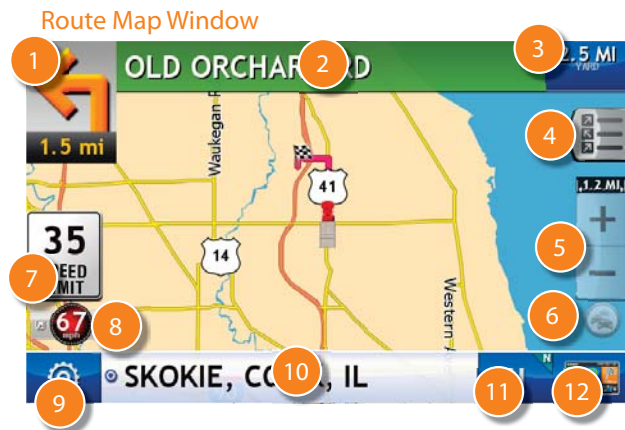

Route Map Window

- 1 Next Maneuver**
Tap to repeat spoken next maneuver instructions
- 2 Road Name**
The name of street you will turn onto next.
- 3 Miles/Time**
Tap to select current time and remaining distance.
- 4 Slide Out List**
Tap to select a route display option. Options include Detail view (turn-by-turn instructions), Highway View (highways list), Trip Summary (route legs), or Summary Map View (complete route map).
- 5 Zoom In/Zoom Out**
Tap **+** to zoom in and show greater detail on a smaller map or tap **-** to zoom out to show less detail on a larger map.
- 6 Traffic**
Tap to view the Traffic Window.
- 7 Speeds**
Posted speed limit (above) and current speed.
- 8 Virtual Dashboard**
Tap on the current speed to display the Virtual Dashboard.
- 9 Options**
Tap to see current location information, change route settings, or detour.
- 10 Road Information**
Tap to view the current road information. See "View Current Road Information" on page 83.

11 Map Display

Tap to change the map display. An icon in the upper right button corner displays the selected option: North up (N), heading up (arrow), or 3D (3).

12 Main Menu

Tap to return to Main Menu.

Slide-Out List

Detail View

Route Option - Detail View



- 1 Altitude**
Displays the altitude of current vehicle location.
- 2 MPH**
Displays the current vehicle speed, in miles per hour.
- 3 Rise/Set**
Displays the times of sunrise and sunset for your current location.
- 4 Odom1, Odom 2**
Displays odometer readings.
- 5 Distance**
Displays the distance to the next maneuver and the type maneuver performed.
- 6 Street/Road Name**
Displays the street name you will be on after performing the next maneuver.
- 7 Route Options**
Tap to select another route display option.
- 8 Up/Down**
Tap to scroll up and down to view the list of maneuvers. Tap on any item in the list to view it on the map.

Route Option - Highway View)



Highway View

- 1 Altitude**
Displays the altitude of current vehicle location.
- 2 MPH**
Displays the current vehicle speed, in miles per hour.
- 3 Rise/Set**
Displays the times of sunrise and sunset for your current location.
- 4 Odom1, Odom 2**
Displays odometer readings.
- 5 Distance**
Displays distance to next road.
- 6 Street/Road Name**
Displays the name of the next road.
- 7 Route Display Options**
Tap to select another route display option.
- 8 Up/Down**
Tap to scroll up and down to view the list of maneuvers. Tap on any item in the list to view it on the map.

 
Route Option - Route Summary



Route Summary

- 1 Total Distance**
Total distance for the entire trip.
- 2 Total Time**
Total time to complete the entire trip.
- 3 Leg**
Number of the leg and distance.
- 4 Leg Destination**
Leg destination.
- 5 Route Display Options**
Tap to select another route display option.
- 8 Up/Down**
Tap to scroll up and down to view the list of maneuvers. Tap on any item in the list to view it on the map.

Route Option - Summary Map View

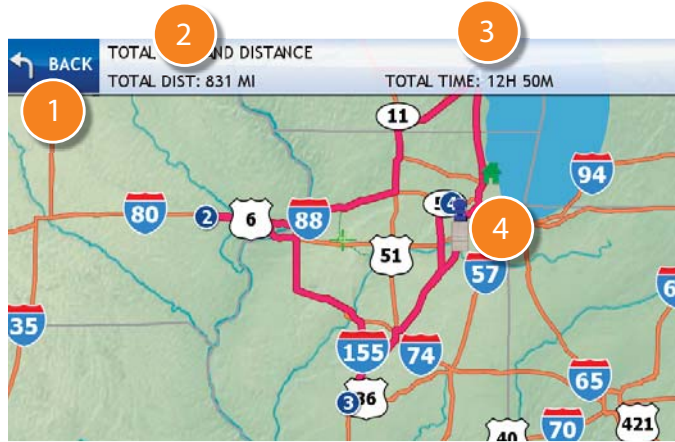






Summary Map View

- 1 Back**
Tap to return to the Route Map Window.
- 2 Total Dist**
Total distance for the entire trip.
- 3 Total Time**
Total time to complete the entire trip.
- 4 Vehicle Location**
Current vehicle location on the route.

Select a Route Display Option

When first opened, the slide out list displays in Detail View.

 
While navigating a route:

1. Tap  to display slide out list.
The Slide Out List displays Detail View.
2. To change the route option, tap .
3. On the Route Display Mode, tap on a view.
4. The map displays the selected view.
5. Use  and  to view the instructions.
6. To hide the slide out list, tap .


Route Option - Detail View



Route Display Mode Window

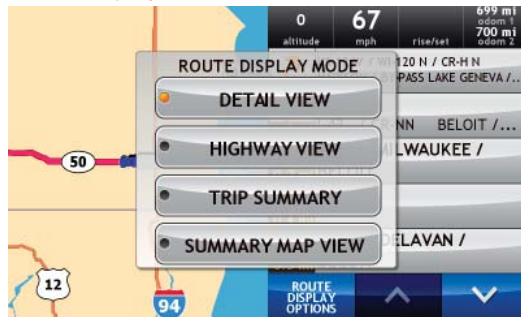


Route Option - Highway View

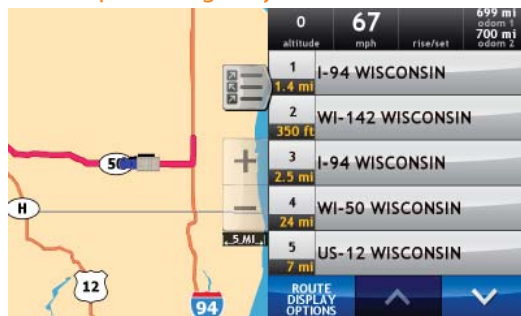 

Current Road Information

On the Route Map Window, the Road Information field lets you view information on the road you are currently on.

 Road Info Field

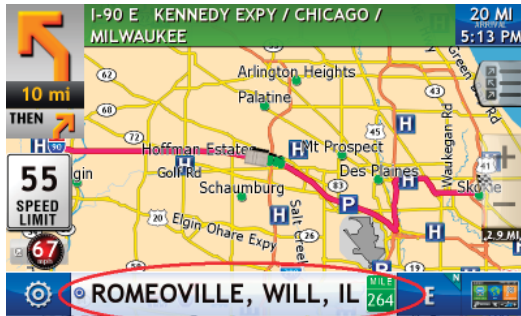

Information includes:

City, county, and state



Current road name



Next intersecting street name



View Current Road Information

1. Create a route or load a trip.

On the Route Map Window

The city, county and state display in the Road Information field.

2. Tap on the Road Information field.
Current road information displays.
3. Tap on the Road Information field again.
Next intersecting street name displays.
4. Tap the Road Information field again to redisplay the city, county, and state information.

Junction View

When on a route, Junction View displays when you have an upcoming maneuver. Once past the maneuver, Junction View closes and the previous window displays.

 
Once you've driven past the junction, the previous window redisplay.



- 1 Current Highway**
The highway you are currently on.
- 2 Next Highway**
The highway you will be on after the next maneuver.
- 3 Lanes**
Number and direction of lanes for the next maneuver.
- 4 Miles**
Number of miles to the upcoming maneuver. Distance decreases as you approach the ramp.
- 5 Back**
Tap to return to the Route Map Window.

Virtual Dashboard

When using the virtual dashboard on a route, the virtual dashboard closes and the Junction View displays an upcoming maneuver. Once past the maneuver, the virtual dashboard redisplay.

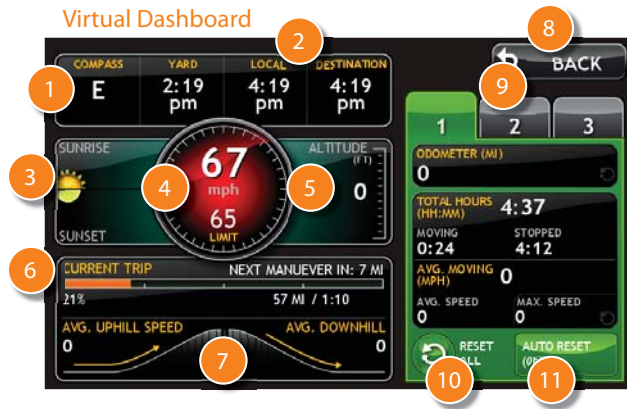

- 1 Direction**
Current direction of travel.
- 2 Times**
Local times at the yard, current location, and your destination.
- 3 Sunrise/Sunset**
Sunrise/Sunset time based on vehicle location (latitude/longitude) and day.
- 4 Speeds**
Current speed (above) and posted speed limit (below).
- 5 Altitude**
Current location altitude.
- 6 Current Trip**
Percentage of current trip completed, distance to next maneuver, and the number of miles and time spent on the trip to this point.
- 7 Average Speeds**
Average uphill and downhill speeds.
- 8 Back**
Return to the Route Map Window.
- 9 Tab 1, Tab 2, Tab 3**
Gather trip information for up to three trips. Includes odometer settings, hours, and speeds.
- 10 Reset All**
Reset trip information for the selected trip (**Tab 1**, **Tab 2** or **Tab 3**).
- 11 Auto Reset**
Select to reset the information in all three tabs after the vehicle has remained stationary for the specified number of hours.

Virtual Dashboard - Show/Hide



Show/Hide the Virtual Dashboard

1. Create a route or load a trip.

On the Route Map Window:

2. To show, tap the **Current Speed** field.
The Virtual Dashboard displays.
3. To hide, tap the **Back** button to return to the Route Map Window.

Virtual Dashboard - Trip information



Gather Trip Information

1. Create a route or load a trip.

On the Route Map Window:

2. Tap the Current Speed field.
The Virtual Dashboard displays.
3. Tap on a tab (**Tab 1**, **Tab 2**, or **Tab 3**).
4. If necessary, tap **Reset All** to set the odometer for the selected tab back to zero.
5. Drive the route as usual.
Information is captured as you travel the route.

Virtual Dashboard - Show/Hide



Automatically Reset Trip Information

On the Route Map Window:

1. Tap the **Current Speed** field.
The Virtual Dashboard displays.
2. Tap on the tab you want to reset automatically.
3. Tap **Auto Reset**.
The Auto Reset window displays.
4. To reset trip information after the vehicle has remained stationary after a specific number of hours:

- Tap **+** to increase the number of hours.
- Tap **-** to decrease the number of hours.

To save changes, tap **Change**.

 
The Virtual Dashboard redisplay.

The Tab displays the auto reset number of hours.

Virtual Dashboard - Auto Reset Off



Virtual Dashboard - Auto Reset Window

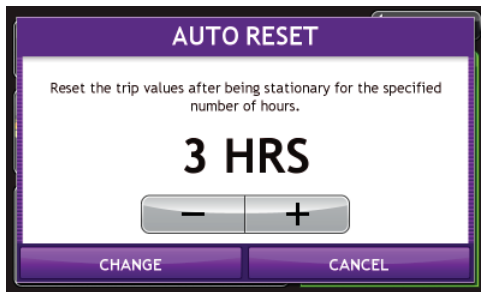

Virtual Dashboard - Auto Reset On




Detours

Detour Around Part of the Route

Use this procedure to recalculate a route to avoid the next several miles on the route.

Note: To detour around a specific roadway, see “Detour Around a Specific Roadway” on page 89.

While navigating a route:

1. Tap  .
The Location Route Options Window displays.
2. Tap **Detour**.
The Detour Window displays.
3. On the left side of the window, tap the number of miles on the route to be avoided.

A new route is calculated and the Route Map Window redisplay.

Route Map Window



Location Route Options Window







Detour Window



Detour Around a Specific Roadway

Use this procedure to recalculate a route to avoid, if possible, a specific roadway.

While navigating a route:

1. Tap .
The Location Route Options Window displays.
2. Tap **Detour**.
The Detour Window displays.
3. On the right side of the window, tap  and  to view a list of roads in the current route.
4. Tap on one or more roadways to be avoided.
A yellow checkmark  appears in front of each selected road.
5. Tap **Detour** to recalculate the route.
A new route is calculated and the Route Map Window redisplay.

Route Map Window



Location Route Options Window



Detour Window




Detail View Detour Options



Detour Using the Detail View Map Display Option

While navigating a route:

1. Tap  to display slide out list.
2. Tap on the maneuver you want to avoid.
3. Tap **Detour**.

A new route is calculated avoiding (if possible) the selected maneuver.


The Turn-by-Turn list redisplay, showing the new route.

Highway View Detour Options



Detour Using the Highway View Map Display Option

While navigating a route:

1. Tap  to display slide out list.
2. Tap on the highway you want to avoid.
3. Tap **Detour**.
4. On the Detour popup window, tap on the length of highway you want to avoid.
5. Tap **Back**.

A new route is calculated avoiding (if possible) the selected length of highway.

The slide out list redisplay, showing the new route.

Cancel a Route

While navigating a route:

1. Tap .

The Location Route Options Window displays.

2. Tap **Cancel Route**.

The route is cancelled and the Route Map Window displays your current location.

Route Map Window



Location Route Options Window



Traffic

Traffic Window



Traffic Window

- 1 Avoid Traffic**
Tap to select either a recalculated route based on traffic events or to stay on the current route.
- 2 Traffic on Route**
Tap to view traffic events along your route..
- 3 Traffic List**
Tap to view a list of traffic events within receiver range.
- 4 Back**
Tap to return to the Route Map Window.
- 5 Off/Predicted Traffic/Real-Time Traffic**
Tap to select Predicted Traffic, Real-Time Traffic or to turn traffic reporting off.
Note: Real-Time traffic is an optional service.
- 6 Menu**
Tap to return to the Main Menu.

Route Map Window - Traffic Icon



Access the Traffic Window

On the Route Map Window:

- Tap the Traffic icon.

The Traffic Window displays.

Predicted Traffic

With predicted traffic, you can view traffic patterns on a route. You can select the day of the week and time and view traffic events.



You can use this to view traffic patterns for a specific roadway for a day and time.

View Predicted Traffic Information

On the Traffic Window:

1. Tap the Off/Predicted/Real-Time Traffic button to display “Predicted Traffic”.

The Predicted Traffic window displays.

2. Tap on the day of week (SU, MO, TU, WE, TH, FR, or SA)
3. Use the  and  buttons to select a time.
4. To view distance and arrival time for an alternate route or the current route tap **Avoid Traffic**.
 - To select a detour, tap **Use Alternate Route**.
 - To stay on the current route, tap **Stay on Current Route**.
5. To view predicted traffic events on your route, tap **Traffic on Route**.
6. To view a list of predicted traffic events within the area, tap **Traffic List**.

Traffic Window



Predicted Traffic - Avoid Traffic Window



View Real-Time Traffic

Note: Real-time traffic is available as an optional service.

With the Real-Time Traffic service you'll receive notification of traffic conditions and events. You can choose to ignore the warning or to recalculate a route avoiding the problem.

To use this feature, you must purchase a Rand McNally Real-Time Traffic Receiver. The receiver also comes with a lifetime traffic subscription.

For more information, see the Rand McNally Commercial Transportation Website.

Sample Real-Time Traffic Window



Truck Tools



Truck Tools Window

Note: Truck Tools are only available in Truck mode. See “Select Truck or Car Mode” on page 21.

- 1 Back**
Return to the Main Menu.
- 2 Truck Info**
Enter truck information (weight, length, etc.).
- 3 Timers and Logs**
View driving, on-duty, and maintenance timers or state logs.
- 4 Warnings**
Set warning distances for driving time, duty hours, and weigh stations.
- 5 Quick Planner**
Calculate distance, driving time, and cost between two major cities.
- 6 Rand Motor Carrier’s Road Info**
View Rand McNally Truck Emergency contact information.
- 7 Tell Rand**
Compose a message that will be sent to Rand McNally next time you connect to TND Dock.
- 8 Calendar**
View a calendar on the TND.
- 9 Notepad**
Write down a note on the TND. Notes remain on the TND until deleted.
- 10 Converter**
Quickly convert distance, weight, and temperatures.
- 11 Calculator**
Use a large key calculator.

Timers and Logs

Timers Window



Note: Odometers count up and record the current mileage. Maintenance counters count down. When a maintenance timer counts down to 2,000 miles, a reminder displays each time the TND starts.

Note: To avoid timer warnings, set the timer limits to a very high number.

View Timers and Odometer Readings

 
From the Main Menu:

1. Tap **Truck Tools** > **Timers and Logs**.
2. Tap the **Timers** tab.
The Timers Window displays.
3. Tap to **Back** return to the Truck Tools window.

Timers Window



Timer Reset Window

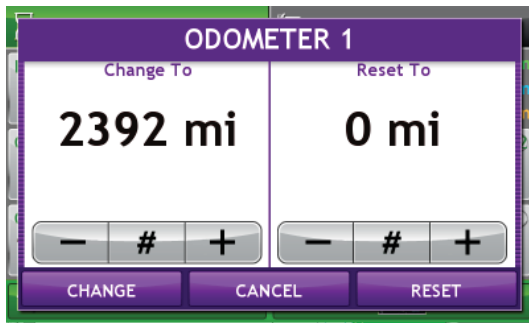

Change or Reset a Timer

From the Main Menu:

1. Tap **Truck Tools > Timers and Logs**.
2. Tap the **Timers** tab.
The Timers Window displays.
3. Tap on the timer to be reset.
The Timer Reset Window displays.


On the left, use the **Change To** field to make corrections to mileage or hours. The mileage/hours continue to count down from the changed value. This would be used occasionally if you need to make an adjustment to the current value.

On the right, use the **Reset** field to set the most common reset value, normally zero. At the beginning of each day or run, tap Reset to set the value back to zero for odometers and 15,000 or 35,000 for maintenance odometers.

4. To change the settings, in the **Change To** field:
 - Tap **-** to decrease the setting.
 - Tap **+** to increase the setting.
 - Tap **-** to display a keyboard and enter a number and tap **Enter**.
5. Tap **Change**.
6. To reset the settings, in the **Reset To** field:
 - Tap **-** to decrease the setting.
 - Tap **+** to increase the setting.
 - Tap **#** to display a keyboard and enter a number and tap **Enter**.
7. Tap **Reset**.

View Driver Logs

 
From the Main Menu:

1. Tap **Truck Tools > Timers and Logs**.
The Timers Window displays.
2. Tap the **Logs** tab.
The Logs Window displays.
A list of logs for the current year, ordered by quarter displays.
3. To view quarterly logs for previous years, tap **Year**.
4. Tap on a quarter to view log entries.
The Log Entries Window displays.
5. To view log entries by:
 - State, tap **View by State**.
 - Date, tap **View by Date**.
6. To view log entries by load option:
 - Empty only, tap **Empty**.
 - Loaded only, tap **Loaded**.
7. When finished:
 - Tap **Back** to return to a list of logs by quarter for the selected year.
 - Tap  to return to the Main Menu.

Logs Window



Log Entries Window - by Date

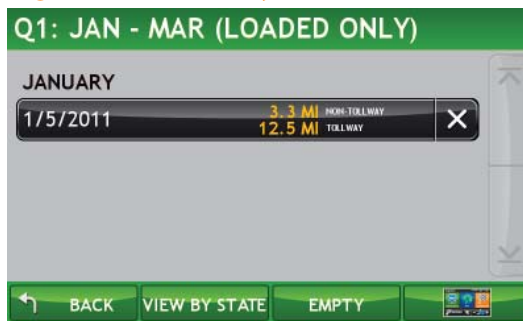


Log Entries Window - by State



Delete a Driver Log

From the Main Menu:

1. Tap **Truck Tools > Timers and Logs**
The Timers Window displays.
2. Tap the **Logs** tab.
The Logs Window displays.
3. A list of logs for the current year displays, ordered by quarter.
4. To view quarterly logs for previous years, tap **Year**.
5. Tap on a quarter to view log entries.
The Log Entries Window displays.
6. To view log entries:
 - By state, tap **View by State**.
 - By date, tap **View by Date**.
7. Tap on the  next to the log entry to be deleted.
A confirmation message displays.
8. Tap **Yes** to delete the log.
The Logs Detail Window displays and the log has been deleted.
9. Tap **Back** to return to the Truck Tools window.

Logs Window







Log Entries Window

 


Set Warnings

From the Main Menu:

1. Tap **Truck Tools** > **Warnings**.
The Warnings Window displays
2. Tap  and  to view the options.
3. Tap the warning to be set.
4. Tap  and  to specify the number of miles or hours.
5. Tap **Back** to save changes.

Warnings Window

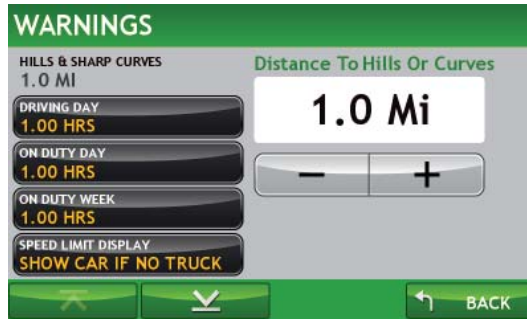

Calculate a Mileage and Driving Time

Note: This tool is not available for all locations. Use this tool to quickly estimate the mileage and time between one major city to another major city in North America.

From the Main Menu:

1. Tap **Truck Tools > QuickPlanner**.
The Quick Planner Window displays.
The revenue or cost per mile used in the last computation displays.
2. Tap **From City 1** and select the city.
3. Tap **To City 2** and select the city.
4. Tap **Revenue or Cost per Mile** and enter the per mile rate.
The Enter Amount Window displays.
5. Tap the new dollar amount and tap **Enter**.
6. Tap **Average Speed (MPH)** enter a speed:
 - Tap **-** and **+** to decrease or increase the speed.
 - Tap **#** to enter a speed.
7. The Quick Planner Window redisplay and shows the updated costs and driving time.

Quick Planner Window

QUICK PLANNER

From City 1 (Major cities only)

To City 2 (Major cities only)

Distance: **0 mi** Driving Time: **0h 00m**

Revenue Or Cost Per Mile: **\$1.20** Average Speed (Mph): **55**

Total: **\$0.00**

BACK

Enter Amount Window

ENTER THE AMOUNT:

\$3.72 MENU

1 2 3

4 5 6

7 8 9

0 DEL ENTER

Enter Amount Window

AVERAGE SPEED

Change To

55

- # +

CHANGE CANCEL

QUICK PLANNER

From City 1 (Major cities only)
DETROIT, MI

To City 2 (Major cities only)
CHICAGO, IL

Distance: **283 mi** Driving Time: **5h 08m**



Revenue Or Cost Per Mile: **\$0.01** Average Speed (Mph): **55**

Total: **\$3.72**

BACK

View Rand MCRA Atlas Information

From the Main Menu:

1. Tap **Truck Tools** > **Motor Carrier's Road Info**.
The Rand MCRA Window displays.
2. Select the appropriate country tab.
The State List (USA.), Province List (Canada) or Mexico displays.
3. Tap on the appropriate U.S. state or Canadian province.
Tap Mexico to see emergency information in Mexico.
The Atlas Information Window for the selected location displays.
4. Use  and  to view all the information.

Note: Rand McNally will periodically provide text updates regarding changes to truck routing. If you see a discrepancy between posted routes and the route provided on the TND, this may explain the cause.

Rand MCRA Window



Atlas Information Window



Send a Message to Rand McNally

You can send a message to Rand McNally about updates such as road construction, updates to truck-restricted road information, etc.

To use this feature, you must install the TND Dock application on your computer. See "Install TND Dock Software" on page 125.

Send a Message About Your Current Location

 
From the Main Menu:

1. Tap **Truck Tools > Tell Rand**.
The Tell Rand McNally About Window displays.
2. On the left side of the window, tap **Current Location**.
Your current location appears below the buttons.
3. On the right side of the window, tap the type of message you want to send.
The Enter Message Window displays.
4. Type your message.
5. Tap **Enter** to save the message.
6. To discard the message and return to the previous window, tap **Back**.
The Tell Rand McNally About Window redisplay.


Note: You only need to enter a few brief words. You will be able to modify the message later in TND Dock, using your computer keyboard, before it is sent to Rand McNally.

Your message can be sent to Rand McNally the next time you connect your IntelliRoute® TND™ 710 to your computer and use TND Dock.

Tell Rand McNally About Window

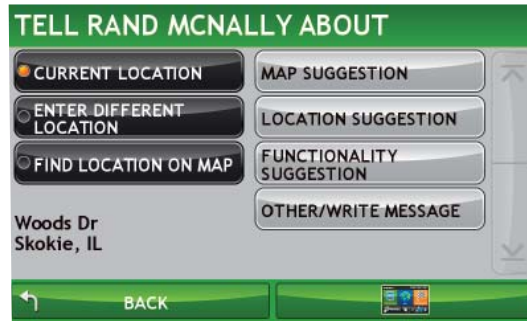

Enter Message Window

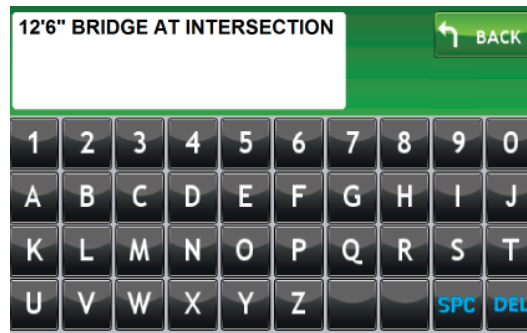 

Send a Message About a Different Location

From the Main Menu:

1. Tap **Truck Tools > Tell Rand**.
The Tell Rand McNally About Window displays.
2. On the left side of the window, tap **Enter Different Location**.
The Select Address Window displays.
3. Search for and select the location.
The selected location appears below the buttons on the Tell Rand McNally About Window.
4. On the right side of the window, tap the type of message you want to send.
The Enter Message Window displays.
5. Type your message.
6. Tap **Enter** to save the message.

To discard the message and return to the previous window, tap **Back**.
The Tell Rand McNally About Window redisplay.

Note: You only need to enter a few brief words here, since you will be able to modify the message later in TND Dock, using your computer keyboard, before it is sent to Rand McNally.

Your message can be sent to Rand McNally the next time you connect your IntelliRoute® TND™ 710 to your computer and use TND Dock.

 
Tell Rand McNally About Window



Select Address Window



Enter Message Window

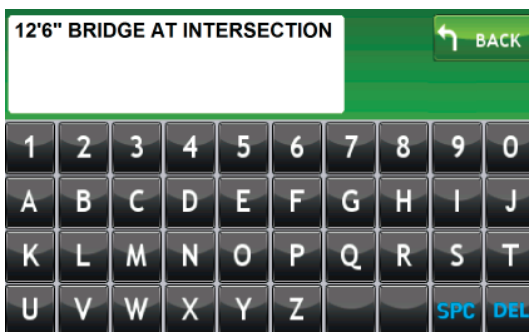


Send a Message About a Location on the Map

From the Main Menu:

1. Tap **Truck Tools > Tell Rand**.
The Tell Rand McNally About Window displays.
2. On the left side of the window, tap **Find Location on Map**.
The Map Window displays.
3. Move the cursor to the location and tap **Back**.
The selected location appears below the buttons on the Tell Rand McNally About Window.
4. On the right side of the window, tap the type of message you want to send.
The Enter Message Window displays.
5. Type your message.
6. When finished, tap **Enter** to save the message.
To discard the message and return to the previous window, tap **Back**.
The Tell Rand McNally About Window redisplay.

Your message can be sent to Rand McNally the next time you connect your IntelliRoute® TND™ 710 to your computer and use TND Dock.

 
Tell Rand McNally About Window

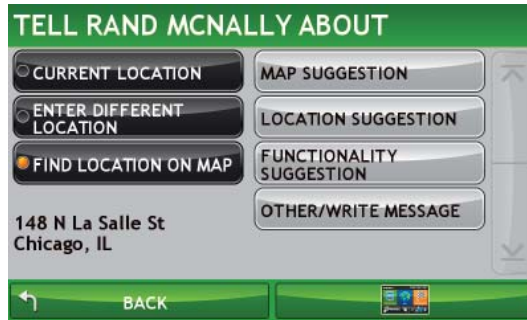

Map Window



 Enter Message Window

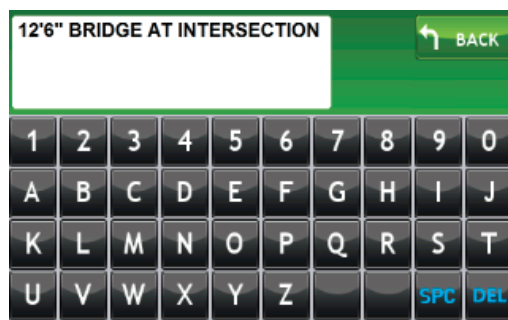


Use the Unit Converter


From the Main Menu:

1. Tap **Truck Tools > Converter**.
The Converter Window displays
2. Tap on the first field and select the type of conversion to perform.
The Converter Window redisplay.
3. Tap on the second field and enter the value to be converted.
4. Tap **Enter**.
The Converter Window redisplay and displays the converted value.

 
Converter Window

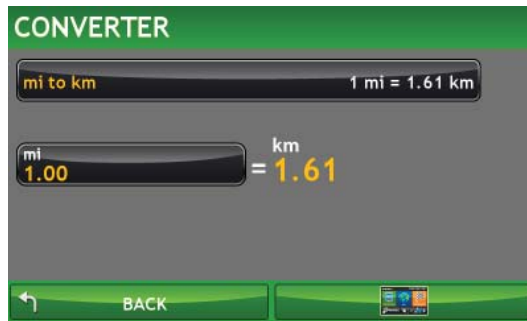

Conversion Types Window

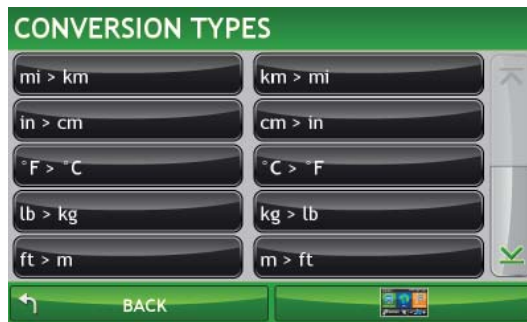 

Calculator

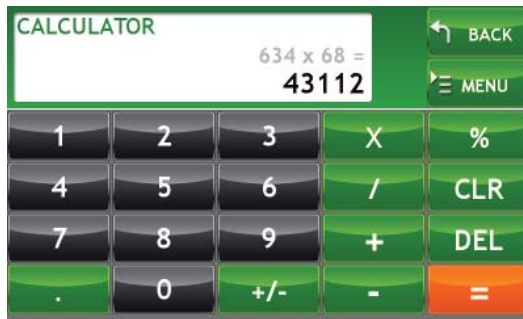 

Use the Calculator

From the Main Menu:

1. Tap **Truck Tools** > **Calculator**.
2. Tap:
 - **Back** to return to the Truck Tools Window.
 - **Menu** to return to the Main Menu.

Calendar



Use the Calendar

From the Main Menu:

1. Tap **Truck Tools** > **Calendar**.
The Calendar displays.
2. When finished tap **Back**.

Notes Window



Use the NotePad

Create a Note

From the Main Menu:

1. Tap **Truck Tools** > **NotePad**.

The Notes Window displays.

2. Tap **New Note** and type the new note.
3. When finished, tap **Enter** to save the note.

Edit an Existing Note

From the Main Menu:

1. Tap **Truck Tools** > **NotePad**.

The Notes Window displays.


2. Tap on an existing note and make the necessary edits.
3. When finished, tap **Enter** to save the changes

Delete a Note

From the Main Menu:

1. Tap **Truck Tools** > **NotePad**.

The Notes Window displays.

2. Tap on the  next to a message to delete.
3. On the confirmation message tap **Yes** to delete the message.

The Notes Window redisplay.

Customize

Truck Information Window



Truck Information

Note: Only available in Truck mode. See “Select Truck or Car Mode” on page 21.

To change these settings, from the Main Menu:

- Tap **Truck Tools** > **Truck Info**.

- Hazmat Type** Specify the load hazardous material type. Options are: None (not hazardous materials), Explosives, Gas, Flammable Liquids, Flammable Solids, Oxidizers, Poison, Radioactive, Corrosives, Other, and PIH.
- Weight** Use and to specify the truck weight.
- Height** Use and to specify the truck height.
- Width** Use and to specify the truck width.
- Trailers** Specify the type of trailer. Options are: Straight, 48', 53', Double and Triple.
- ETA Adjustment** Specify how arrival time should be estimated. Options are: ETA OK (no adjustment), Increase ETA Some, Increase ETA More, Decrease Some Time, and Decrease More Time.

Note: Rand McNally periodically provides text updates regarding changes to truck routing. If you see a discrepancy between posted routes and the route provided by the TND, this may explain the cause.

Vehicle Options (Truck or Car)

Note: If the mode is currently set to Car, the tab is labeled Car Mode.

To change these settings, from the Main Menu:

- Tap **Preferences** > **Truck** tab.

Vehicle Options Window (Truck)



Vehicle Options Window (Car)



Vehicle Type

Select the vehicle mode. Options are: Truck or Car. This option controls how routes are calculated. When the Car mode is selected, some truck-related features are not available. See “Select Truck or Car Mode” on page 21.

Yard Time Zone

Select the yard time zone. The IntelliRoute® TND™ 710 calculates time zones for the truck and destination based on this settings. Options are: Pacific Standard, Mountain Standard, Central Standard, Eastern Standard, Alaska Standard, or Hawaii Standard.

POI Icons

Specify whether consumer point of interest icons display on the map. Options are: POI Icons On or POI Icons Off. These are general interest POIs that display when the POI category More is selected and when you are zoomed in close enough to see them.

Note: Depending on the map display choice and zoom level, this can impact performance. In 3D display, POI display results in the slowest map redraw performance.

Truck POI Icons

Specify whether truck-related point of interest icons display on the map. Options are: POI Icons On or POI Icons Off. As these POIs may be farther apart, they display when zoomed farther out.

Speed Limit Alert

Specify the speed (in MPH) above the current posted speed limit when a warning will be issued.

State Border Alert

Specify when (in miles) to issue a warning when approaching a state border.

- Toll Booth Alert** Specify when (in miles) to issue a warning when approaching a toll booth.
- Update Driver Status**
Specify if the driver status will be changed automatically or can only be changed using the driver status buttons on the Main Menu.
Note: When in Automatic mode, tapping a driver status button on the Main Menu will temporarily override the automatic setting.
- Odometer Recording**
Specify whether the driving odometer readings increment only when the vehicle type is set to truck only or car only, or whether they increment regardless of vehicle type.
- Main. Odometer Recording**
Specify whether the maintenance odometer readings increment only when the vehicle type is set to truck only or car only, or whether they increment regardless of vehicle type.
- Mileage Log** Specify whether mileage logs increment only when the vehicle type is set to truck only or car only, or whether they increment regardless of vehicle type.
- Load Option** Specify whether mileage should be calculated with the truck empty, always loaded or whether to display a prompt for each route. When set to Prompt, each time you tap **Begin New Route**, a window displays asking if the truck is loaded or empty.

Route Options

Note: When a roadway (tollways, ferries, or freeways) or maneuver type (U-turns) is set to Avoid, a returned route may still include them. They're included if the only legal route found contains these types of roads or the route is over several hundred miles.

To change these settings, from the Main Menu:

- Tap **Preferences >Route** tab.

Routing Options Window



ETA Adjustment	Specify how arrival time should be estimated. Options are: ETA OK (no adjustment), Increase ETA Some, Increase ETA More, Decrease Some Time, and Decrease More Time.
Recalculation	Select whether reroute calculations will be performed manually or automatically.
Route	Select the type of route. Options are: Fastest Route (shortest travel time) or Shortest Route (shortest travel distance).
Tollways	Select whether highways are considered in a calculated route. Options are: Allow Tollways or Avoid Tollways. See note above.
Freeways	Select whether freeways are considered in a calculated route. Options are: Allow Freeways or Avoid Freeways.
U Turns	Select whether u-turns are considered in a calculated route. Options are: Allow U-Turns or Avoid U-Turns. See note above.
Ferries	Select whether ferries are considered in a calculated route. Options are: Allow Ferries or Avoid Ferries. See note above.

Cross Country Borders

Select whether roads crossing a country border are considered in a calculated route. Options are: Allow Crossing Country Borders or Avoid Crossing Country Borders. When set to Avoid, a route may still cross country borders if the only legal route contains roads that cross borders or if the route origin and destination are in different countries.

Dirt Roads

Select whether dirt roads are considered in a calculated route. Options are: Allow Dirt Roads or Avoid Dirt Roads. See note above.

Tunnels

Select whether tunnels are considered in a calculated route. Options are: Allow Tunnels or Avoid Tunnels. See note above.

Device Options


To change these settings, from the Main Menu:

- Tap **Preferences > Device** tab.

Device Settings Window



Adjust Screen Night Mode Darkness

Set the brightness level for night time screen display. Tap and drag the  to brighten or darken the screen display.

Day/Night Map Color

Select the default display mode for the device. Options are: Auto, Day Mode (the display uses brighter colors), Night Mode (the display uses darker colors) and Auto Mode (adjusts display for day or night viewing automatically).

Map Auto Zoom

Select how zoom out displays on the map. Options are: Off (no zoom) , On, Auto Scale (always zoom to keep the current vehicle position and the next turn in the map view), On, Street Scale (maximum zoom out to the local street level between turns), On, City Scale (maximum zoom out to the city level between turns, or On, County Scale (maximum zoom out to the county level between turns).
Note: Map redraw speed is impacted by autozoom choice, especially when combined with 3D map display option.

Keyboard

Select the type of keyboard to be used. Options are: ABC or Computer (QWERTY).

Voice Name

Select the voice to be used to issue spoken instructions.

Language

Select the language to be used to display on the device and issue spoken instructions.

Warning/Alert Prompts

Select the type of speed warning to be issued. Options are: Audio, Visual, Audio & Visual, or None. (See “Warning Options” on page 117 for more information on setting warnings.)

Auto Dismiss Warnings

Select when (in seconds) a warning message is automatically dismissed. Options are Never, After 10 Seconds, or After 30 Seconds.

Note: Warnings for height, weight and hazmat violations are not dismissed.

Units

Select how vehicle weight is displayed. Options are U.S. Standard or Metric.

Clock Setting

Select whether a 12 hour clock (with am and pm) or a 24 hour clock is set on the device.

Car Icon

Select the type of car icon and color to be used on the device when the vehicle mode is set to Car/Light Truck. With some icons, you can select from an infinite range of colors.

Truck Icon

Select the type of truck icon and color to be used on the device when the vehicle mode is set to Truck. With some icons, you can select from an infinite range of colors.

Tutorial & Tips

View a brief tutorial on how to use the TND as well as new features, Frequently Asked Questions (FAQs), and Tips to successfully use your device.

Align Screen

Calibrate the touch screen.

Note: Select this option if your TND seems to have buttons that are hard to tap. You may need to realign the screen after a software update using TND Dock.

GPS Data

View information on the current GPS fix.

About

View device information.

Traffic Receiver Status

Note: Real-Time traffic requires the purchase of an additional accessory.

View information related to the real-time traffic receiver.

Real Time Traffic Settings

Note: Real-Time traffic requires the purchase of an additional accessory.

Set to show real time traffic events related to flow only, incidents only, or both flow and incidents. Real time traffic can also be turned off.

Warning Options

To change these settings, from the Main Menu:

- Tap **Truck Tools** > **Warnings**.

Warnings Window



Note: Only available in Truck mode. See “Select Truck or Car Mode” on page 21.

Note: Also see the Warning option in “Vehicle Options (Truck or Car)” on page 110 for information on setting how warnings will be issued (visual, audio, visual and audio, etc.)

Hills & Sharp Curves

Specify when (in miles) to issue a warning before reaching a hill or sharp curve.

Driving Day

Specify when (in hours and minutes) to issue a warning before reaching your driving hours limit.

On Duty Hours

Specify when (in hours and minutes) to issue a warning before reaching your duty hour limit.

On Duty Week

Specify when (in hours and minutes) to issue a warning before reaching your duty week limit.

Speed Limit Display

Specify how speed limit information displays. Options are: None (speed limit never displays), Truck Only (Limited) (show truck speed limit if available), or Show Car if No Truck (show car speed limit if a truck speed limit is not available).

Speed Limit Alert

Specify when (in MPH) to issue a warning when exceeding the speed limit.

State Border Alert

Specify when (in miles) to issue a warning about an upcoming state border.

Crossing State Border/Time Zone Change Warning

Specify whether a warning is issued when crossing a state border to changing time zones.

- Toll Booth Alert** Specify when (in miles) to issue a warning about an upcoming tollbooth.
- Weigh Station** Specify when (in miles) to issue a warning about an upcoming weigh station.
- Construction Area** Specify when (in miles) to issue a warning about upcoming road construction.
- Speed Limit Change** Specify when (in miles) to issue a warning about a speed limit decreases.

Custom POI Locations

Note: This is an advanced feature for knowledgeable computer users. Please read the directions carefully.

You can create your own custom POI locations on your PC and send them to your TND. Then you can select them on your IntelliRoute TND.

Custom POI Information

You can enter custom POI locations in one of three ways. A custom POI file can contain all three methods of location entry.

Method 1 - Latitude/Longitude

- Latitude and Longitude (in decimal digits, NOT degrees/minutes/seconds)
- Name


Method 2 - Street Address

- Name
- Street Address
- Phone Number (optional)
- City, State, ZIP code, Country

Method 3 - All Information

- Latitude and Longitude (in decimal digits, NOT degrees/minutes/seconds)
- Location Name
- Phone Number (Optional)
- Street Address
- City, State, ZIP code, Country

Sample Custom POI Location File

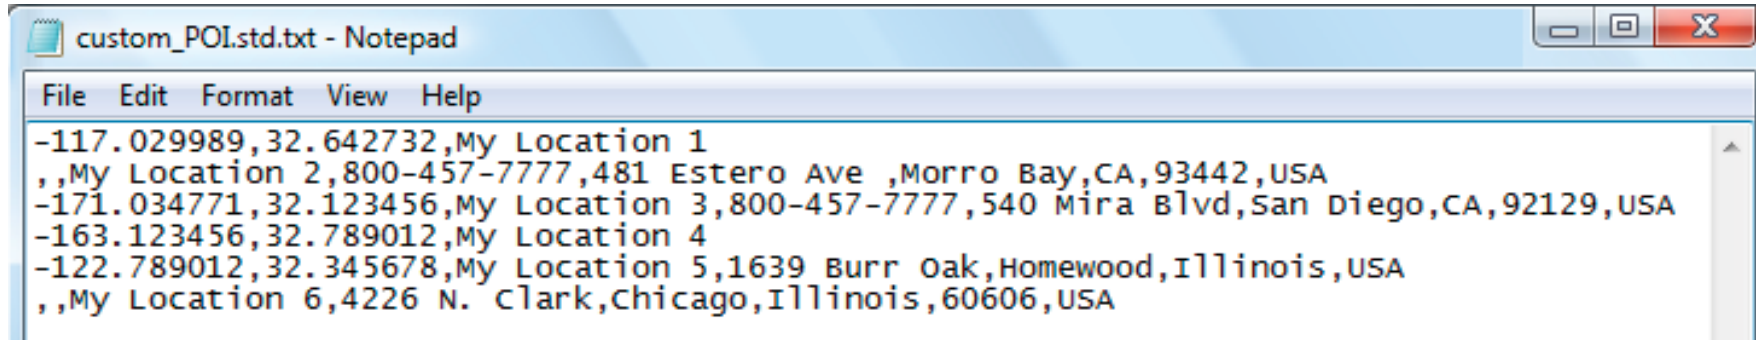

The image shows a Notepad window titled "custom_POI.std.txt - Notepad". The window contains the following text:

```
File Edit Format View Help
-117.029989,32.642732,My Location 1
,,My Location 2,800-457-7777,481 Estero Ave ,Morro Bay,CA,93442,USA
-171.034771,32.123456,My Location 3,800-457-7777,540 Mira Blvd,San Diego,CA,92129,USA
-163.123456,32.789012,My Location 4
-122.789012,32.345678,My Location 5,1639 Burr Oak,Homewood,Illinois,USA
,,My Location 6,4226 N. Clark,Chicago,Illinois,60606,USA
```

Using Commas and Spaces

When entering custom POI location information, each piece of information (like latitude, longitude or name) is separated by a comma. When entering location information, no space is allowed before or after the comma. Do not add a comma after the last field in a row.

For example, when entering a latitude, longitude, and name:

Correct: -117.3-905,34.04998,Devil Dogs, (latitude/longitude known)
 ,,Devil Dogs, (latitude/longitude unknown)

Incorrect: -117.30905 , 34.04998 , Devil Dogs, 0 ,
 Devil Dogs, , ,

Although spaces are not used before or after a comma, they are used within each piece of information (such as name, address, etc).

Some examples are:

- Home Depot (name)
- 999 Wicker Drive (address)
- West Virginia (state)

Create a Custom POI Location File

Use the following steps to create a custom POI location file.

1. Create a .txt or .csv file. (Use a standard text editor or spreadsheet program).
2. Name the file.
3. Save the file.

The file contains one line for each location.

See:

- “Add a Custom POI Location Method 1 (Latitude/Longitude)” on page 121.
- “Add a Custom POI Location Method 2 (Street Address)” on page 122.
- “Add a Custom POI Location Method 3 (Full Information)” on page 123.

Add a Custom POI Location Method 1 (Latitude/Longitude)

Note: Enter longitude first.

1. Enter the longitude followed by a comma(,)
2. Enter the latitude first followed by a comma (,)
3. Enter the location name.

Note: Do not add a comma after the location name .

4. When finished adding locations, save the file.
5. Send the file to your TND. See page 135.

Add a Custom POI Location Method 2 (Street Address)

1. Type two commas (,,).
2. Enter the name (with spaces) followed by a comma.
3. Provide the phone number.
 - Enter the phone number followed by a comma (,).
 - If you don't know the phone number, enter a comma (,).
4. Enter the street address followed by a comma (,).
5. Enter the city followed by a comma (,).
6. Spell the state name out (such as Illinois) followed by a comma (,).
7. Enter the country name followed by a comma (,).

Note: Do not add a comma at the end of the row.

8. When finished adding locations, save the file.
9. Send the file to your TND. See page 135.

Add a Custom POI Location Method 3 (Full Information)

Note: Enter longitude first.

1. Enter the longitude followed by a comma(,)
2. Enter the latitude first followed by a comma (,)
3. Enter the name (with spaces) followed by a comma.
4. Provide the phone number.
 - Enter the phone number followed by a comma (,).
 - If you don't know the phone number, enter a comma (,).
5. Enter the street address followed by a comma (,).
6. Enter the city followed by a comma (,).
7. Spell the state name out (such as Illinois) followed by a comma (,).
8. Enter the country name.

Note: Do not add a comma at the end of a row.

9. When finished adding locations, save the file.
10. Send the file to your TND. See page 135.

Update the Custom POI Location File

Custom POI locations can be added or changed at any time. When you update and transfer the file, the new file overwrites the existing file.

On your PC:

1. Open the .txt or .csv custom POI location file.
2. Add or change file entries. (See page 124.)
3. Save the file.
4. Send the file to your TND. See page 135.

Delete Custom POI Locations

On your PC:

 
 
 
1. Open the .txt or .csv custom POI location file.
2. Delete all but one line record.
3. Save the file.
4. Send the file to your TND. See page 135.

Troubleshooting

After transferring the custom POI location file to your TND, if you can not select a custom POI, see the following file:

- Custom_POI_ErrorLog.txt.

TND Dock

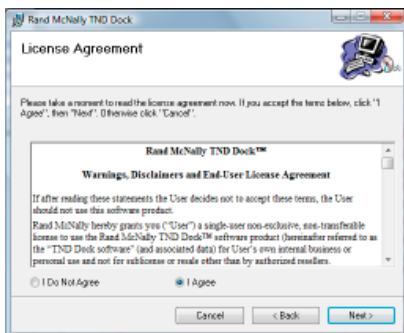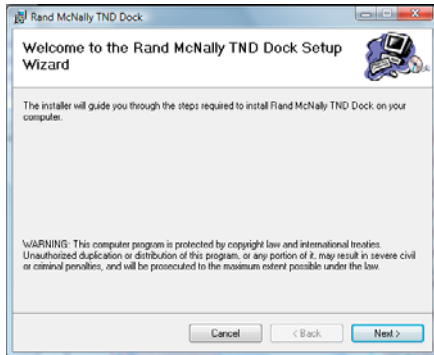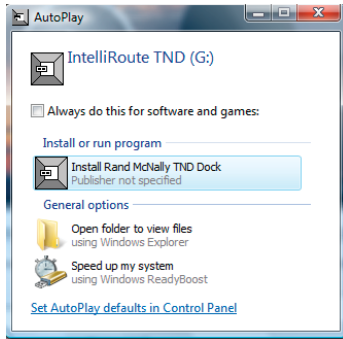

Install TND Dock Software

Note: If a “Transfer Music” message displays, click Cancel to close the message and continue the installation.

1. Turn on your IntelliRoute TND 710 and allow it to power up.
2. Connect the TND to your computer using the USB cable.

On the computer:

3. Click **Run Rand McNally TND Dock**

The Welcome to Rand McNally Setup Wizard displays.


4. Click **Next**.


The License Agreement Window displays.

5. Click on:


I Agree button and tap **Next** to continue installation.
I Do Not Agree and tap **Next** to end the installation.


6. Follow onscreen instructions to complete the installation.
When finished, the Installation Complete Window displays.

The TND Dock icon  displays in the system tray in the lower right corner of your screen.

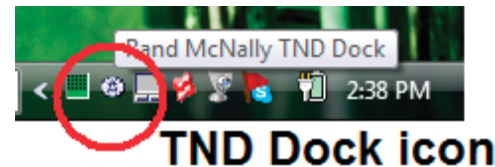 

TND Dock Main Window

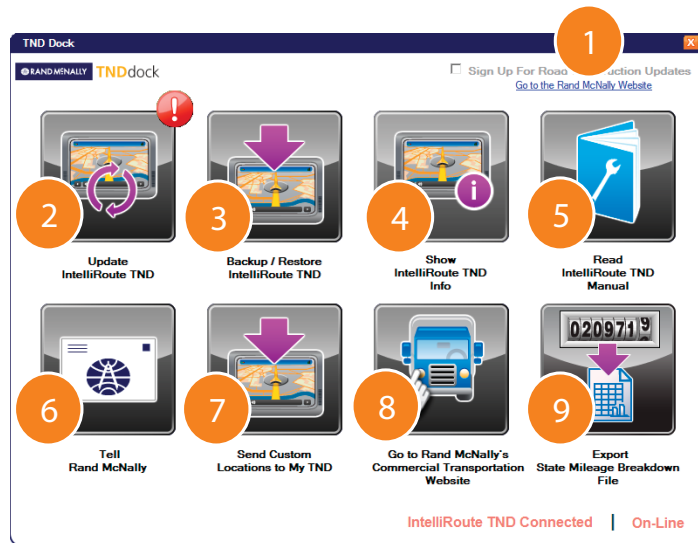 

- 1 Sign Up for Road Construction Updates**
Click on this checkbox to sign up to automatically receive road construction updates.
- 2 Go to Rand McNally Website**
Click to view the Consumer website.
- 3 Update IntelliRoute TND**
Click to update your IntelliRoute® TND™ 710 software.
- 4 Backup/Restore IntelliRoute TND**
Click to backup your TND data. This button is also used to restore backed up data to your device.
- 5 Show IntelliRoute TND Info**
Click to view device ID number and last software update date. When a software update is provided, select this option to view release notes on the changes. The IntelliRoute TND 710 must be turned on and connected via USB to view this information.
- 6 Read IntelliRoute TND Manual**
Click to view the IntelliRoute® TND™ 710 User's Guide.
- 7 Tell Rand McNally**
Click to send a message to Rand McNally.
An exclamation mark  indicates messages are ready to be sent. You can click this button to review and edit messages to Rand McNally.
- 8 Send Custom Locations to My TND**
Click to import a previously created .txt or .csv custom POI location file to your TND.
- 9 Go to the Rand McNally Commercial Transportation Website**
Click to view the Trucking website.
- 10 Export State Mileage Breakdown File**
Click to export state mileage data to a .xls or .csv file.

Sign Up for Road Construction Updates

 
On the TND Dock Main Window:

1. Click on the Sign Up for Road Construction Updates checkbox.

The Free Road Construction Updates Window displays.

2. Enter your e-mail address in the provided fields.
3. To receive additional offers and information, select:
 - Receive Rand McNally product offers.
 - Receive Rand McNally newsletter.
4. Click **Submit**.

The TND Main Window re-displays.

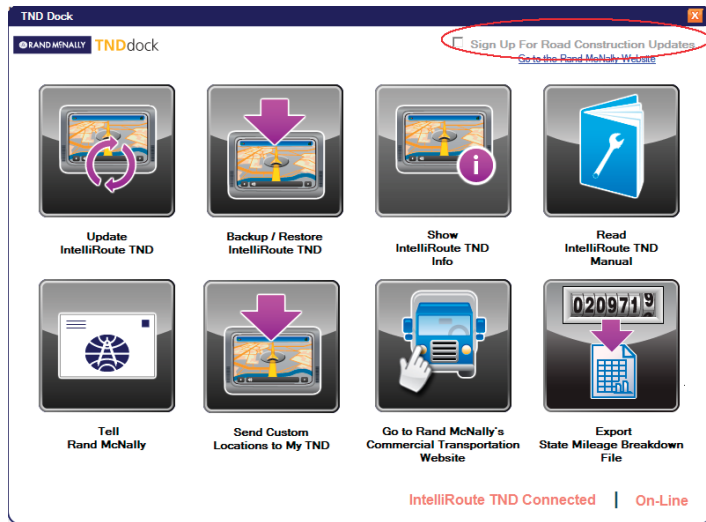


Go to The Rand McNally Consumer Website

Note: Connection to the internet is required to access the website.

On the TND Dock Main Window:


- Click on the **Go to the Rand McNally Website** link.

 The Rand McNally Consumer Home Page displays.

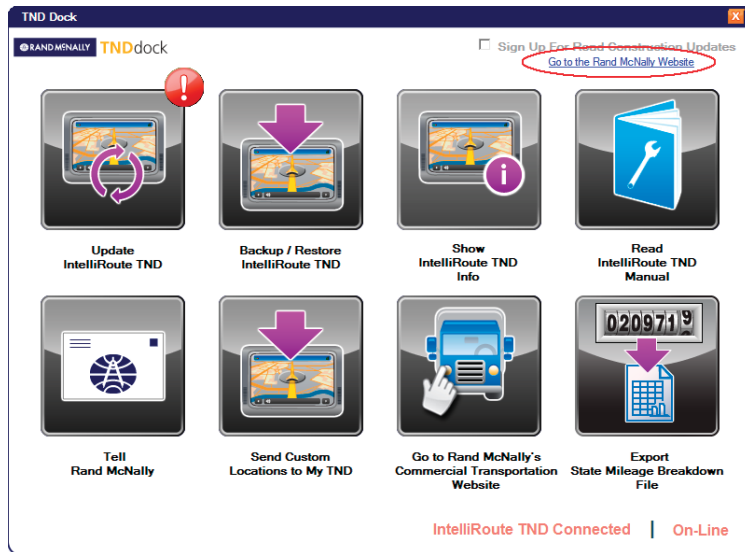



Check for IntelliRoute TND Updates

An exclamation mark  next to the Update IntelliRoute TND button indicates that updates for TND software are available. There will also be periodic updates to TND Dock.

You can retrieve software updates without being connected to the TND. After retrieving updates, you can later load them onto the TND without needing to connect to the internet.

On the TND Dock Main Window:

1. Roll your mouse pointer over the **Update IntelliRoute TND** button and click **Get Updates**.

The Updating TND Window displays and TND Dock checks for software updates.

 
2. If TND software updates are found, click **OK**.

The TND Updates Progress Bar displays as the updates are transferred to your device.

If TND Dock updates are found, a message displays.

3. Click **Yes** to update the software.
4. Follow on-screen instructions to complete the upgrade.
5. When finished, click **Close**.

The TND Main Window redisplay.

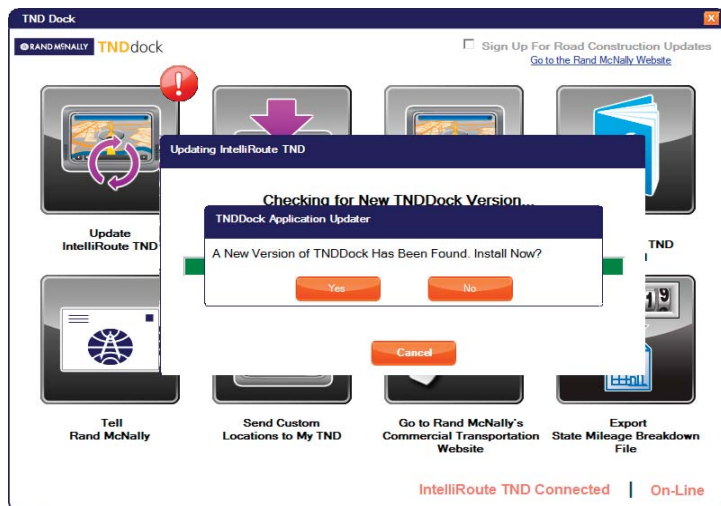



View IntelliRoute TND Information

These logs are part of Rand McNally's continuous improvement program and only contain information that can be used to diagnose software problems during device operation. No location, tracking or personal information is included.

On the TND Dock Main Window:

1. Click on the **Show IntelliRoute TND Info** button.
The IntelliRoute TND Info Window displays.
2. To send logs to Rand McNally, click on the **Send Logs** button.
The Send Logs to Rand McNally Window displays.
3. In the **Number of Days to Send** field, select how many days worth of information will be sent to Rand McNally.
4. Tap **Send**.
The TND Dock Main Window redisplay.
5. When finished, click **Done**.

  The TND Main Window redisplay.

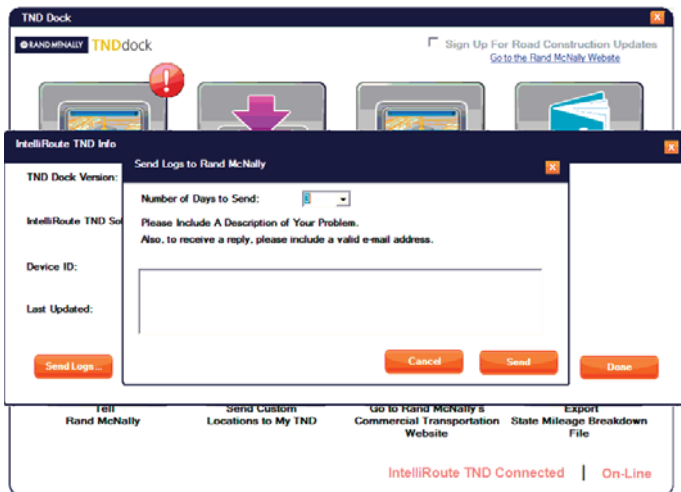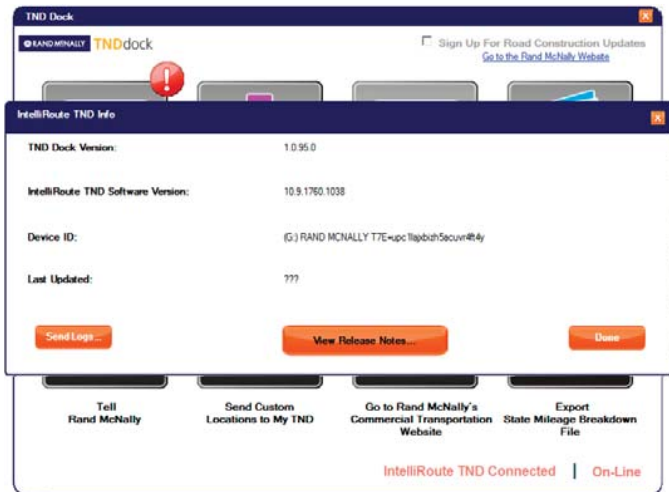

Backup TND Information

The backup is created on your personal computer. Internet access is not required to use this feature. Rand McNally respects your privacy and cannot access or back up your personal information.

On the TND Dock Main Window:

1. Roll your mouse pointer over the **Backup/Restore IntelliRoute TND** button and click **Backup My IntelliRoute TND**.
The TND Dock Window displays.
2. Click on the type of backup to be performed:
 - **Select All** - Back up the device software and personal data, such as trips and address book.
Note: A full backup can take 1-2 hours to complete.
 - **OK** - Back up only personal data, such as trips and address book.
 - **Cancel** - Cancel and return to the TND Main Window.

 
 
The Backing Up Your TND Progress Bar Window displays.

NOTE: DO NOT DISCONNECT YOUR UNIT DURING THIS PROCESS OR YOUR UNIT COULD BECOME INOPERATIVE.

When finished, a message displays.

3. Click **OK**.

The TND Main Window redisplay.

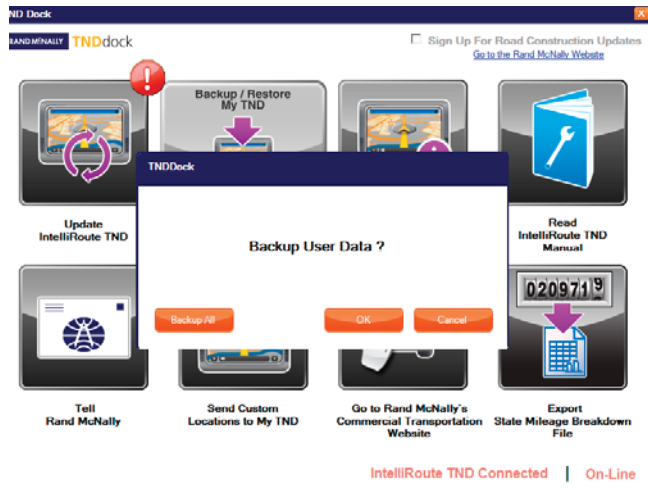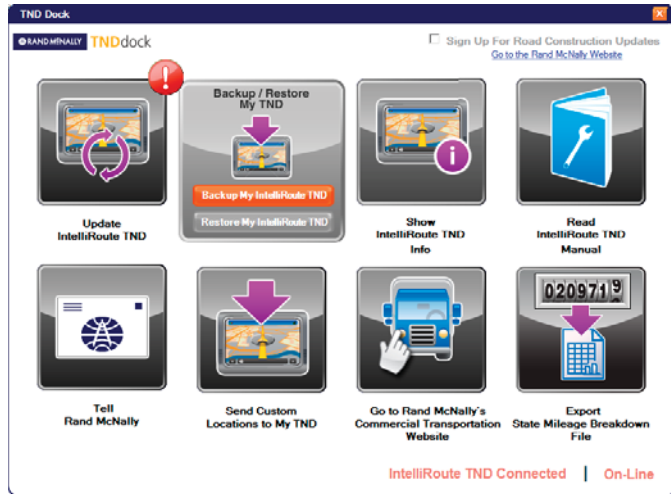

Restore TND Information

On the TND Dock Main Window:

1. Roll your mouse pointer over the **Backup/Restore IntelliRoute TND** button and click **Restore My IntelliRoute TND**. The Restore1 Window displays.
2. Click on the type of restore to be performed:
 - **Restore All** - Restore device software and personal data, such as trips and address book.

Note: Select the Restore All option only when instructed to do so by Rand McNally Customer Support Personnel.

 - **OK** - Restore only personal data, such as trips and address book.
 - **Cancel** - Cancel and return to the TND Main Window.

 
The Restore TND Progress Bar Window displays.

 
NOTE: DO NOT DISCONNECT YOUR UNIT DURING THIS PROCESS OR YOUR UNIT COULD BECOME INOPERATIVE.

When finished, a message displays.

3. Click **OK**.

The TND Main Window redisplay.

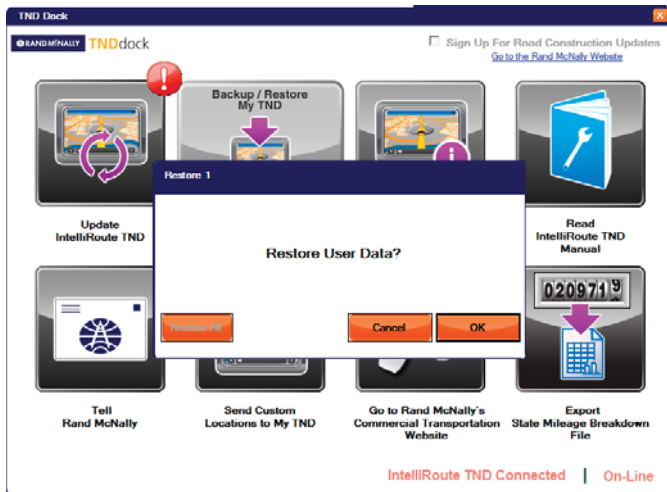

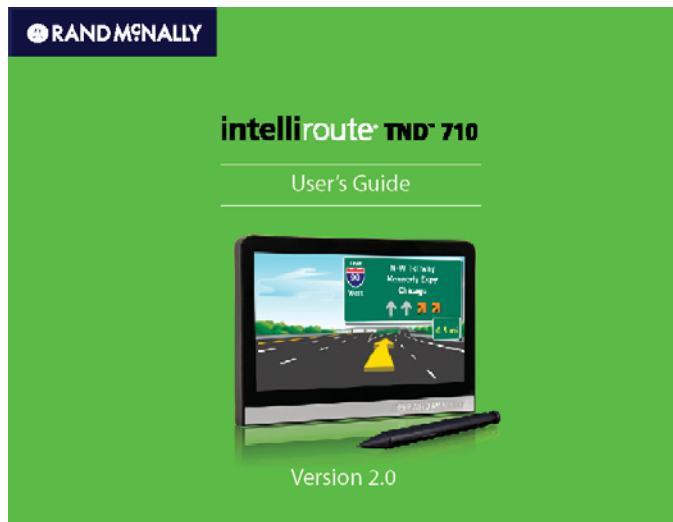

View Manual

Note: Adobe Acrobat Reader is required to view the IntelliRoute® TND™ 710 User's Guide

On the TND Dock Main Window:

- Click on the **Read IntelliRoute TND Manual** button.

The User's Guide displays in an Adobe Acrobat Reader Window.

Tell Rand McNally

On the TND Dock Main Window:

1. Click on the **Tell Rand McNally** button.

The Tell Rand Window displays. Comments you have previously entered on your TND are listed.

2. To add a comment, click **Add Comment** and enter information in the provided fields.
3. To delete a comment, click on the comment and click **Delete Comment**.

 
 
Note: To receive a personal response from Rand McNally, include your email address somewhere in the message text.

4. When finished, click **Done**.

The Send Comments Window displays.

5. Click:

- **Yes** to send comments now.
- **No** to send comments later.

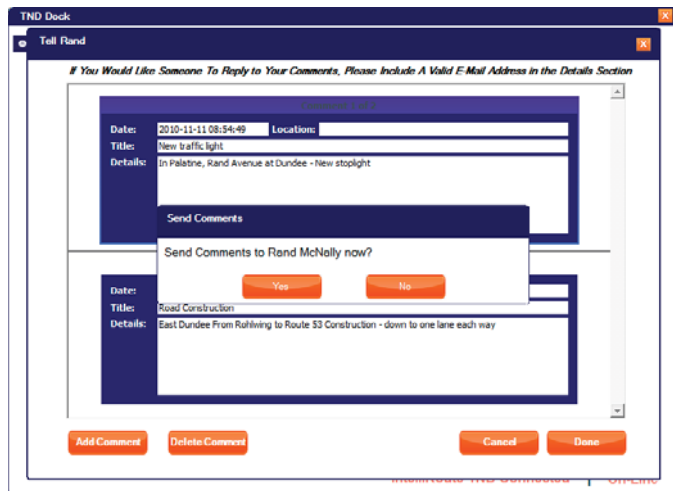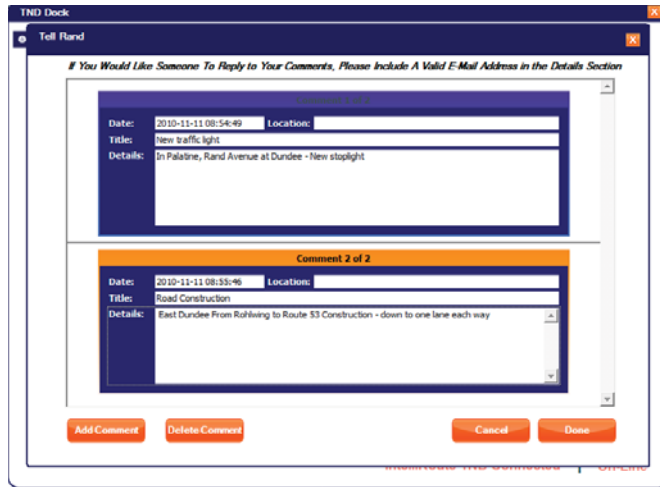

Send Custom Locations File to Your TND

Note: You only need to load the file once. Once loaded they remain on your device until onto your TND. You do not have to repeat the process.




1. Turn the TND on.
2. Connect the TND to your computer using a USB cable.
3. Start TND Dock and select the **Send Custom Locations to my TND** button.
4. Select the custom POI file and follow the instructions to transfer it to your TND
5. Turn off the TND.
6. Disconnect the device from your computer.
7. Plug the device into external power (either 12V or 120V).

 
IMPORTANT NOTE: For the first time only, the TND MUST have external power when started after the file has been transferred.

8. Turn the TND on.

IMPORTANT NOTE: DO NOT DISCONNECT YOUR TND OR TURN IT OFF.

Once the updates are complete, the following screen shows the number of Custom POI locations successfully added.

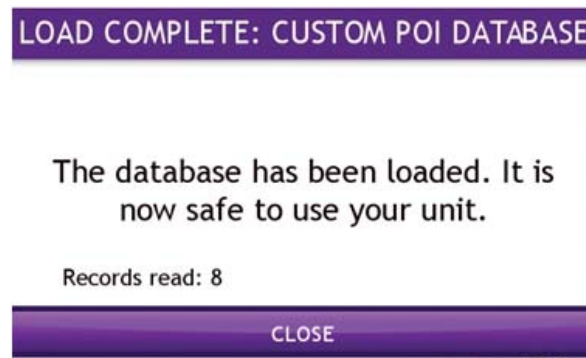

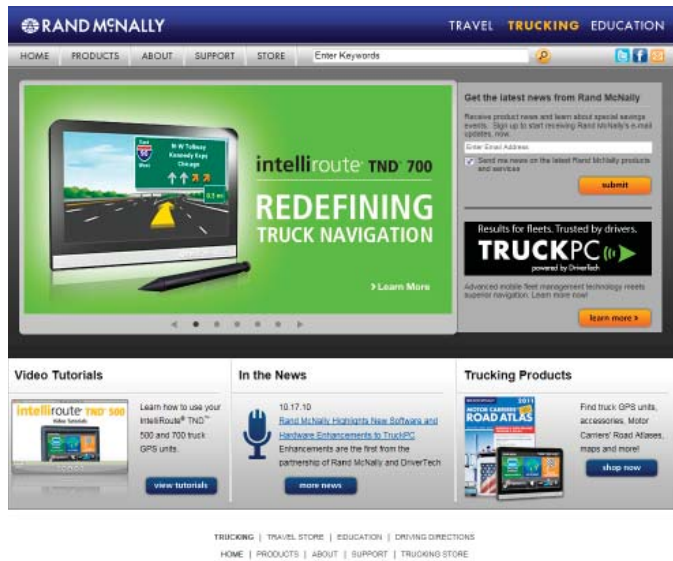

Go to the Rand McNally Commercial Transportation Website

Note: Connection to the internet is required to access the website.

On the TND Dock Main Window:

- Click on the **Go to Rand McNally's Commercial Transportation Website** button.

The Rand McNally Commercial Transportation Home Page displays.

Export State Mileage Breakdown File

Use this feature to export a mileage breakdown by state.

The exported file can be in .xls or .csv format.

On the TND Dock Main Window:

1. Click on the **Export State Mileage Breakdown File**.


 
The Save As window displays.

2. Select where you want the file to be downloaded, and click **Save**.

The file is download to your PC.

When finished, a notification message displays.

3. Click **Ok**.
4. Use Windows Explorer to navigate to and open the file.

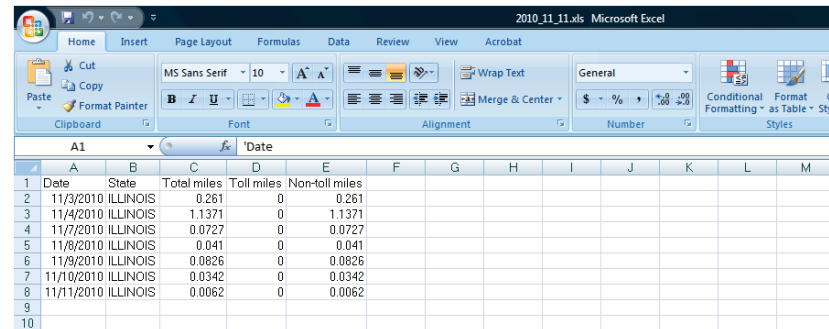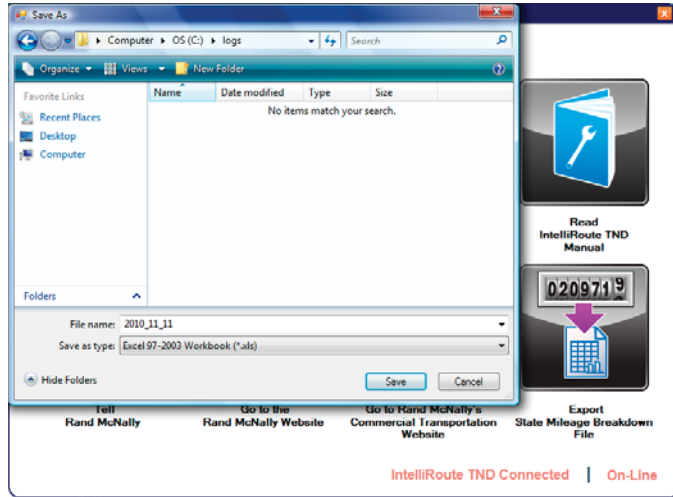

	A	B	C	D	E	F	G	H	I	J	K	L	M
1	Date	State	Total miles	Toll miles	Non-toll miles								
2	11/3/2010	ILLINOIS	0.261	0	0.261								
3	11/4/2010	ILLINOIS	1.1371	0	1.1371								
4	11/7/2010	ILLINOIS	0.0727	0	0.0727								
5	11/8/2010	ILLINOIS	0.041	0	0.041								
6	11/9/2010	ILLINOIS	0.0826	0	0.0826								
7	11/10/2010	ILLINOIS	0.0342	0	0.0342								
8	11/11/2010	ILLINOIS	0.0062	0	0.0062								
9													
10													

Index

A

address	
create a group	60
remove an address from a group	62
select a location from a group.....	63
address book.....	57
add an address to a group	61
save a location.....	57
save a location to	57
select a location from	57
select a location from the	59
sort entries by name or distance.....	58
addresses	
find	25..30
Location Selection Window.....	30
Location Select Window	30
search by city/state/street	31
search by latitude/longitude	36
search by ZIP code.....	34
search by ZIP code for an intersection	35
search near a city center.....	32
search near an intersection	33
auto-complete search names	27

B

backup TND information	131
basic operation	13
basic settings	17
set car or truck mode.....	21
battery power	
light.....	8

C

calculator, use a.....	107
calendar, use a	107
charge the battery	9
first time use	9
with the vehicle charger.....	9
with the wall charger.....	9
city and street names	
about	28
select a city.....	29
confirmation windows	
address.....	72
consumer POI	
select a	45
copyright	ii
cradle and mount	
installation	10
current road information.....	83
city, county and state.....	83
next intersecting street name	83
road name.....	83
view.....	83
current truck location	
find a POI near	45
customer support	
e-mail.....	3
service hours.....	3
toll-free.....	3
customize.....	109
device options.....	114
route options	112
truck information	109
vehicle options.....	110
warning options	117

custom POI	
select from the POI window.....	41

D

destination confirmation window	
truck-related Point of Interest.....	74
destination confirmation windows.....	72
address.....	72
address book	75
consumer Point of Interest	73
destinations.....	25
about city and street names	28
auto-complete	27
Destination Selection Window.....	26
find addresses	25
find points of interest (POIs).....	25
ways to search for	25
detours.....	88
around a specific roadway.....	89
around part of the route.....	88
using detail view map display option.....	90
using highway view map display option.....	90
driver status	
select.....	17

F

FCC Notice.....	iii
find POIs	
near the current truck location	45

G

go to websites	
Rand McNally Commercial Transportation.....	136
Rand McNally Consumer	128

GPS

about	2
-------------	---

H

history list.....	64
select a location from	64
home	
delete.....	56
search and select a location as.....	56
set current location as	55

I

install	
cradle and mount.....	10
IntelliRoute TND	
main menu	14
parts of.....	1

J

junction view	84
---------------------	----

K

keyboards	
select a type	18
special keys.....	16
using	16

L			
locations		notepad	108
about city and street names	28	create a note	108
auto-complete	27	delete a note	108
expand search	28	edit an existing note	108
find addresses	25	O	
find nearby points of interest (POI)	25	optimize routes	70
way to search for	25	automatically	71
location searches.....	26	manually.....	70
M		P	
main menu.....	14	points of interest (POIs).....	37
manage destinations		consumer	39
save location in the Address Book.....	57	find	25
select a location from the Address Book.....	59	POI Category Window	38
set location as home	55	Point of Interest Selection Window	37
Maps 76		Points of Interest (POIs) Category Window.....	38
multi-stop routes.....	65	truck-related	39
add locations	66	types of	39
create.....	65	power.....	11
delete.....	69	enter or return from standby	11
remove a stop.....	67	turn the device off	11
select and run saved	68	turn the device on	11
mute volume.....	19	power light	8
N		Q	
nearby POIs.....	47	Quick Route	
along the route	49	calculate a	101
current vehicle location	47	Quick Stop POI	
in a city	48	select a	40
near end of day location.....	50		

R	
Rand MCRA	
view information	102
reset the device.....	12
restore GPS information.....	132
road construction	
sign up for updates	127
route between two major cities	
calculate	101
Route Map Window	76
routes	
cancel	91
route settings.....	112
S	
safety information	
driver safety.....	7
installation safety	6
navigation safety.....	5
select	
driver status.....	17
keyboard type	18
language	18
load option.....	17
truck or car mode.....	21
select a city	
city/state list.....	29
first use.....	29
long city list.....	29
short city list.....	29
select a language	18
select a POI	
consumer by category	45
consumer by name.....	46
Quick Stop	40
travel center	43
truck-related	42
truck service.....	44
send a message to Rand McNally	
about a different location	104
about your current location	103
set	
ETA adjustment.....	20
ETA Adjustment	20
truck information	20
truck yard time zone	21
type of route	22
slide out list	78
detail view	78
highway view.....	79
route summary	80
select a route display option.....	82
summary map view.....	81
standby mode	
enter or return from	11
start the IntelliRoute TND.....	13
state mileage breakdown file	
export.....	137
T	
tap map and find a location	
avoid location.....	52
tap map and find location	
route to location.....	53

tapping on the screen	15	Rand MCRA	
tap the map and find a location.....	52	view atlas information	102
Tell Rand		timers and logs	
send a message	103	view timer and odometer readings.....	96
about a different location	104	window	95
about current location	103	Truck Tools Window	95
select a location by tapping map.....	105	truck yard time zone	
timers and logs.....	96	set	21
change or reset a timer	97	turn off the device.....	11
delete a driver log	99	turn on the device.....	11
reset a driver log.....	99	type of route	
view driver logs.....	98	select fastest or shortest.....	22
view timer and odometer readings.....	96		
TND Dock	125	U	
backup TND information.....	131	unit converter	
check for IntelliRoute TND updates.....	129	use the.....	106
install software.....	125	unit converter, use a.....	106
Main Menu.....	126	unmute volume	19
restore GPS information	132	User's Guide	
sign up for road construction updates.....	127	view.....	133
Tell Rand McNally	134		
view software version.....	130	V	
View User's Guide.....	133	vehicle icon	
TND Dock main window	126	select icon and color	23
trademarks.....	ii	vehicle settings	110
traffic.....	92	view software version.....	130
historical	93	view User's Guide	133
real-time (optional service)	94	virtual dashboard.....	85
truck information	109	automatically reset trip info	87
set	20	gather trip information	86
truck or car mode		show/hide.....	86
select.....	21	voice	
truck-related POI		select for spoken instructions	22
rate a	54		
truck tools	95		
calculator.....	107		

volume, decrease	19
volume, increase.....	19
volume, mute.....	19
volume settings	19
volume, unmute	19

W

warnings, set.....	24..100
what's included	4
windows	
Points of Interest Selection.....	37
TND Dock Main	126
Truck Tools	95