

# H3080

The ultimate wireless

## Wireless Foldable Headset

### Quick Start Guide (A.1)


#### 无线折叠麦克风耳机 快速开始指南

#### 無線折疊麥克風耳機 快速開始指南


#### 무선 접이식 헤드셋 사용자 설명서




### 1

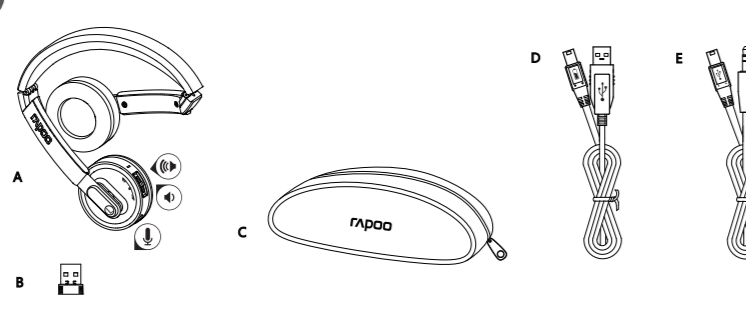


### 2




### 3

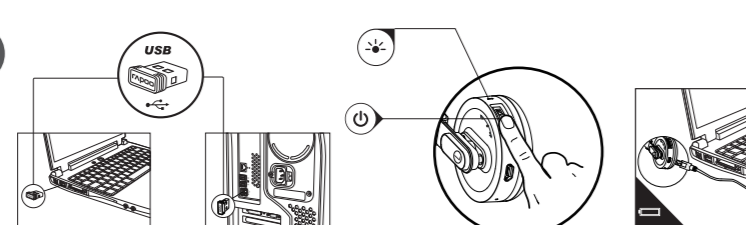


### 4 Windows 7/ Vista

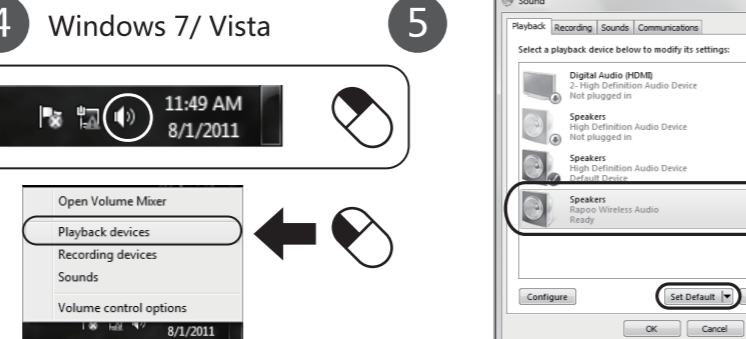


### 5




### 6

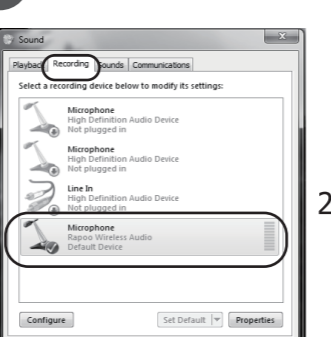


### 7

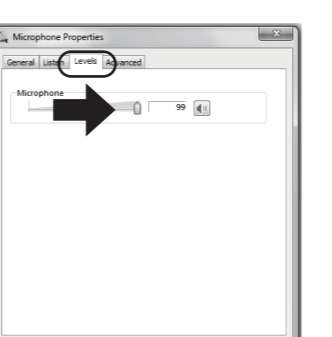


### 8 Windows XP

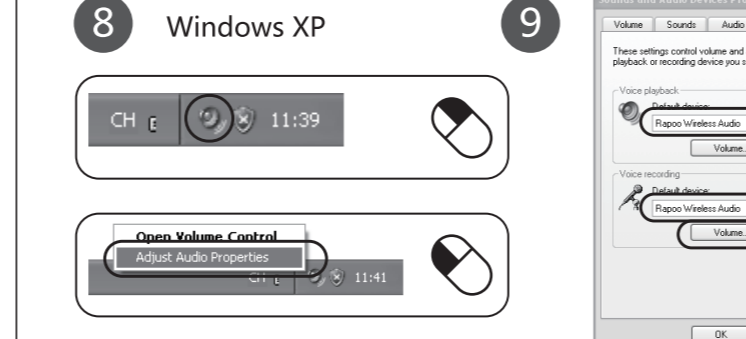

### 9

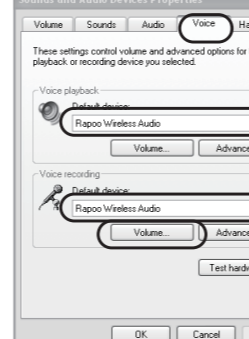

### 10

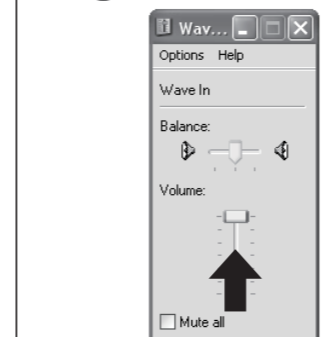

### Index

Language	Page
English	1
简体中文	2
繁體中文	3
한국어	4

### Installation

- Headset
- Transmitter
- Carry bag
- USB cable
- 3.5mm to USB audio cable

Wireless mode: Connect the transmitter to an audio device with USB port. Turn on the headset. The green LED will blink and then stay on when the headset is connected.

Wired mode: Connect the headset to an audio device with a 3.5mm to USB audio cable. Note it is recommended to turn off the headset under wired mode.

### Configuration

#### Windows 7/ Vista

- Click "Play device".
- Set the "Rapoo Wireless Audio" as your default device.
- Select the "Recording" tab.
- Set the "Rapoo Wireless Audio" as your default device.
- Double click on the "Microphone".
- Set the level to 100%.

#### Windows XP

- Click "Adjust audio properties".
- Go to the "Voice" tab.
- Set the "Rapoo Wireless Audio" as your default device.
- Click on the "Volume" of the Voice recording.
- Set the level to 100%.

### Trouble Shooting

Problem	Solution
No sound at all	Make sure you have charged the headset. Make the headset as your default audio device. Refer to step 5, 6 and 9. Restart the media player. Connect the transmitter to another USB port.
My friend on msn/skype does not hear what I'm saying	Check if wireless headset is set as default device. Refer to step 5, 6 and 9. Increase the microphone volume and increase the volume from the msn/skype software. Check if wireless headset is set as default device on msn/skype software.
Bad sound quality	Maximum wireless range is 10 m, but walls or big objects may reduce the range. Move other working wireless devices away from the transmitter and headset.
Volume control under wired mode	Under wired mode, the volume control on the headset can not work. You can use the volume control of your PC or media playing software.

If your problem is not solved, please contact the helpdesk at [www.rapoo.com](http://www.rapoo.com).

### 安裝步驟

- 耳麥
- 发射器
- 携带袋
- USB充电线
- 3.5mm转USB音频线

无线模式: 将发射器连接到带有USB端口的音频设备。打开耳麦电源开关。绿色LED灯会闪烁，然后耳麦连接时保持常亮。

有线模式: 将3.5mm转USB音频线连接到耳麦和音频设备连接。建议在有线模式下关闭耳麦。

### 配置

#### Windows 7/ Vista

- 点击“播放设备”。
- 将“Rapoo Wireless Audio”设为默认设备。
- 选择“录制”选项。
- 将“Rapoo Wireless Audio”设为默认设备。
- 双击“麦克风”。
- 将音量设为100%。

#### Windows XP

- 点击“调整音频属性”。
- 点击“语音”选项。
- 将“Rapoo Wireless Audio”设为默认设备。
- 点击“音量”。
- 将音量设为100%。

### 故障分析

问题	解决方法
没有声音	确保耳麦已充电。将耳麦设为默认音频设备。请参考第5、6和9步。重新启动媒体播放器。将发射器连接到另一个USB端口。
朋友在msn/skype上听不到我说的话	检查无线耳麦是否设置为默认设备。请参考第5、6和9步。调大麦克风音量和msn/skype音量。检查无线耳麦是否在msn/skype软件中设置为默认设备。
音质不好	耳麦的最大传输距离为10米，但墙壁或大型物体可能会减小传输距离。将其他正在工作的无线设备从发射器和耳麦处移开。
有线模式下的音量调节	有线模式下，耳麦的音量调节不能起作用。您可以使用电脑或多媒体播放器软件调节音量。

如果您仍无法解决问题，请联系技术支持。请致电 [www.rapoo.com](http://www.rapoo.com)。

### 安裝步驟

- 耳麥
- 发射器
- 携带袋
- USB充电线
- 3.5mm转USB音频线

無線模式: 將傳輸器連接到帶有USB端口的音頻設備。打開耳麥電源開關。綠色LED燈會閃爍，然後耳麥連接時保持常亮。

有線模式: 將3.5mm轉USB音頻線連到耳麥和音頻設備連接。建議在有线模式下關閉耳麦。

### 配置

#### Windows 7/ Vista

- 点击“播放设备”。
- 将“Rapoo Wireless Audio”设为默认设备。
- 选择“录制”选项。
- 将“Rapoo Wireless Audio”设为默认设备。
- 双击“麦克风”。
- 将音量设为100%。

#### Windows XP

- 点击“调整音频属性”。
- 点击“语音”选项。
- 将“Rapoo Wireless Audio”设为默认设备。
- 点击“音量”。
- 将音量设为100%。

### 故障分析

问题	解决方法
没有声音	确保耳麦已充电。将耳麦设为默认音频设备。请参考第5、6和9步。重新启动媒体播放器。将发射器连接到另一个USB端口。
朋友在msn/skype上听不到我说的话	检查无线耳麦是否设置为默认设备。请参考第5、6和9步。调大麦克风音量和msn/skype音量。检查无线耳麦是否在msn/skype软件中设置为默认设备。
音质不好	耳麦的最大传输距离为10米，但墙壁或大型物体可能会减小传输距离。将其他正在工作的无线设备从发射器和耳麦处移开。
有线模式下的音量调节	有线模式下，耳麦的音量调节不能起作用。您可以使用电脑或多媒体播放器软件控制音量。

如果您仍无法解决问题，请联系技术支持。请致电 [www.rapoo.com](http://www.rapoo.com)。

### 설치

- Headset
- Transmitter
- Carry bag
- USB charging cable
- 3.5mm to USB audio cable

무선 모드: Headset을 완전히 충전한 후 사용하십시오. Headset을 켜고 충전 케이블을 연결하십시오. Headset이 완전히 충전되면 Headset LED가 깜빡입니다. Headset이 연결되면 Headset LED가 켜지고 계속 켜져 있습니다.

무선 모드: Headset을 완전히 충전한 후 사용하십시오. Headset을 켜고 충전 케이블을 연결하십시오. Headset이 완전히 충전되면 Headset LED가 깜빡입니다. Headset이 연결되면 Headset LED가 켜지고 계속 켜져 있습니다.

### 구성

#### Windows 7/ Vista

- Click "Play device".
- Set the "Rapoo Wireless Audio" as your default device.
- Select the "Recording" tab.
- Set the "Rapoo Wireless Audio" as your default device.
- Double click on the "Microphone".
- Set the level to 100%.

#### Windows XP

- Click "Adjust audio properties".
- Go to the "Voice" tab.
- Set the "Rapoo Wireless Audio" as your default device.
- Click on the "Volume" of the Voice recording.
- Set the level to 100%.

### 문제 해결

#### 소리가 나지 않음

- Headset을 충전했는지 확인하십시오.
- Headset을 켜고 충전 케이블을 연결하십시오.
- Headset이 완전히 충전되었는지 확인하십시오.
- Headset이 연결되었는지 확인하십시오.

#### MSN/SKYPE의 내 친구가 내 말을 들을 수 없음

- Headset이 기본 장치로 설정되어 있는지 확인하십시오. 단계 5에서 "장치"를 "무선"으로 설정하십시오.
- Headset의 볼륨 또는 MSN/SKYPE 소프트웨어의 볼륨을 높입니다.
- MSN/SKYPE 소프트웨어에서 Headset이 기본 장치로 설정되어 있는지 확인하십시오.
- MSN/SKYPE 소프트웨어에서 Headset이 기본 장치로 설정되어 있는지 확인하십시오.

#### 음질 나쁨

- Headset의 최대 전송 거리가 10m이지만 벽 또는 큰 물체는 음질을 줄일 수 있습니다.
- 다른 무선 장치가 Headset의 전송 거리를 방해할 수 있습니다. PC 또는 기타 무선 장치를 Headset에서 멀리 떨어진 곳에 두십시오.

문제가 해결되지 않을 경우 [www.rapoo.com](http://www.rapoo.com)에서 헬프데스크에 문의하십시오.

### 產品中有毒物質或化學成分的名稱及含量

### 根據中國《電子信息產品污染控制管理辦法》

部件名稱	鉛 (Pb)	鎘 (Cd)	汞 (Hg)	六價鉻 (Cr VI)	多環芳烴 (PAHs)	苯系物	鄰苯二酚 (BPA)
電池/Battery	○	○	○	○	○	○	○
電源板/Print PWAs	○	○	○	○	○	○	○
塑料零件/Plastic parts	○	○	○	○	○	○	○
金屬零件/Metal parts	○	○	○	○	○	○	○
PCB零件/PCB parts	○	○	○	○	○	○	○
其他零件/Other parts	○	○	○	○	○	○	○

注: 本產品含有毒物質或化學成分的含量符合GB/T 17626-2008標準的要求。如有需要，請參閱本產品的技術規格書。

### Agent Information

Country or area	Company name	Address	City	State	Zip	Phone	Fax	E-mail	Description
Hongkong	CompuLink Asia	Unit 101, 10/F, CompuLink Asia	Hongkong			852-2500-1111		compu@compu.com.hk	香港康樂電腦有限公司
Malaysia	CompuLink Asia	Unit 101, 10/F, CompuLink Asia	Kuala Lumpur			603-2500-1111		compu@compu.com.my	馬來西亞康樂電腦有限公司
Viet Nam	CompuLink Asia	Unit 101, 10/F, CompuLink Asia	Hanoi			84-4-71-0077		compu@compu.com.vn	越南康樂電腦有限公司

### 保修服務

日期	備註
2010-01-01	開始
2010-12-31	結束

### FCC & IC Warning:

This device complies with part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard (s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that, the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

### www.rapoo.com

The ultimate wireless

It is forbidden to reproduce any part of this quick start guide without the permission of Rapoo Technology Co., Ltd.

5606-01701-222

### www.rapoo.com

The ultimate wireless

It is forbidden to reproduce any part of this quick start guide without the permission of Rapoo Technology Co., Ltd.

5606-01701-222