



THE EVERYDAY EARBUDS


QUICK START GUIDE
GUIDE DE DÉMARRAGE RAPIDE
GUÍA DE INICIO RÁPIDO



CONNECT
RELIER
CONECTAR



FIND THE BEST FIT
TROUVEZ LE MEILLEUR AJUSTEMENT
ENCUENTRE EL MEJOR AJUSTE

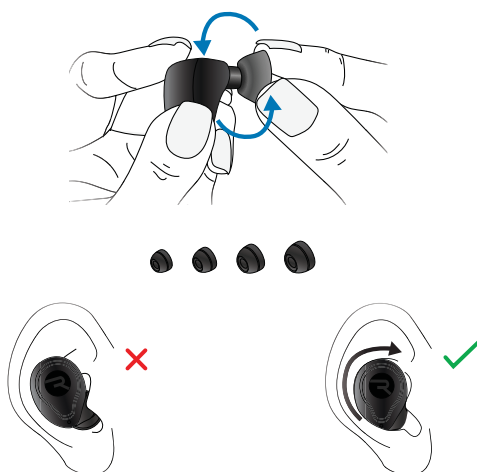

FUNCTIONS LES FONCTIONS FUNCIONES


● TAP
TAPOTER
TOCAR

■ HOLD
TENIR
MANTENER



L	L / R	R
Speaker icon ● Volume icon ● ● ●	Play/Pause icon ● ● Phone icon ● ● ● ● Green Phone icon ● ● Phone icon ● ● Red X icon [3s] Power icon [2s] Refresh icon [10s]	Speaker icon ● Volume icon ● ● ●

 SOUND PROFILES & FEATURES
PROFILS SONORES ET FONCTIONNALITÉS
PERFILES DE SONIDO Y CARACTERÍSTICAS



L

[1.5s]

BALANCED SOUND
SON ÉQUILIBRÉ
SONIDO BALANCEADO

BASS SOUND
SON DE BASSE
SONIDO BAJO

PURE SOUND
SON PUR
SONIDO PURO

R

[1.5s]

ANC ON
ANC ACTIVE
ANC ENCENDIDO

ANC OFF
ANC DÉACTIVE
ANC DESACTIVADO

AWARENESS MODE
MODE DE SENSIBILISATION
MODO DE CONCIENCIA

MULTIPOINT CONNECTION
CONNEXION MULTIPOINT
CONEXIÓN MULTIPUNTO

FAST CHARGE (10 MINUTES = 1.5 HOURS)
CHARGE RAPIDE (10 MINUTES = 1.5 HEURES)
CARGA RÁPIDA (10 MINUTOS = 1.5 HORAS)

WIRELESS CHARGING
CHARGEMENT SANS FIL
CARGA INALÁMBRICA



FULL USER MANUAL
MANUEL UTILISATEUR COMPLET
MANUEL UTILIZADOR COMPLETO



<https://rayconglobal.com/pages/everyday-earbuds-user-manual>