


Wi-Fi Streaming Media Player with 1080p HDMI output

Step 1

A. Using an HDMI cable (for best connection)

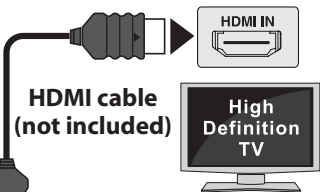

HDMI cable
(not included)




OR

B. Using an A/V cable


(White) (Red) (Yellow)

A/V cable
(not included)

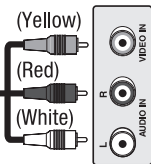


Ensure that your TV is switched to correct input.

Step 2

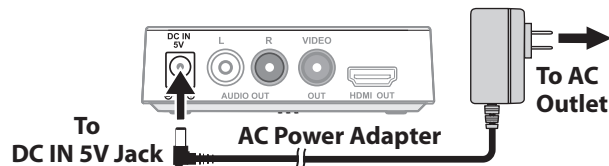

Step 3

Take out the plastic sheet.

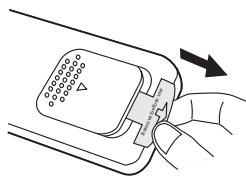

Step 4


Turning on the Unit

Press the **POWER** button on the remote control if Player is not currently on. Player emits green "glow" when on.




Step 5 On-screen instructions

Player will display a basic setup screen which will guide you through initial setup.

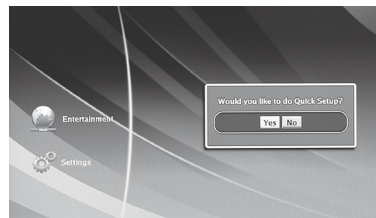

Step 6


Connecting to your wireless access point or router

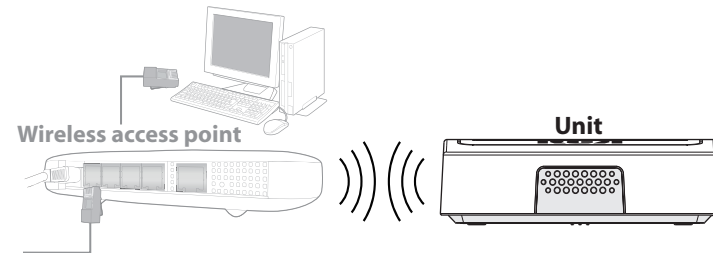

Go to "Settings --> Network" menu to configure your Player for network access.



Ensure that your Player is within range of your Wi-Fi network and that your Wi-Fi network is fully functional.

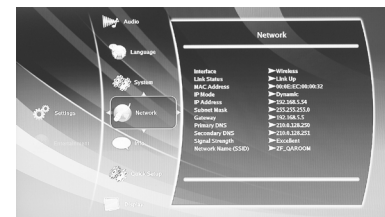

Settings & Entertainment

The main menu contains **Settings & Entertainment options**. Press **Left**, **Right**, **Up**, **Down** to highlight an option, press **OK/ENTER** to confirm your selection, press **Back** to return to previous menu.

Settings Screen




Entertainment Screen



Reproductor de medios de flujo
continuo de la red Wi-Fi
con salida HDMI de 1080p


Paso 1

A. Uso del cable de HDMI (para una conexión óptima)

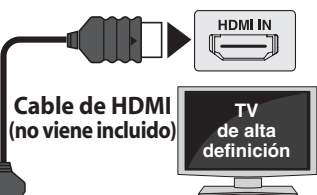


Cable de HDMI
(no viene incluido)

TV
de alta
definición

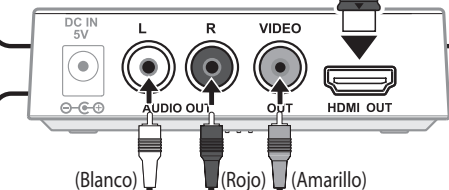

(Blanco) (Rojo) (Amarillo)

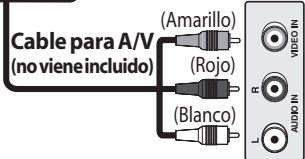

Cable para A/V
(no viene incluido)

TV de
definición
estándar

B. Usando un cable para A/V

Asegúrese de que su televisor esté puesto bajo la
entrada correcta.

Paso 2




Al
enchufe DC IN 5V

Adaptador CA

Al enchufe
de CA

Paso 3

Retire la lámina de plástico.

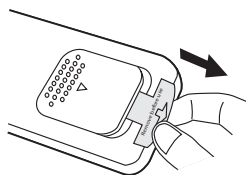

Paso 4

Para encender
la unidad


Oprima el botón **POWER** del control
remoto, si el reproductor no estuviera
encendido. El reproductor emite un
"brillo" verde al estar encendido.



Paso 5


Instrucciones en pantalla

El reproductor mostrará una
pantalla básica de configuración
que le guiará a través de los pasos
a seguir para la configuración
inicial.

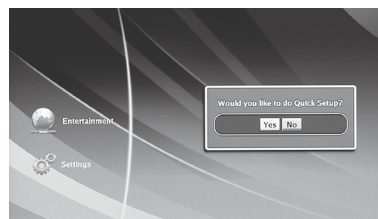

Paso 6

Conexión a su punto de acceso
inalámbrico o a su enrutador

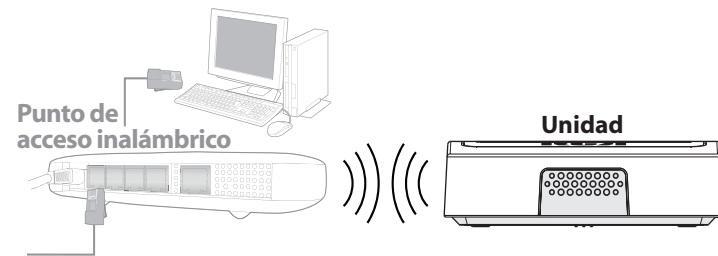


Punto de
acceso inalámbrico

Unidad

Vaya a "Settings --> Network"
en el menú para configurar su
reproductor para que pueda
acceder a la red.




Asegúrese de que su
reproductor esté dentro
del rango de cobertura de su red Wi-Fi y de que su red Wi-Fi esté
funcionando bien.

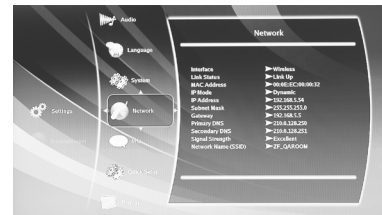

Configuración y Entretenimiento

El menú principal contiene las **opciones de Configuración y Entretenimiento**. Oprima **◀**, **▶**, **▲**, **▼** para destacar una opción, oprima **OK/ENTER** para confirmar su selección, y oprima **↶** para regresar al menú anterior.

Pantalla de Configuración

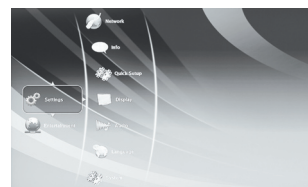

Pantalla de Entretenimiento

