

Table Of Contents

Button Description.....2-3
 Battery Installation3
 Programming Your Universal Remote
 TV4
 TV Codes4-5
 VCR5-6
 VCR Codes6-7
 DBS7
 DBS Codes7
 Cable Box.....7-8
 Cable Box Codes8
 DVD9
 DVD Codes.....9
 Programming With Code Search9
 Retrieving Codes.....10
 TV Menu11
 DBS Menu.....12
 DVD Menu13
 Trouble Shooting14

This RCA Universal Remote Is Compatible With
 Most Models Of The Following Brands
 (Of Infrared Remote Controlled Components manufactured after 1990):



Button Description

INDICATOR LIGHT

The Indicator Light flashes to show that the remote is working.

OFF/ON

The OFF/ON button operates the same as your original remote
 Note: Some RCA, GE and ProScan models require you to press the device button to turn the device on and the OFF/ON button to turn the device off.

CODE SEARCH

Used to program the remote or to search through codes.

DBS/CABLE, VCR/DVD, TV

The DBS/CABLE, VCR/DVD, and TV buttons are used to select the device you want to control.

REW, PLAY, FF, REC, PAUSE, STOP

The REW, PLAY, FF, REC, PAUSE, and STOP buttons operate the same as on your original VCR remote. You must press the RECORD button **twice** to begin recording.

TV/VCR

The TV/VCR button operates the TV/VCR function of your VCR.

ENTER

The ENTER button is used to complete channel selection for some brands of TV. It is also used to complete the code entry process.

VOL & CHAN

The VOL (Volume) and CHAN (Channel) buttons increase or decrease the channel numbers or volume.

MUTE

To MUTE the volume on the TV.

PREV CH

PREV CH allows you to go to the previous channel you selected. Operates the same as Last Channel, Go Back or Recall button on your original remote.

0-9

The number buttons operate the same as on your original remote, and are used for entering device codes or channel numbers.

MENU


The MENU button calls up the TV set up menu.

Battery Installation

Your Universal Remote requires 2 new AAA alkaline batteries.

To install the batteries:

1. Remove the battery compartment cover.

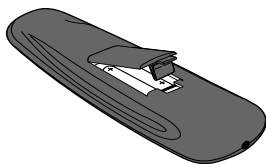

2. Match the batteries to the + and - marks inside the battery case, then insert the batteries.

3. Press and push the battery cover back into place.

Note: Reprogramming may be required after batteries are removed.

Programming For TV

 
1. Manually turn on the TV.

Find the three-digit code for your TV in the code list below.


2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.



3. Press and release the **TV** button (The **INDICATOR LIGHT** will blink then remain lit).



 4. Enter the code using the Number Buttons.



After your code is entered, the **INDICATOR LIGHT** will turn off.



5. Aim the remote at your TV and press the **OFF/ON** button. Your TV should turn off.




Note: If your TV does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

6. With your TV on, press **CHAN+**. If the TV responds, no further programming is required.



7. Enter your code here for easy reference.

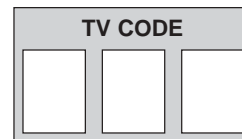

TV Code List

Abex.....	172	Electrohome	004, 006
Admiral	001, 173	Emerson	002, 003, 019, 022
Advertura	174030, 171, 191, 004	
Aiko	016038, 046, 006, 012, 023, 024, 025	
Akai	002026, 027, 028, 029, 031, 032,	
Alleron	046033, 034, 035, 036, 037, 039	
Amtron	038041, 042, 043, 044, 047, 123	
Anam National.....	003, 038124, 162, 177, 179	
AOC.....	006, 005, 004, 007	Envision	004, 006
Audiovox	038	Fisher	048, 049, 051, 162, 180
Belcor.....	004	Fujitsu	046
Bell & Howell	001, 083, 162	Funai	038, 046
Bradford	038	Futurtec	038
Brokwood.....	004	GE	000, 054, 003, 004, 006
Candle	004, 006, 008, 174022, 052, 055, 087, 164, 165	
Celebrity.....	002166, 167, 168, 181	
Citizen	016, 171, 004, 006, 008	Gibraltar	004, 151
.....038, 105, 174, 177		Grundty	171, 038, 046
ColorTyme	004, 006	Hallmark	004, 006
Concerto	004, 006	Harvard	038
Contec / Cony	012, 013, 038	Hitachi	059, 004, 148, 006, 012
Craig	038013, 060, 061, 135, 136, 137	
Crown	038, 171138, 139, 140, 141, 142, 143	
Curtis Mathes	171, 000, 004144, 145, 146, 150, 179	
.....006, 015, 105, 162		IMA	038
CXC	038	Infinity	062
Daewoo	016, 190, 005	Janeil	174
.....171, 004, 006, 017, 127		JBL	062
Daytron	004, 006, 171	JCB	002
Dimensia	000	JC Penny	000, 054, 005, 171
Dumont	004, 151004, 052, 006, 172, 008, 022, 058	
Dynatech	004063, 064, 072, 087, 105, 181	
Electroband	002	Jensen	004, 006

TV Code List Continued


JVC159, 013, 012, 182, 054060, 065, 066, 067, 123, 157, 158007, 019, 096, 099, 101, 102, 103129, 179, 188, 190
Kawasho002, 004, 006	Runco151
Kenwood004, 006, 019	Sampo004, 006, 171, 172
Kloss Novabeam068, 069, 174, 183	Samsung171, 004, 005, 105, 006012, 015, 017, 019, 104, 106, 172
KTV171, 038, 177, 070	Sansui191
LG (Goldstar).....005, 156, 004, 006172, 012, 019, 056, 057, 058, 155, 171	Sanyo048, 080, 004180, 162, 169, 049
Loewe062	Scotch006
Logik083	Scott004, 038, 046
Luxman004, 006	Sears006, 012, 024, 035000, 048, 189, 004, 046
LXI000, 062, 006, 073162, 181, 049, 072	Sears006, 013, 019, 049, 051, 066072, 162, 180, 181
Magnavox062, 004, 006, 130134, 183, 008, 019, 068, 069075, 076, 077, 088, 131132, 133, 219, 235	Sharp012, 029, 111, 112, 113, 122
Majestic083	Shogun004
Marantz004, 006, 062	Signature001, 083
Megatron006, 059	Simpson008
Memorex083, 006, 001, 082, 162	Sony002, 218
MGA005, 004, 006	Soundesign004, 038, 046, 006, 008
MGA079, 082, 019, 022, 051, 080	Squareview189
Midland054, 151, 171, 172, 181	SSS004, 038
Minutz052	Starlite038
Mitsubishi.....005, 004, 006125, 082, 081, 019, 022051, 079, 080, 135	Supre-Macy174
Montgomery Ward.....083	Supreme002
Motorola.....003, 173	Sylvania.....062, 004, 006, 088, 076116, 008, 019, 068, 069075, 077, 161, 183
MTC005, 004, 105, 006	Symphonic.....038, 189, 033
Multitech038	Tandy173
NAD006, 185, 072	Tatung003
NEC005, 004, 006, 003	Technics054
Nikko006, 016	Techwood004, 006, 054
NTC016	Teknika016, 005, 171, 004, 006008, 012, 013, 038, 046, 076082, 083, 105, 170
Onwa038	Tera004, 012, 093
Optimus185	TMK004, 006
Optonica095, 173	Toshiba105, 162, 160
Orion191, 035	Totevision171
Panasonic170, 054, 062, 003	Universal052, 087
Philco.....062, 005, 004, 006, 183008, 012, 019, 003068, 069, 075, 077	Victor066, 182
Philips062, 004, 075, 008, 019003, 012, 068, 069076, 086, 087, 088	Vidtech004, 005, 006
Pilot004, 171	Viking174
Pioneer004, 006, 090	Wards000, 062, 095, 005, 004046, 052, 006, 083, 001, 019024, 033, 068, 069, 075, 076087, 088, 119, 120
Portland016, 005, 171, 004, 006	Yamaha004, 005, 006, 019
Price Club105	Zenith051, 083, 004, 152151, 153, 154, 217
Prism054	
Proscan000, 181	
Proton004, 006, 012, 093	
Pulsar151	
Pulsar004	
Quasar003, 054, 070	
Radio Shack / Realistic000, 095, 171, 004, 038, 006, 012, 049, 162	
RCA000, 181, 100, 233, 203212, 098, 005, 003, 004, 006	

Programming For VCR


1. Manually turn on the VCR.

Find the three-digit code for your VCR in the code list below.

 
2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.



3. Press and release the **VCR/DVD** button (The **INDICATOR LIGHT** will blink then remain lit).

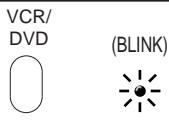

 4. Enter the code using the Number Buttons.



After your code is entered, the **INDICATOR LIGHT** will turn off.



Programming For VCR Continued

5. Aim the remote at your VCR and press the **OFF/ON** button. Your VCR should turn off.




Note: If your VCR does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

6. With your VCR on, press **CHAN+**. If the VCR responds, no further programming is required.



7. Enter your code here for easy reference.

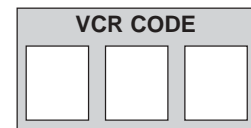

VCR Code List

Admiral001011, 016, 018
Adventura026	KLH061
Aiko027	Kodak014, 021
Aiwa026	LG (Goldstar).....014, 018, 054, 009
Akai.....008, 113, 112, 003, 005, 007, 111	Lloyd026
American High021	Logik061
Asha013	LXI014
Audio Dynamics009, 010	Magnavox022, 062, 104, 063021, 108, 124
Audiovox014	Magnin013
Bell & Howell011	Marantz062, 011, 010, 016009, 018, 021, 022, 064
Beaumarck013	Marta014
Broksonic025, 012	Matsushita021
Calix014	MEI021
Candle014, 013, 015	Memorex026, 014, 104, 001011, 013, 021, 022, 023
Canon021, 022	MGA029, 065, 113
Capehart020, 110	MGN Tech.013
Carver062	Midland053
CCE027, 061	Minolta055, 056, 107
Citizen014, 013	Mitsubishi.....065, 055, 072, 029056, 066, 067, 068069, 070, 071, 073
ColorTyme009	Montgomery Ward074, 106, 113, 123
Colt061	Motorola001, 021
Craig013, 014, 023, 061	MTC013, 026
Curtis-Mathes022, 013, 115, 024, 000, 009, 016, 018, 021	Multitech013, 016, 026053, 061
Cybermex013	NEC064, 076, 011, 010079, 009, 018, 078111, 123
Daewoo027, 025, 015, 017, 019026, 028, 110	Nikko014
Daytron110	Noblex013
DBX009, 010	Olympus021
Dimensia000	Optimus001, 014
Dynatech026	Optonica.....096
Electrohome.....014, 029	Orion031
Electroponic014	Panasonic109, 021, 022, 125126, 127016, 055, 056107, 120
Emerson014, 025, 026, 065041, 015, 012, 021024, 029, 030, 031032, 033, 034, 036037, 038, 039, 040042, 044, 045, 046047, 105, 113, 116117, 130	Pentax016, 055, 056107, 120
Fisher011, 023, 052, 048049, 050, 051, 118	Pentax Research018
Fuji021, 119	Philco022, 062, 063, 021
Funai026	Philips062, 096, 022021, 124
Garrard026	Pilot014
GE000, 022, 013, 115053, 021, 120	Pioneer055, 010, 080081, 123
Grandiente026	Portland016, 017, 019, 110
Harley Davidson026	ProScan000
Harman Kardon009	Protex061
Harwood061	Pulsar104
Headquarter011	Quarter011
Hitachi055, 120, 056, 057107, 111	Quartz011
Hi-Q023	Quasar021, 022, 125
Instant Replay021	RCA000, 091, 087, 115083, 088, 090, 089055, 022, 091, 003013, 021, 056, 082084, 085, 086, 107, 120, 125
JCL021	Radio Shack / Realistic014, 001, 011, 013023, 021, 026, 029049, 050, 096
JC Penny014, 011, 022, 013009, 118, 060, 107010, 021	Radix014
Jensen055, 056, 111	
JVC009, 010, 011, 018111, 123	
Kenwood009, 010, 123, 111	

VCR Code List Continued

Randex.....014065, 116
Ricoh.....128	Totevision.....013, 014
Runco.....104	TMK.....013, 024, 047
Samsung.....013, 015, 112, 053	Unitech.....013
.....055, 033	Vector Research.....009, 010
Sanky.....001, 104015, 016
Sansui.....010, 092, 111, 123	Victor.....010
Sanyo.....011, 013, 023	Video Concepts.....009, 010
Scott.....025, 065, 015, 012015, 016, 113
.....032, 038, 116	Videosonic.....013
Sears.....014, 055, 011, 023	Wards.....026, 022, 013, 055
.....118, 021, 028, 048001, 061, 014, 015
.....049, 050, 051, 056, 107021, 023, 029, 056
Sharp.....001, 095, 017, 029096, 101, 102, 103
.....094, 096, 097107, 116
Shintom.....056, 061, 098	XR-1000.....021, 026, 061
Shogun.....013	Yamaha.....009, 010, 011
Signature.....001018, 111
Singer.....021, 061, 128	Zenith.....104, 119, 098, 128
Sony.....099, 119, 098	
STS.....021, 107	
Sylvania.....022, 062, 026, 065	
.....021, 063, 065, 124	
Symphonic.....026	
Tandy.....011	
Tashiko.....014	
Tatung.....111	
Teac.....026, 085, 111	
Technics.....021, 109	
Teknika.....026, 022, 014, 129	
.....021, 100	
Toshiba.....015, 055, 049, 051	

Programming For DBS

Follow same instructions for programming Cable Box but use DBS code list.

The DBS codes are programmed using the DBS/CABLE key.

DBS Code List


Alphastar.....079	Philips.....085
Echostar (Dish System).....089	Primestar.....076
Echosphere (Dish Net).....078	Proscan.....071, 080, 081
GE.....071, 080, 081	RCA.....071, 080, 081
Hitachi SYS I.....084	Sony.....072
Hitachi SYS II.....083	Toshiba.....073
Hughes.....083, 077, 090	Uniden.....086
Magnavox.....085	
JVC.....082	
Panasonic.....075	

Programming For Cable Box


1. Manually turn on the Cable Box.

Find the three-digit code for your Cable Box in the code list below.

 2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.




 3. Press and release the **DBS/CABLE** button (The **INDICATOR LIGHT** will blink then remain lit).



Programming For Cable Box Continued

4. Enter the code using the Number Buttons.

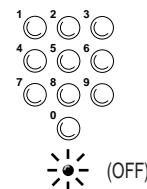

After your code is entered, the **INDICATOR LIGHT** will turn off.

5. Aim the remote at your Cable Box and press the **OFF/ON** button. Your Cable Box should turn off.




Note: If your Cable Box does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 9.

6. With your Cable Box on, press **CHAN+**. If the Cable Box responds, no further programming is required.




7. Enter your code here for easy reference.

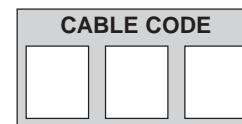

Cable Box Code List


ABC.....001, 003, 004	Samsung.....034
.....005, 006, 007	Scientific Atlanta.....006, 036
Antronix.....008, 009	037, 038
Archer.....008, 009, 010, 011	Signal.....018
Cabletenna.....008	Signature.....003
Cableview.....008	Sprucer.....000
Century.....011	Standard Component.....039
Citizen.....011	Starcom.....001, 007, 018
Colour Voice.....012, 013	Stargate.....018
Comtronics.....015	Starquest.....018
Contec.....016	Tocom.....004, 023
Eastern.....017	Tusa.....018
Garrard.....011	TV86.....027
GC Electronics.....009	Unika.....008, 009, 011
Gemini.....018, 019	United Cable.....001
General Instru.....049, 001, 003	Universal.....008, 009, 010, 011
Hamlin.....035	View Star.....015, 016, 025, 027
Hitachi.....003	Zenith.....050, 051
Jasco.....011	
Jerrold.....049, 001, 003, 005	
.....007, 018, 023, 024, 046	
Magnavox.....025	
Movie Time.....027, 028	
NSC.....027, 028	
OAK.....029, 016	
Panasonic.....000, 048	
Philips.....011, 012, 013, 019	
.....025, 030, 031, 032	
Pioneer.....034, 033	
RCA.....047, 000, 049	
Realistic.....009	
Regal.....022, 035	
Regency.....017	
Rembrandt.....003	

 

Programming For DVD

Follow same instructions for programming VCR but use DVD code list.

The DVD codes are programmed using the VCR/DVD key.

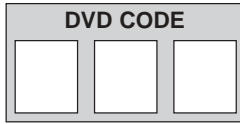


DVD Code List

Aiwa	350	RCA	160
Hitachi	351	Sanyo	359
JVC	161, 352	Sony	166, 360, 361
Konka	353, 354	Toshiba	167, 362, 363
Magnavox	162, 356, 357	Zenith	364
Mitsubishi	163		
Panasonic	355		
Philips	162, 356, 357		
Pioneer	165		
ProScan	160		

Programming With Code Search

If your TV, VCR, DVD, or Cable Box does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following the steps below.


1. Turn on the device you wish to program.
2. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.
3. Press and release the device button for the device you are programming (**TV, VCR/DVD** or **DBS/CABLE**). The **INDICATOR LIGHT** will blink once then remain lit.
4. Press and release **OFF/ON** until your device turns off.
5. When your device turns off, press the **ENTER** button, the **INDICATOR LIGHT** will go off.

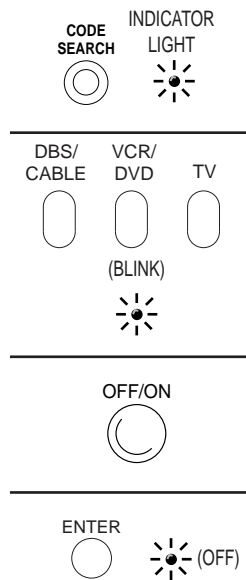


Retrieving Codes

If you need to find the three-digit code for your TV, VCR, DBS, DVD or Cable Box after your device is set-up using Code Search, use this procedure.

 
1. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.




2. Press and release the device button for the device's code you are retrieving (**TV, VCR/DVD, or DBS/CABLE**). The **INDICATOR LIGHT** will blink once then remain lit.

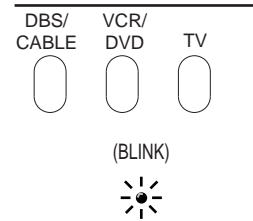

 3. Press and release **CODE SEARCH**. The **INDICATOR LIGHT** will turn off.




 
4. Starting with **0** on the keypad, press the number buttons in order (**0-9**) until the **INDICATOR LIGHT** blinks.



5. The number which causes the **INDICATOR LIGHT** to blink is the first digit of your code.

  6. Repeat step 4 until you have retrieved all three numbers in the code.





Television Menu Function

The TV Menu is used to make changes in the TV settings such as setting color, channels, timers, etc.

Entering the TV Menu Mode:

1. Push the **TV** button on the remote.
2. Push the **MENU** button.

This puts the remote in TV Menu Mode. The TV Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in TV Menu Mode.

While in **TV MENU** these buttons will function as follows:

VOL UP/DOWN buttons will operate as **CURSOR RIGHT/LEFT**.

CHAN+/- keys will operate as **CURSOR UP/DOWN**.

For RCA, GE, ProScan TVs pushing the **MENU** button will select the highlighted item. The numeric buttons may also be used to select the MENU choice.

Note: Not all functions in competitive models and brands of televisions may be fully supported.


Exiting the TV Menu Mode:

To exit the Menu Mode and clear the **TV** screen push the **TV** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of TV Menu Mode and will revert to it's normal mode of operation.

Note: The remote will automatically exit the TV Menu Mode after 10 seconds of inactivity with no buttons being pushed.

Special notes:

1. Because of the wide variety of menu formats, some experimenting may be required.
2. SONY: Pressing the **ENTER** button while in menu mode returns to previous menu.
3. ZENITH: Push the menu button a second time to move from the **SET-UP MENU** to the **VIDEO MENU**.

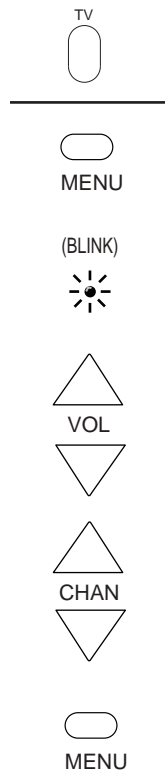

DBS Menu Function

The DBS Menu is used to navigate thru the Guide screens, to make changes in the DBS settings such as channel lists, passwords, etc.

Entering the DBS Menu Mode:

1. Push the **DBS•CABLE** button on the remote.
2. Push the **MENU** key.

This puts the remote in DBS Menu Mode. The DBS Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in DBS Menu Mode.

While in **DBS MENU MODE** these buttons will function as follows:

VOLUME UP/DOWN button will operate as **CURSOR RIGHT/LEFT**.

CH+/- button will operate as **CURSOR UP/DOWN**.

For RCA, GE, ProScan DBS systems pushing the **MENU** button will select the highlighted item. The numeric buttons may also be used to select the **MENU** choice. The **ENTER** key may also be used to select all menu choices.

Note: Not all functions in competitive models and brands of DBS systems may be fully supported.

 

Exiting the DBS Menu Mode:

 
Push the **DBS•CABLE** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of DBS Menu Mode and will revert to it's normal mode of operation.

Note: The remote will automatically exit the DBS Menu Mode after 10 seconds of inactivity with no keys being pushed.

Special notes:

1. Because of the wide variety of menu formats, some experimenting may be required.
2. SONY: Pressing the **ENTER** button while in menu mode returns to previous menu.

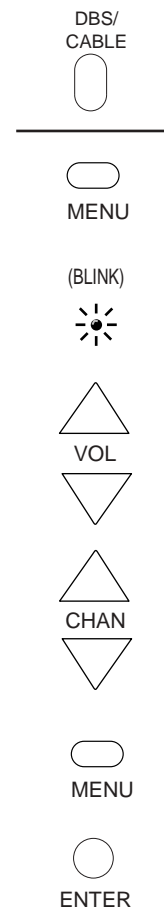



DVD Menu Function

The DVD Menu is used to navigate thru the Navigation screens, to change settings such as language, sub-titles, etc.

Entering the DVD Menu Mode:

1. Push the **VCR/DVD** button on the remote.
2. Push the **MENU** key.

This puts the remote in DVD Menu Mode. The DVD Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in DVD Menu Mode.

While in DVD MENU MODE these buttons will function as follows:

VOLUME UP/DOWN button will operate as **CURSOR RIGHT/LEFT**.

CH+/- button will operate as **CURSOR UP/DOWN**.

Pushing the **ENTER** button will select the highlighted item. The numeric buttons may also be used to select the **MENU** choice.

Note: Not all functions in competitive models and brands of DVD systems may be fully supported.

Exiting the DVD Menu Mode:

Push the **VCR/DVD** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of DVD Menu Mode and will revert to it's normal mode of operation.

Note: The remote will automatically exit the DVD Menu Mode after 15 seconds of inactivity with no keys being pushed.

Special notes:

1. Because of the wide variety of menu formats, some experimenting may be required.




Trouble Shooting

Problem	Solution
Indicator light not blinking when you press any button	A) Replace the batteries with 2 new AAA Alkaline batteries. B) Check that batteries are properly installed.
The Remote does not operate your device	A) Try all the codes listed for your brand. B) Try the Code Search method (page 9).
Not performing commands properly	Start Code Search over again to locate the proper code.
Problems programming a TV/VCR Combo Unit	Try the VCR code for your brand. Some combo units, however, may require both a TV and a VCR code for full operation.
VCR not recording	As a safety feature on your remote, you must press the REC button twice.
Channel up and down do not function on an RCA TV	Due to some designs, the original remote will only perform these functions.
Problems changing channels	If your original remote required ENTER after a channel, press ENTER after you select a channel.
No response after pressing a button	A) Make sure you have new batteries, and you are aiming your remote at your devices. B) Check that batteries are properly installed. (See page 3).

Note: Reprogramming may be required after batteries are removed.

Questions

 Please visit www.rca.com



RCA Accessories

The following RCA accessories are available through your RCA dealer or by calling 1-800-338-0376.

RC926 Wireless Phone Jack


Turn Just About Any Electrical Outlet Into A Phone Jack Instantly

Exclusive technology sends phone signal through the electrical wiring in your home.

No Wiring, No Drilling, No Tools!
Installs In Two Simple Steps


STEP 1

Plug Base Unit into electrical outlet near an existing phone jack, and connect phone jack to Base Unit with included phone cord.

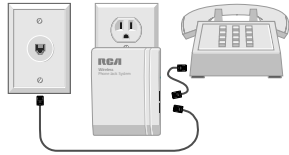

STEP 2

Plug Extension Unit into any other electrical outlet and connect phone to Extension Unit.

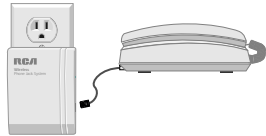

Works With:

- Corded Phones
- Cordless Phones
- Answering Machines
- Fax Machines
- Computer Modems

Compatible With:

- Call Waiting
- Call Forwarding
- Three-Way Calling
- Speed Dialing

RC926
\$79⁹⁵

Plus Shipping/Handling & Sales Tax

ANT200 Amplified TV Antenna

To receive UHF or VHF stations or serve as a backup for cable outages, purchase the RCA Amplified TV Antenna. Switching between your cable or satellite and your antenna is made easy with an integrated A/B switch. Hooks up to any TV and includes all necessary accessories.

Features include:

- Dipoles tilt and rotate for improved picture
- UHF Loop turn range of 345°
- Gold plated connectors for improved signal conductivity
- Manual Gain Control to Boost Signal
- Five-Year Limited Warranty
- Measures 8½ H. X 8½ W. X 4½ D.

ANT200
\$45⁹⁵

Plus Shipping/Handling & Sales Tax



ANT200

How To Order

To order, see your local RCA retailer. Or:

ORDER BY PHONE:

Have your Visa, MasterCard or Discover Card ready and call the toll-free number listed below. This number should only be used to place orders for the above-listed Accessories.

1-800-338-0376

ORDER BY MAIL:

Complete this order form and mail to:

RCA Accessories
PO Box 8419
Ronks, PA 17573

Include this completed form with your order.

Description	Model #	Price	Qty.	Total
Wireless Phone Jack	RC926	\$79.95		
Amplified TV Antenna	ANT200	\$45.95		
Sales Tax	We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent.			
Shipping and Handling				\$5.00
Total Amount Due				

Name: _____
 Address: _____
 City/State: _____
 Zip: _____
 Daytime Phone Number: _____

Check Enclosed Money Order Enclosed

Visa MasterCard Discover

Card Number: _____
 _____ - _____ - _____ - _____

Exp: _____
 Signature: _____

Shipping and handling is charged for all orders.

Please allow 4-6 weeks for mail orders.

Limited 90 Day Warranty

Thomson multimedia Inc. warrants that for 90 days from date of purchase, it will replace this product if found to be defective in materials or workmanship. Return it postage prepaid to the Product Exchange Center address for prompt, no charge replacement with a current equivalent. This replacement is Thomson multimedia Inc.'s sole obligation under this warranty. Thomson multimedia Inc. will not be responsible for any incidental or consequential damages or for any loss arising in connection with the use or inability to use this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty excludes defects or damage due to misuse, abuse, or neglect. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

© 2001 Thomson multimedia Inc.
Product Exchange Center
11721 Alameda Ave.
Socorro, TX 79927
PRCU300 Rev0901

Trademark(s) ®Registered Marca(s) Registrada(s)
Made in Indonesia
www.rca.com

RCA