



Quick Start

About Your Creative USB Adapter CB2436 with Bluetooth® Technology

Thank you for choosing the Creative USB Adapter CB2436 with Bluetooth Technology. Your USB adapter is easy to set up and supports wireless transfer rates of up to 1 Mbps*. Your USB adapter adds Bluetooth technology to your computer and can be paired with other Bluetooth-enabled devices.



Light Emitting Diode (LED)
Turns on when your USB adapter is successfully installed and connected to your computer. When blinking red, the USB adapter is transferring or receiving data.

USB connector
Insert this into your computer's USB port.

* Effective throughput of up to 723 Kbps.


1 Installing Your USB Adapter

Before you install your Creative USB Adapter CB2436 with Bluetooth Technology, take note of the Bluetooth Device Address (BDA) found on a label on your USB adapter. You need them later to verify your Bluetooth installation and pair your Bluetooth devices.

DO NOT connect the USB adapter to your computer before installing the software. You will be required to do so halfway through the installation.

- Turn on your computer and insert the Installation CD into your CD-ROM/DVD-ROM drive. Your CD should start automatically. If it does not, follow the steps below:
 - Start Windows® Explorer.
 - On the left pane, click the **My Computer** icon.
 - Right-click the CD-ROM/DVD-ROM drive icon, and then click **Autoplay**.
- Follow the instructions on the screen and install the **Bluetooth Software**.
- When the **Software Installation Wizard** dialog box appears, click the **Next** button.
- When the **License Agreement** dialog box appears, select **I accept the terms in the license agreement** and click the **Next** button.
- Follow the instructions on the screen.
- When the **Device Not Found** dialog box appears, click the **Cancel** button.
- Click the **Finish** button.
- When prompted, restart your computer.

- Connect your USB adapter to your computer's USB port as shown below.

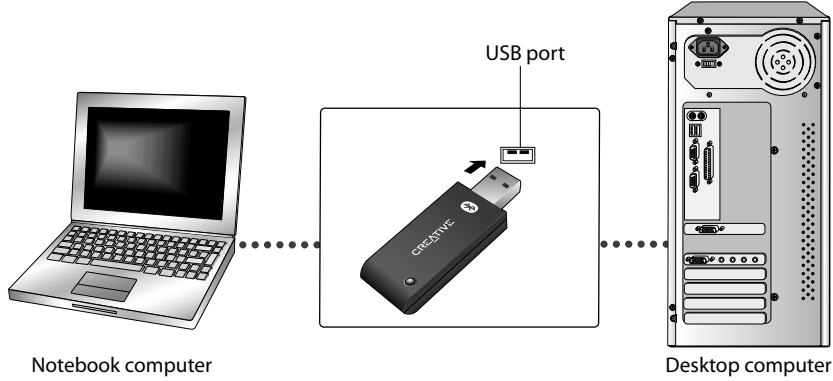

- When the **Add New Hardware Wizard** dialog box appears, select **Install the software automatically [Recommended]**.
- Click the **Next** button.
- In the next dialog box that appears, click the **Next** button.
- Click the **Finish** button to complete the installation. The **My Bluetooth Places** icon  appears on your computer's desktop and system tray.

For Windows XP Service Pack 2 only

- Click **Start** → **Settings** → **Control Panel**.
- Double-click the **System** icon.
- When the **System Properties** dialog box appears, click the **Hardware** tab.
- Click the **Device Manager** button.
- Double-click **Bluetooth Radios**.
- Right-click **Blutonium BCM Bluetooth 2.4GHz Single Chip Transceiver** and click **Update Driver**.
- When the **Hardware Update Wizard** dialog box appears, select **No, not this time** and click the **Next** button.
- Select **Install from a list or specific location (Advanced)** and click the **Next** button.
- Select **Don't search. I will choose the driver to install** and click the **Next** button.
- Select **CB2431/CB2436 Creative Bluetooth USB Adapter** and click the **Next** button.
- Click the **Finish** button. Your USB adapter should appear under **Bluetooth Devices** in Device Manager.



Your computer's USB port may be located on the front panel. If your USB adapter does not fit into the USB port located on the back panel, connect it to the USB port located on the front panel.

2 Configuring Your Bluetooth Device

- On your taskbar, right-click the **My Bluetooth Places** icon , and select **Start Using Bluetooth**. The **Initial Bluetooth Configuration Wizard** dialog box appears.
- Follow the instructions on the screen to complete the configuration.
- When you are prompted to install another Bluetooth device, click the **Skip** button.
- Click the **Finish** button.



3 Verifying Your Bluetooth Installation

- On your taskbar, right-click the **Bluetooth** icon, and select **Advanced Configuration**. The **Bluetooth Configuration** dialog box appears.
- Click the **Hardware** tab. The **Bluetooth Configuration** dialog box appears.
- In the **Device Properties** box, check the device status and device address. The device should be indicated as working properly and the device address should match the BDA, found on a label on your USB adapter.

4 Pairing Your USB Adapter to Other Bluetooth-Enabled Devices

You need to pair your USB adapter for it to work with other Bluetooth-enabled devices. Use the My Bluetooth Places application to pair your USB adapter to Bluetooth-enabled devices. For more information about the My Bluetooth Places application, refer to the User's Guide (on CD).

- On your taskbar, double-click the **My Bluetooth Places** icon . The **My Bluetooth Places** window appears.
- Double-click the **Find Bluetooth Devices** icon.
For Windows XP only: In the **Bluetooth Tasks** box, click **View devices in range**.

- In the **Entire Bluetooth Neighborhood** dialog box, double-click the Bluetooth-enabled device that you want to pair to.

- Follow the instructions on the screen.



If prompted for a Bluetooth pin code, type the pin code of the Bluetooth-enabled device that you are pairing your USB adapter to.

Product Registration

Registering your product ensures you receive the most appropriate service and product support available. You can register your product during installation or at www.creative.com/register.

Please note that your warranty rights are not dependent on registration.

Creative Knowledge Base

Resolve and troubleshoot technical queries at Creative's 24-hour self-help Knowledge Base. Go to www.creative.com and select your region.

Customer Support Services & Warranty

You can find Customer Support Services, Warranty and other information in the Installation CD.

Customer Support Services	d:\support\<region>\<language>\support.chm
Warranty	d:\warranty\<region>\<language>\warranty.chm Please keep your Proof of Purchase for the duration of the Warranty period.
Regulatory	d:\fcc\<language>\cb2436\doc.chm
User's Guide	d:\manual\<language>\cb2436\manual.pdf

(replace d:\ with the drive letter of your CD-ROM/DVD-ROM drive, <region> with the region you are in, and <language> with the language that the document is in).

Keep this document for future reference.