







Navigating the Windows Start screen


The Windows Start screen provides a central location where you can access your information and email, browse the Web, stream videos, view photos, and access your social media websites. Depending on your computer model, you can use a keyboard and mouse, or a touch screen to navigate the Windows Start screen.


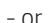


- Find Settings**
Select the **Start** button , and then select the **Settings** icon .
- Shut down your computer**
Select the **Start** button , select the **Power** icon , and then select **Shut down**.
- Display the Start menu**
Select the **Start** button  in the lower-left corner of the taskbar.
- Search**
In the taskbar search box, begin typing the name of an app, setting, file, or Internet topic.
- Switch between open apps**
Select the **Task view** icon  in the taskbar.

The features and appearance of the Windows screen may vary, depending on the version of the operating system and additional software installed on your computer.

Find more information

- Windows products**
To learn more about Windows and to access help topics, select the **Start** button , and then select **Tips** or **Get Help** (requires a network connection).

To access the user guides, select the **Start** button , select **HP Help and Support**, and then select **HP Documentation**.
– or –
To access the user guides, select the **Start** button , select **HP**, and then select **HP Documentation**.
- Linux products**
To access the user guides, double-click the **HP Documents** icon on the desktop.
- FreeDOS products**
To access the user guides, select **HP Documents** on the Boot Menu.

You do not need to connect to the Internet to access the user guides. To view the user guides on the Web, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.
A *User Guides* disc is included with some products.

Contact support

To resolve a hardware or software problem, go to <http://www.hp.com/support>. Use this site to get more information about your product, including links to discussion forums and instructions on troubleshooting. You can also find information on how to contact HP and open a support case.

Locate system information


Depending on your product, a service label is either affixed to the bottom of the computer or is located inside the battery bay or beneath the service door.

In Windows, briefly press the **fn+esc** key combination to display the System Information screen.

Feedback on this document

To help us improve this document, please send any suggestions, comments, or errors to doc.feedback@hp.com. Include the document part number (located near the bar code) when submitting your feedback.

Go wireless

Select the network icon  in the lower-right corner of the taskbar, and then connect to one of the available networks.

To set up a WLAN and connect to the Internet, you need a broadband modem (either DSL or cable) (purchased separately), high-speed Internet service purchased from an Internet service provider, and a wireless router (purchased separately).

- WARNING:** To reduce the risk of electric shock or damage to the equipment:
- Plug the power cord into an AC outlet that is easily accessible at all times.
 - Disconnect power from the computer by unplugging the power cord from the AC outlet.
 - If provided with a 3-pin attachment plug on the power cord, plug the cord into a grounded (earthed) 3-pin outlet. Do not disable the power cord grounding pin, for example, by attaching a 2-pin adapter. The grounding pin is an important safety feature.
- For more safety, regulatory, labeling and battery disposal information, refer to the *Regulatory, Safety and Environmental Notices* provided with your user guides. To locate the user guides for your computer, see the “Find more information” section of this poster.

WARNING: To reduce the risk of serious injury, read the *Safety & Comfort Guide* provided with your user guides. It describes proper workstation setup, and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is also available on the Web at <http://www.hp.com/ergo>.

WARNING: To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

REGULATORY MODEL NUMBER AND SIMPLIFIED DECLARATION OF CONFORMITY
The Regulatory Model Number (RMN) for this equipment is XXXXXXXXX. This RMN is located XXXXXXXXXXXXXXXXXXXXXXXX.
Hereby, HP declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC (products shipping before 12 June 2017) and Directive 2014/53/EU (products shipping on or after 12 June 2017). To view the Declaration of Conformity for this equipment, go to www.hp.eu/certificates and search using this equipment’s RMN.

SOFTWARE TERMS
By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller. For any further information or to request a full refund of the price of the computer, please contact your seller.

LIMITED WARRANTY
You can find your HP Limited Warranty located with the user guides on your product and/or on the CD or DVD provided in the box. In some countries or regions, HP may provide a printed warranty in the box. For countries or regions where the warranty is not provided in printed format, you can request a copy from <http://www.hp.com/go/orderdocuments>. For products purchased in Asia Pacific, you can write to HP at POD, PO Box 161, Kitchener Road Post Office, Singapore 912006. Include your product

name, and your name, phone number, and postal address.

PRODUCT DESCRIPTION
This product is an All-in-One desktop computer, desktop computer, thin client computer, or retail system and might feature a thin-panel display, TouchPad, processor, RAM, hard drive or solid-state drive, internal power supply, and external AC adapter. Depending on your computer model, the products have a rating of 100-240 V ac, 200-240 V ac, 220-240 V, or 100-127/200-240 V ac, 50-60 Hz or 50/60 Hz, 1.5 A, 1.8 A, 2 A, 2.5A, 3 A, 3.6 A, 4 A, 5 A, 5.2 A, 5.5 A, 6 A, 8 A, 6 / 3 A, 8 / 4 A, 8 - 4 A, 12 - 8 A or 4.5 - 2.25 A. The AC adapter has a rating of 100-240 V ac, 50-60 Hz, 0.5 A, 0.6 A, 0.8 A, 1 A, 1.2 A, 1.4 A, 1.5 A, 1.6 A, 1.7 A, 1.9 A, 2 A, 2.2 A, 2.25 A, 2.31 A, 2.4 A, 2.5 A, 2.7 A, 2.9 A, 3.5 A, 3.6 A, or 4 A. If you have a wireless keyboard, mouse, and RF remote control, they have a rating of 1.5 V dc, 3 V dc, 3.2 V dc, or 5 V dc, 5 mA, 10 mA, 20 mA, 25 mA, 30 mA, 40 mA, 50 mA, 60 mA, 80 mA, 100 mA, or 300 mA.

To access the latest user guides or manuals for your product, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

© Copyright 2017 HP Development Company, L.P.
McAfee LiveSafe is a trademark of McAfee, Inc. in the United States and other countries. Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. Not all features are available in all editions of Windows. This computer may require upgraded and/or separately purchased hardware, drivers, and/or software to take full advantage of Windows functionality. See <http://www.microsoft.com> for details.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.
First Edition: July 2017



Contents



Quick tour



Computer front

- 1 Vent
- 2 Status lights (5)

Computer rear

- 3 Alignment rails
- 4 Hook

Computer right side

- 5 Vent
- 6 USB ports (2)

Computer left side


- 7 Vent
- 8 Power connector

Computer top

- 9 Power button
- 10 Power connector
- 11 USB ports (2)
- 12 HDMI port
- 13 Mini DisplayPort
- 14 USB Type-C port
- 15 Audio-out (headphone)/ Audio-in (microphone) combo jack

Computer bottom

- 16 External battery connectors (2)
- 17 Docking connector
- 18 Alignment pins

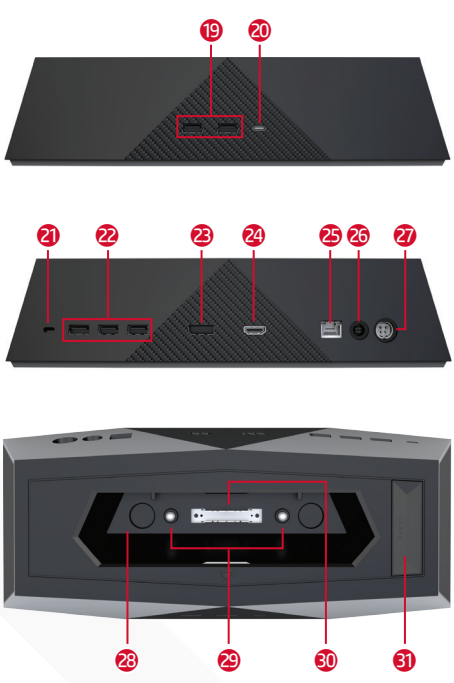

Docking station front


- 19 USB ports (2)
- 20 USB Type-C port

Docking station rear

- 21 Security cable slot
- 22 USB ports (3)
- 23 DisplayPort
- 24 HDMI port
- 25 RJ-45 (network) jack
- 26 Power connectors
- 27 Power connectors

Docking station top

- 28 Docking connector
- 29 Alignment pins
- 30 Charge light
- 31 Eject button

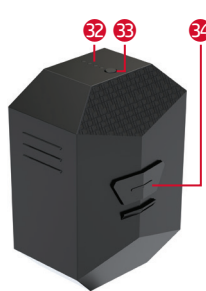

External batteries

- 32 Battery status lights (4)
- 33 Battery charge button
- 34 Release button

Quick Setup

