

ATIVA™

WIRELESS
MAGNETIC
EARBUDS
USER MANUAL

Audífonos inalámbricos
Manual de usuario

Call for technical support
1-877-777-4357
Llame para asistencia técnica
1-877-777-4357

Before operating this unit,
please read all instructions.

Lea atentamente las instrucciones
antes de usar este producto.



MW-PCT-01
version XX20
Items 9486969
9487185 9487006

Distributed by: Office Depot, Inc.
6600 N. Military Trail, Boca Raton, FL 33496 USA
Ativa is a trademark or registered trademark of The Office Club, Inc.
© 2020 Office Depot, Inc. All Rights Reserved. Made in China

ATIVA- Wireless Earbuds

Main Features

- Connect wireless with smartphones, tablets, pads and many notebooks and MP3 players.
- Build-in speaker phone and support hand free for calling.
- Up to 10 meters wireless connection range
- Build-in 55mAh re-chargeable battery for up to 4 hours playing time
- USB charging port

Package Contents

- Wireless earbuds
- USB charging cable
- User manual



Remark: The product color as above is only presented for refer.
Actual color pls refer to packaging and actual product.

Controls

1. LED indicator
2. Volume up (short press the button) / Next track (press and hold the button)
3. Multi-function button: Power ON/OFF, Play/Pause, Phone answer /reject
4. Volume down (short press the button) / Previous track (press and hold the button)
5. Microphone
6. Charging port

LED Indicators

- Charging: Solid RED
- Fully charged: RED off and Solid BLUE light up
- Pairing Mode: Flashing BLUE/RED alternately
- Connected: Slow flashing BLUE (flash per 5 s)
- Playing/ Pause: Slow flashing BLUE (flash per 5 s)

Charging Earbud

Please charge the earbuds before use.Approximately 1 hours required for fully charged.

- Plug the USB cable into the port on the speaker, plug the other end into the USB port on the computer or on the AC adapter with USB jack (DC 5V).
- Red LED will turn on to indicate that the unit is charging.
- Red LED will turn off and Blue LED light up when fully charged.
- Low battery: Voice prompt "low battery" when in low battery and with Red LED flash.

Start-up& Shutdown Functions

- Hold and press multi-function button (middle of buttons) to power ON the earbuds.
- Voice prompts "power on" and blue & red LED flashes alternately, waiting for pairing.
- Hold and press multi-function button to shut down the earbuds.
- LED off if shutdown the earbuds.

Pairing Your Device

- Place the earbuds near the Bluetooth-enabled device.
- Press and hold multi-function button (middle of buttons) to power ON the earbuds, blue and red LED flashes alternately and voice prompts "pairing", the earbud is now in pairing mode.Follow the instructions of your device to search for the earbud.
- The earbud is called "MW-PCT-01" and choose the device.
- When your device is connected and the pairing is completed, the voice prompts"connected" and the LED indicator will turn to solid blue.
- Short press Volume +/- to adjust desired volume. Press and hold Volume +/- to skip to next track / previous track.

NOTE: The earbud is in the state of pairing the last device default in the first 3 seconds after starting. If failed to pair, the speaker will be in state of pairing automatically.

Receiving incoming call

If a Bluetooth enabled phone is connected wirelessly to the unit, you can receive calls and speak through the microphone on the units. When receive an incoming call, the voice prompt with incoming phone no. Press the multifunction button (middle of buttons) to answer the incoming call or hold the button to reject the call. Press multifunction button again to end call.

FCC statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
FCC ID: A7M-MW-PCT-01

Office Depot, Inc. Limited One Year Product Warranty

This limited warranty covers the original purchase of new product used for normal commercial, personal or household use. Office Depot, Inc. (ODP) warrants its products will be free from defects in materials and workmanship (normal wear and tear excepted), for one (1) year from the date of purchase, except as provided below. ODP, at its option, will replace with a comparable product, free of charge, any product purchased from it that fails under normal use as a result of such defect. This warranty does not apply to damage caused by fire, accident, negligence, misuse, use other than as stated in product instructions, improper cleaning or other circumstances not directly attributable to defects in materials and workmanship.

Proof of purchase is required in the form of a receipt (copy or original) to validate warranty. Warranty claims without the receipt may be rejected.

If Office Depot, Inc. chooses to provide a refund for such product, it will be fulfilled in the form of an Office Depot Merchandise card. Claims fulfilled in this manner take approximately 30 days to process.

ODP PROVIDES THIS LIMITED WARRANTY IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESSED OR IMPLIED. EXPRESSLY EXCLUDED ARE ALL WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY. OFFICE DEPOT'S SOLE OBLIGATION AND THE USER'S EXCLUSIVE REMEDY UNDER THIS WARRANTY SHALL BE LIMITED TO THE REPAIR, REFUND (IN THE FORM OF AN OFFICE DEPOT MERCHANDISE CARD) OR REPLACEMENT AT

ODP'S SOLE DISCRETION AND COST, OF PRODUCT OR COMPONENTS.

IN NO EVENT SHALL ODP, ITS AFFILIATES, SUBSIDIARIES OR PARENT COMPANIES BE RESPONSIBLE FOR CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES ARISING OUT OF A CLAIM OF DEFECTIVE PRODUCT EVEN IF ODP HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

SOME STATES OR PROVINCES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY BY STATE OR PROVINCE.

THIS WARRANTY APPLIES ONLY TO THE U.S. AND CANADA.

Service Instructions

Please call: 1-877-777-4357(Monday to Friday 8am to 8pm EST) for warranty service.