

200HB

BLUETOOTH HEADPHONE

INSTRUCTION FOR USE



REMAX[®]
INTERNATIONAL


Designed & Produced by :Refine Industrial (Asia) Limited
Manufacturer:Shenzhen Remax Co.,Ltd.
Add:Mingjun Industrial Park, Huarong Rd., Baoan Area,
Shenzhen,CN
Service Hotline:4006755178

SPECIFICATIONS

Bluetooth version:	Bluetooth V3.0
Effective transmission range:	10m
Battery:	300mAh Li polymer battery
Charging time:	2.5 hours (maximum)
Playing time:	10 hours
Stand-by time:	up to 30 days
LED indicator status:	Blue indicator light displays battery level, Red indicator light shows charging status, In pairing mode, both indicator lights will flash alternatively
Diameter of driver unit:	40mm
Frequency range:	20Hz~20kHz
Sensitivity at 1KHz:	110 ± 5 dB
Impedance:	32±15% Ω
Distortion rate :	≤1% at 1KHz
Rated power input:	10mW
Net Weight:	Approx. 160g

ACCESSORIES

USB charging cable	1x
3.5mm audio cable	1x
Instruction Manual	1x

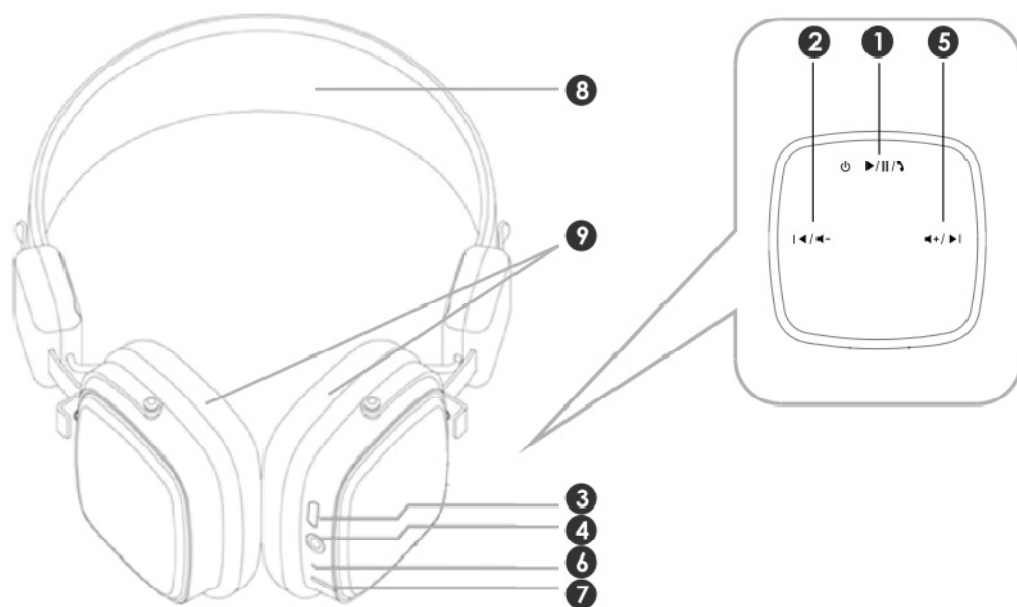

1 Multifunction



 
2 Volume Down
/ Fast Forward



3 Micro USB charging port

4 3.5mm audio jack

5 Volume Up / Rewind



6 Microphone

8 Microfiber P. U Leather headband

7 LED indicator

9 High quality, soft ear cushion

CHARGING

- Connect headphone to a PC or power adapter with USB charging cable.
- The LED indicator will give red light
- The LED indicator will go off when the headphone is fully charged.

PAIRING

- ➊ Keep the headphone and the device within 1 meter when pairing.
- ➋ Enter pairing mode by holding the On/Off button (1) for approx. 3 seconds until the LED light flashes blue.
- ➌ Open Bluetooth in settings on your device and select "RB-200HB" from the list.
- ➍ Some devices require a pin code. In this case, enter "0000".
- ➎ If required, select "RB-200HB" from the Bluetooth device list to complete the connection.
- ➏ Once successfully paired, the LED light will flash blue once every few seconds.

PLAYBACK / CONTROLS

- ➊ Once paired, you can play music from your phone or music player.
- ➋ Press "-" (2) or "+" (5) to fast forward or rewind.
- ➌ Press "-" (2) on "+" (5) for at least 3 seconds to adjust Volume Up or Down.
- ➍ Press Play/Pause (1) to Play or Pause.

Note: Controls will not be available during charging.

CALLS

- ❶ When there is an incoming call, press Play/Pause (1) once to answer. Press this button again to hang up.
- ❷ Press “-” (2) and “+” (5) for at least 3 seconds to adjust the volume level down or up

POWER ON

Press and hold On/Off button (1) to turn the headphones on. The LED will flash blue when the headphone is active.

Note: The headphone will activate when charging.

POWER OFF

Press and hold On/Off button (1) to turn off the headphone. The LED indicator will go out when the headphone is off.

**How to fold the
headphone:**



CALLS

- ❶ When there is an incoming call, press Play/Pause (1) once to answer. Press this button again to hang up.
- ❷ Press “-” (2) and “+” (5) for at least 3 seconds to adjust the volume level down or up

POWER ON

Press and hold On/Off button (1) to turn the headphones on. The LED will flash blue when the headphone is active.

Note: The headphone will activate when charging.

POWER OFF

Press and hold On/Off button (1) to turn off the headphone. The LED indicator will go out when the headphone is off.

**How to fold the
headphone:**



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.