


REMAX

RX-S100 Wireless Headphone

V5.0 WIRELESS Neck-band Headphone

说明书



micro


Music Can Be Played Anytime

基本参数

产品型号:RX-S100;
传输距离:≥10M
阻抗:50Ω;
驱动单元:Φ10mm@16ohm;
输入:DC 5V≐80mA;
待机时间:≥240H;
产品净重:27g

无线版本:V5.0;
频响:50Hz~20KHz;
额定功率:3mW
电池容量:120mAh
播放时间:≈10H (80% volume)
充电时间:≈2.5H;
产品颜色:黑色/灰色

TF播放功能



插入内存卡
无需手机亦可播放

按键功能介绍

开/关机
开机:在关机状态下,长按开机关键3秒,听到语音提示“power on, pairing”,红灯闪烁,表示耳机已开机。
关机:在待机状态下,长按开机关键3秒,听到语音提示“power off”,表示耳机已关机。

蓝牙连接
匹配与连接
开机状态下,指示灯红蓝闪烁,找到手机或者其他设备上蓝牙名“RX-S100”,然后连接。当听到提示音“connected”,蓝牙连接成功。
自动回连
关掉耳机后重新开启耳机。当听到提示音“power on, connected”,表示耳机已自动连接蓝牙。


按键
+ 键:长按2秒,下一曲;短按,音量加
- 键:长按2秒,上一曲;短按,音量减
O 键:来电时短按接听,短按2次拒听
末号重播:短按2次

充电
用标准micro USB充电线充电;充电时,亮红灯;充满后,红灯熄灭。

省电模式
当耳机设有连接蓝牙,耳机将在5分钟后自动关机


蓝牙首次使用操作

(注:以苹果手机为例)
使用前请使用5V-500mAh以上的合格格的充电器配接给耳机充满电
一个合适不合适耳帽会影响声音的优劣,正确的佩戴会让你感到舒适。由于每个人的耳型大小不一样我们提供了大,中,小三个不同规格的耳帽,使用前请选择适合自己的耳帽。



多功能键

2. 开启用户手机蓝牙功能(或其他蓝牙设备),并进行搜索或扫描,此时手机会搜索到附近所有的蓝牙设备,对于早期版本的手机点选搜索到的耳机名称:RX-S100(部分手机会提示输入密码,请输入:0000),



3. 成功配对连接后,耳机指示灯转为蓝灯闪烁,表示配对连接成功

LED指示状态

配对状态:红蓝灯交替闪烁
配对成功:蓝灯常亮
开机:蓝灯闪烁三次
关机:红灯常亮2秒
待机:蓝灯5秒闪烁1次
充电:中亮红灯
充满电:红灯熄灭

产品使用时警告事项及注意事项

1.切勿使用具有腐蚀性的清洁剂清理本产品。
2.切勿让本产品加热或靠近火源,如煮食炉。
3.切勿让本产品长时间受阳光直接照射。
4.切勿将本产品弃置于火中,避免发生爆炸。
5.切勿尝试拆开本产品作出任何修改,因为它并不包含任何维修组件。
6.切勿在雨中使用本产品。
7.如果长时期内不打算使用本产品,请您将它储存在干燥的环境中,并每月至少为耳机充电一次以延长寿命,避免极端的温度和灰尘

保修条例

本产品有效保修期自出售之日起一年内;在保修期限内正常使用和维护的情况下,机器本身材料及配件出现问题,发生故障,经证实,本公司将提供免费修理及更换零件。

本产品的保修不适用于:
A. 耳机已超出保修期;
B. 用户未按照说明指南要求,造成耳机折断,外壳破损;
C. 未经本公司授权自行拆装,修理,改动结构;
D. 无法提供保修卡及消费凭证;
E. 因自然灾害等不可抗力(如地震、火灾)原因造成的产品故障或损害;

注:
保修服务不包含产品运输费用及在不提供上门服务

本保修条款解释权归睿迈实业所有

保修反馈表(勾选)

A. 耳机无声音 B. 音质变差 C. 按键无法操作
D. 无法配对设备 E. 无法充电 F. 其他

用户购买时间

购买的经销商

问题出现时间

用户联系方式


Short press to answer an incoming call, short press twice to reject.
Last number redial: Short press twice

REMAX

RX-S100 Wireless Headphone

V5.0 WIRELESS Neck-band Headphone

说明书



micro

Music Can Be Played Anytime

Product Model: RX-S100
Wireless Version: V5.0
Transmission Distance: ≥10M
Frequency Response: 50Hz~20KHz
Impedance: 50Ω
Rated Power: 3mW
Driver Unit: Φ10mm@16ohm
Battery Capacity: 120mAh
Input:DC 5V≐80mA
Play Time: ≈10H (80% volume)
Standby Time: 240H
Charging Time: ≈2.5H
Net Weight: 27g
Product Color: Black/Grey

TF play mode
Insert the memory card
No need for a mobile phone to play

On/Off
Power on: In the off state, press the power button for 3 seconds with a voice prompt "power on, pairing". The red and blue lights flash, indicating that the headphone is powered on.
Power off: In the standby state, press and hold the power button for 3 seconds with a voice prompt "power off", indicating that the earphone is powered off.


Wireless connection
(1) Pairing and connection:
When the headphone is powered on, the indicator light flashes red and blue, search the name "RX-S100" on the wireless name list on your phone or other devices, and then connect. Then a prompt tone "connected" is heard to indicate successful connection.
(2) Automatic reconnection:
Turn off the headphone and then power on again. Then a prompt tone "power on, connected" is heard to indicate an automatic wireless reconnection.

Buttons
+/-: Press and hold for 2 seconds for the next track; short press for volume up.
-/: Press and hold for 2 seconds for the previous track; short press for volume down.
O: Short press to answer an incoming call, short press twice to reject.
Last number redial: Short press twice

Charging
Use a standard micro USB charging cable to charge. When charging, the red light is on; when fully charged, the red light is off.

Power saving mode
When the headphone is not connected to any wireless devices, it will automatically power off after 5 minutes.


Wireless first operation
(Note: Take Iphone as an example)
Please fully charge the headphone with a standard 5V-500mAh charging adapter before use.
A suitable ear tip will affect the sound quality, and correct wearing will make you feel comfortable. We provide three different sizes of ear tips—large, medium and small ones for you to choose from.



Multifunction Button

1. Please connect the wireless headphone to the mobile phone (or other connected device) within 1 meter. Press and hold the multifunction button for about 3 seconds until the red/blue light flashes alternately while is in off state. Now it is in pairing state for connection.

2. Turn on the wireless function on the mobile phone (or other wireless device) and search or scan. All nearby wireless devices will be searched for. For the earlier version of phones, click on the searched headphone name: RX-S100 (some phones will prompt for the password, please enter: 0000),



3. After successful pairing connection, the headphone indicator turns to blue light flashing.

LED indicator

Pairing status: The red and blue lights flash alternately.
Successful pairing: The blue light flashes slowly.
Power on: The blue light flashes three times.
Power off: The red light remains on for 2 seconds.
Standby: The blue light flashes once every 5 seconds.
The red light is on during charging.
The red light is off when fully charged.

Warnings

1. Do not use abrasive cleaning agents to clean this product.
2. Do not allow this product to heat or fire sources, such as cooking stoves.
3. Do not expose this product to direct sunlight for a long time.
4. Do not dispose of this product in a fire to avoid explosion.
5. Do not try to disassemble the product to make any modifications, for it does not contain any repair components.
6. Do not use the product in the rain.
7. If the product is not intended for use for a long period of time, please store it in a dry environment and charge it at least once a month to extend the life and avoid extreme temperatures and dust.

Warranty

This product is covered under warranty for a period of one year from the date of sale limited to normal use and maintenance of the machine parts, materials and functions. Problems and failures verified upon further identification will be provided free repair and replacement parts.

This warranty does not apply:
(A) to a product that is out of warranty;
(B) to damage caused by operating the product outside the permitted or intended uses described by WK;
(C) to a product that has been disassembled, repaired or modified with- out the authorization of WK;
(D) if warranty card and proof of purchase cannot be presented;
(E) to damage caused by earthquake, fire or other external causes, natural disasters, etc.

Note: The warranty does not include product transport costs and does not provide on-site maintenance services.

Remine reserves all rights to clarify this warranty interpretation.

Warranty Feedback Form(Tick off)

A. No sound B. Sound quality deteriorates
C. Button mal-function D. Unable to pair other devices
E. Can not be recharged F. Others
Buying time

Dealers of sale

Time of problems

User' s contact info

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates noise and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio-TV technician for help.
NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.