

REMINGTON®

BEARD GROOMER

MB-350 Use & Care Guide

Encuentre la Guía de Uso
en español en
www.remington-products.com



Register Your New Product Today!

By registering your new Remington® product you will receive these important benefits:
Proof of ownership • Product protection • Product registration • Special offer
Register online at: www.remington-products.com

¡Registre su nuevo producto hoy mismo!

Si registra su nueva Remington® podrá participar de los siguientes beneficios:
Prueba de propiedad • Protección del producto • Registro de propiedad • Ofertas especiales
Regístrelo en línea en: www.remington-products.com

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:

- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Use only when the appliance is in dry condition.
- Detach the appliance from the power supply cord before cleaning.
- Do not submerge this appliance in water.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- Your trimmer should never be left unattended when plugged in, except when charging your rechargeable trimmer.
- Close supervision is necessary when this trimmer is used by, on, or near children or persons with special needs or certain disabilities.
- Use this trimmer only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Keep the cord away from heated surfaces.

- Never operate this trimmer if it has a damaged cord or if it is not working properly, if it has been dropped or damaged, or dropped into water.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this trimmer with a damaged or broken cutting unit, as facial injury may occur.
- Always attach plug to trimmer, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the trimmer for storage.
- Always store your trimmer and adapter in a moisture-free area. Make sure the cord is disconnected from the trimmer.
- Dispose of used batteries properly. Do not incinerate. Batteries may explode if overheated. Do not wrap in metal or aluminum foil. Wrap in newspaper before discarding. It is suggested that you contact local town/city officials to determine proper battery redemption site(s) in your area.
- The power unit is intended to be correctly oriented in a floor-mount or vertical position.
- For household use only.

KEEP AWAY FROM CHILDREN

SAVE THESE INSTRUCTIONS

Grooming System



Grooming System Checklist

- | | |
|---------------------------------------|--------------------------------------|
| 1. Groomer Body | 9. Flexing Trimmer Head |
| 2. On/Off Switch | 10. Flexing Trimmer Head Lock Switch |
| 3. Charging Indicator Light | 11. Power Adaptor Socket |
| 4. Low Battery Indicator Light | 12. Electrical Power Adaptor |
| 5. 8-Position Zoom Wheel | 13. Grooming Comb |
| 6. Length Position Indicator | 14. Cleaning Brush |
| 7. Turbo Button | 15. Oil Bottle |
| 8. Removable Trimmer Guard Attachment | |

Before Using

Please refer to the safety instructions and warnings at the front of this manual before you proceed.

Before using your Grooming System for the first time, charge the unit for 14-16 hours for optimal performance:

1. Connect the Power Adaptor cord to the Power Socket on Groomer Body. Plug into electrical outlet.
 2. The LED Indicator Light illuminates green when charging.
 3. After first use, the Groomer can be recharged in 1 to 3 hours.
- The Low battery LED illuminates red when approximately 10-minutes of charge remain.
 - Plugging in the Electrical Power Adaptor will only recharge batteries. The Groomer will operate only when fully charged and the Power Adaptor is removed.

NOTE:

- Always store this appliance and cord in a moisture-free area. Do not store in temperatures exceeding 140°F (60°C).
- Do not wrap the cord of the charging adaptor around the appliance.

What To Use

Setting	Beard Style	Length
1	Stubble look	1 mm 0.04"
2		2.5 mm 0.1"
3	Short	4 mm 0.16"
4		5.5 mm 0.22"
5	Medium	7 mm 0.28"
6		8.5 mm 0.34"
7		10 mm 0.40"
8	Long	11.5 mm 0.46"

- The Zoom Wheel has 8 length settings (1 = Stubble Look; 8 = Long). When first becoming familiar with the Grooming System, begin with a higher numbered setting. Adjust cutting length as desired.
- To adjust, rotate wheel counterclockwise for longer setting; clockwise for shorter lengths. Wheel clicks when in position and setting can be viewed in window.

How To Use

TRIMMER GUARD ATTACHMENT

Remove Trimmer Guard Attachment to define hairline edges (e.g. sideburns, nape of neck, beard \ mustache lines). Also, remove guard to clean cutter assembly. To remove:

- 1. Be sure Groomer is in OFF position.
- 2. While holding Groomer in one hand, while holding Zoom Wheel with other hand, gently pull Trimmer Guard Attachment away from Groomer.
- 3. Replace Guard by repeating steps #1 and #2. (NOTE: Guard can only be placed on Groomer one way. If not fitting properly, simply remove and reverse).

FLEXING TRIMMER HEAD

The Grooming System is equipped with a locking switch to secure the flexing trimmer head for detail trimming. To lock:

- 1. Be sure Groomer is in OFF position.
- 2. Be sure Trimmer Head is in natural “unflexed” position.
- 3. Slide Head Lock Switch downward. Should Trimmer fail to lock, simply unlock switch, readjust Trimmer to its natural unflexed position, and reset lock.
- 4. To unlock Head, repeat step #1 followed by sliding Head Lock Switch upward.

Grooming Tips

HAIR:

- Should be dry and free of lotions or other liquids.
- Comb outward to obtain maximum height/length and facing in the same direction.

BEARD:

- When TRIMMING, add Trimmer Guard Attachment. For maximum control, lock Trimmer Head to define lines. Front side of Groomer should be facing away from face. Starting beneath chin, follow jaw line back toward ear with upward motion. Allow Trimmer Guard Attachment to follow natural contours of face. Trim either against or with the direction of beard growth, whichever is preferred.
- When THINNING or TAPERING, remove Trimmer Guard Attachment. Using the Styling Comb, hold beard hairs in place while Trimming.
- To Create the STUBBLE LOOK, add Trimmer Guard Attachment and set to setting #1 or #2. While holding Trimmer horizontally, trim hairs by using an upward or downward motion (against or with direction of hair growth, as

preferred). For an even closer Stubble Look, remove Trimmer Guard Attachment altogether and repeat previous steps.

MUSTACHE:

- Use Grooming Comb to first straighten hairs for trimming.
- With Trimmer Guard Attachment removed and Trimmer Head locked, trim hairs using an upward motion. After achieving desired length, use downward motion to blend mustache hairs.


SIDEBURNS:

- Use Grooming Comb to first straighten hairs for trimming.
- With Trimmer Guard Attachment added and holding Groomer vertically, simply trim using a downward motion.

NAPE OF NECK:

- Using a hand-held mirror is necessary if self-trimming.
- Remove Trimmer Guard Attachment and lock Trimmer Head for maximum precision and control.
- Lift hair off neck, using index finger to cover & protect those hairs NOT needing trimming.
- Carefully touch cutting blade to neck, slowly moving the groomer in an upward direction until stopped by index finger.

Cleaning, Care & Maintenance

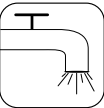

This groomer is a washable appliance, the hand-held part of which may be cleaned under water.

The Groomer is fitted with high-quality hardened steel or ceramic cutting blades that are permanently lubricated. Cleaning should only be done with the soft Cleaning Brush supplied. Always clean Grooming System attachments regularly to ensure maximum performance and a proper operating life. Do not use liquid cleaners on the cutters nor harsh corrosive chemicals on Grooming Body.

Groomer is washable by rinsing blades under running water. However, do NOT submerge Grooming System in water. Blades must be lubricated again with Oil supplied if Groomer is washed.

NOTE:

- Detach the groomer from the power supply cord before cleaning.
- Do not use the groomer until it has dried.
- 1. Be sure Groomer is in Off position.
- 2. Remove Trimmer Guard Attachment. Shake or blow out accumulated hair.
- 3. Flip blade open by gently pushing upward on cutting teeth. Cutter assembly will swing up, exposing and making accessible the assembly underside.
- 4. Blow out all loose hairs. Using the Cleaning Brush provided, remove remaining hairs from cutting teeth and hair pocket.

OILING BLADES & CAUTIONS

- Rinsing blades under water (above) requires lubricating the cutting blades 1x monthly. Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with fingertip. Wipe away all excess.
- Use only light-grade oils as these will not evaporate nor slow down speed of cutting blades.
- Do not use hair oil, grease, or any oil mixed with kerosene nor solvent as these too will evaporate.

Troubleshooting

Q: WHAT IF THE CUTTERS DON'T MOVE WHEN TURNED ON?

A: The cutting unit may be dirty or clogged. Clean and lubricate the groomer as described previously.

Q: WHAT IF THE GROOMER DOESN'T WORK AT ALL WHEN TURNED ON?

A: The groomer might simply need charging. Follow instructions for charging as described previously. Should charging prove unsuccessful, contact customer service at 1-800-736-4648 for assistance.

Q: WHAT IF THE GROOMER FAILS TO HOLD A CHARGE?

A: Fully discharge the groomer by running until completely stopping. Next, follow recharging instructions described previously. If time between recharging cycles fails to increase, the battery might require replacement. Contact customer service at 1-800-736-4648 for assistance.

Battery Removal

NOTE: Always recycle or properly dispose of batteries according to Local and State requirements.

- 1. Unplug groomer from outlet to avoid risk of electrical shock.

- 2. Remove top cover panel using a flat-head screwdriver to gently pry panel free.
- 3. Remove 3 Phillips-head screws under top cover panel.
- 4. Remove top housing by gently prying housing sides free from clips.
- 5. Remove electrical housing from bottom housing.
- 6. Unclip bottom of electrical housing from top. Slide housing apart, exposing the circuit board and batteries.
- 7. Clip wires connected to batteries to free them from the circuit board.

CAUTION: THESE NICKEL-CADMIUM BATTERIES MUST BE RECYCLED OR DISPOSED OF IN ACCORDANCE WITH STATE AND LOCAL REGULATIONS.

Do not burn or mutilate, as they may burst or release toxic materials. Do not short-circuit, as this may cause burns.



The EPA-certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates Spectrum Brands, Inc. is voluntary participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. the RBRC® program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-8-BATTERYSM for information on Ni-Cd battery recycling and disposal bans/restriction in your area. Spectrum Brands, Inc. involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

Performance Guarantee

Limited Two-Year Warranty

Spectrum Brands, Inc. is a global consumer products company with a diverse portfolio of world-class brands, including Remington-branded electric shavers. Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Spectrum Brands, Inc., Attention: Consumer Services, 601 Rayovac Drive, Madison, WI 53711. For more information call 800-736-4648 in the US or 800-268-0425 in Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

120 VAC 60 Hz
Questions or comments: Call 800-736-4648 in U.S. or 800-268-0425 in Canada or visit www.remington-products.com
© Registered trademark of/ Marque Déposée de ROVCAL, Inc.
©2008 ROVCAL, Inc. 05/08 Job# CS35470
Dist By: Spectrum Brands, Inc. 601 Rayovac Drive, Madison, WI 53711

MADE IN CHINA T22-26546

Contains a listed adaptor.