

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not used in accordance with the instructions, may cause harmful interference to radio communications.

There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase or decrease the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced remote control/TV technician for help.
- It is strongly recommended that the TV be plugged into a separate wall outlet.

The user is cautioned that changes and modifications made to the equipment without the approval of the manufacturer could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

“CAUTION” : Exposure to Radio Frequency Radiation. Antenna shall be mounted in such a manner to minimize the potential for human contact during normal operation. The antenna should not be contacted during operation to avoid the possibility of exceeding the FCC radio frequency exposure limit.

**TV Power (Encendido de televisor):** Enciende y apaga el televisor.

**All Power (Todo encendido):** Un botón para apagar y encender el televisor, el AVR y el DTA o el decodificador.

**Vol +/-:** Controla el volumen del DTA o el decodificador. Una vez que se programa el control remoto para que controle un televisor y/o un AVR, estas teclas controlan el volumen del televisor o el AVR.

**CH ^/v:** Selecciona el siguiente canal más alto o más bajo.

**Mute (Silenciar):** Enciende y apaga el sonido.

**TV Input (Entrada de televisión):** Cambia a la siguiente entrada disponible del televisor.

*Nota: Algunas de las funciones mencionadas requieren que el control remoto se programe para controlar un televisor y/o un AVR.*

**Controles de video:** Controlan la visualización de contenido on demand o de una videograbadora digital; Play (Reproducir), Pause (Pausar), Fast-Forward (Avanzar), Rewind (Retroceder) y Stop (Parar).

**Search (Buscar):** Busca contenido por canal, programa o palabras clave.

**Rec (Grabar):** Graba el contenido que se está viendo en ese momento.

*Nota: Algunas de las funciones mencionadas requieren un decodificador con videograbadora digital y/o acceso a programación on demand.*

**XFINITY/Menu (XFINITY/Menú):** Ingresa al menú XFINITY para dar acceso a la guía, programas almacenados, programación on demand y aplicaciones.

**Guide (Guía):** Atajo a los listados de televisión.

**OK (Seleccionar):** Selecciona el elemento resaltado dentro de la guía.

**Last (Último):** Regresa al canal o a la guía anterior.

**Exit (Salir):** Sale de las pantallas de guía y regresa a la visualización de televisión.

**Info (información):** Brinda una descripción del programa.

**Fav (Favoritos):** Configure sus listas de favoritos para obtener rápido acceso a sus canales favoritos.

**Setup (Configurar):** Se usa a fin de programar el control remoto para que controle un televisor, AVR, decodificador o DTA.

**A, B, C, D:** Teclas de control sensibles al contexto.

*Nota: Algunas de las funciones mencionadas requieren una guía de programación en pantalla que no está disponible con todos los equipos.*

**Teclado (0-9):** Seleccione el canal que quiere ver (p. ej., 0-9 o 0-2-6).

**Setup (Configurar):** Se usa a fin de programar el control remoto para que controle un televisor, AVR, decodificador o DTA.

**Swap (Alternar):** Cambie al canal actualmente disponible en el sintonizador que no se está viendo.

## Here's what your remote can do.

Esto es lo que tu control remoto puede hacer.

**TV Power:** Turns your TV on/off.

**All Power:** One button to turn the TV, AVR and DTA or set-top box on/off.

**Vol +/-:** Controls the volume on the DTA or set-top box. After your remote is programmed, these keys control the TV or AVR's volume.

**CH ^/v:** Selects the next higher or next lower channel.

**Mute:** Turns the sound on and off.

**TV Input:** Changes to the next available input on your TV.

*Note: Some features above require programming the remote for control of a TV and/or AVR.*

**Video Controls:** Controls On Demand or DVR viewing, Play, Pause, Fast-Forward, Rewind, and Stop.

**Search:** Search for content by channel, program, or key words.

**Rec:** Records content currently being viewed.

*Note: Some features above require a DVR set-top box and/or access to On Demand programming.*

**XFINITY/Menu:** Enters the on-screen guide menus.

**Guide:** Shortcut to TV listings.

**OK:** Selects the highlighted item within the guide.

**Last:** Returns to the previous channel or guide screen.

**Exit:** Exits guide screens and returns you to TV viewing.

**Info:** Provides a program description.

**Fav:** Allows you to set up or easily view your favorite channels.

**Setup:** Programs your remote control to your TV, AVR, set-top box or DTA.

**A, B, C, D:** Context-sensitive control keys.

*Note: Some features above require an on-screen programming guide not available with all devices.*

**Keypad (0-9):** Select the channel you want to view (e.g., 0-9 or 0-2-6).

**Setup:** Programs your remote control to your TV, AVR, set-top box or DTA.

**Swap:** Switches between two DVR tuners so you can control playback of two channels.

## Troubleshooting

**Q:** Why does the status LED flash red then green while I am entering the code on my remote?

**A:** You may have entered an incorrect code. Check the code and try re-entering it.

**Q:** Why does the status LED flash red, but there is no response when I press a key?

**A:** Make sure the remote is aimed at your TV or AVR and is no farther than 15 feet away. Also, make sure your set-top box or DTA is powered on and in plain sight.

**Helpful Tip:** Additional remote control programming support, including code lookup tool and frequently asked questions, can be found at [xfinity.com/remotes](http://xfinity.com/remotes).

**Additional Feature: Aim Anywhere Control**  
See the back of this user guide to learn how to pair your remote and set-top box or DTA\* for Aim Anywhere control, allowing you to control your devices even when they are placed behind your TV or in another room (up to 50 feet away).

\*Aim Anywhere control is not supported by all set-top boxes.

## CAN'T FIND YOUR CODE?

If you can't program your remote for TV and/or AVR control using the codes on the back of this guide, follow the steps below to search for your code.

1. Turn on your TV and AVR.
2. Press and hold the Setup button on your remote until the status LED changes from red to green.
3. To search for a TV code, enter 9-9-1 on the remote. To search for an AVR code, enter 9-9-2. The status LED should flash green twice.
4. Press the CH ^ button repeatedly to search through the manufacturer codes until the device you are programming turns off.
5. After the device turns off, press Setup. The status LED on your remote should flash green twice. Press the TV Power button on the remote. If the device turns on, your have successfully programmed your remote.

## Solución de problemas

**P.** ¿Por qué la luz LED de estado parpadea en color rojo y luego en verde mientras ingreso el código en el control remoto?

**R:** Es posible que haya ingresado un código incorrecto. Verifique el código y pruebe volver a ingresarlo.

**P.** ¿Por qué la luz LED de estado parpadea en rojo, pero no hay respuesta cuando presiono alguna tecla?

**R:** Asegúrese de que el control remoto apunte al televisor o AVR y no esté a más de 15 pies de distancia. Además, cerciórese de que su decodificador o DTA esté encendido y a plena vista.

**Consejo útil:** Puede encontrar más soporte para programar el control remoto, como la herramienta de búsqueda de código y las preguntas frecuentes, en [xfinity.com/remotes](http://xfinity.com/remotes).

**Función adicional: Control Aim Anywhere**  
Consulte en la parte posterior de esta guía del usuario para averiguar cómo sincronizar su control remoto y decodificador o DTA\* para el control Aim Anywhere, que permite controlar equipos aunque estén detrás del televisor o en otra habitación (a una distancia de hasta 50 pies).

\*No todos los decodificadores son compatibles con el control Aim Anywhere.

## It's simple to program your XFINITY Remote to control your TV and Audio Video Receiver.

Your XFINITY Remote is already programmed to control your set-top box or Digital Transport Adapter (DTA). To program the remote for control of Power, Volume, Mute and TV Input on your TV or Power, Volume, and Mute on your audio video receiver (AVR), including a soundbar, follow the steps below.

*Note: A soundbar is a type of AVR.*

### Here's how to program your remote for control of a TV or TV and AVR:

1. Install the remote control batteries and make sure your TV, AVR and set-top box or DTA are powered on.
2. Refer to the "Setup Codes for TVs" and "Setup Codes for AVRs and Soundbars" sections on the back of this guide to find the manufacturers of your TV and AVR.
3. Press and hold the Setup button on your remote until the status LED changes from red to green.
4. Enter the first code listed for the TV manufacturer. The status LED should flash green twice when the code is entered.
5. Press the TV Power button on the remote. If the TV turns off, you have successfully programmed your remote. Turn the TV back on and press the VOL +/- and Mute buttons to confirm they control the volume of your device.
6. If the TV (or AVR) does not turn off or the VOL +/- and Mute buttons do not work, repeat the steps above using the next code listed for your TV manufacturer.

If you only want to program your remote for TV control, you're all set!

Continue with the following steps to program your remote for AVR control.

*Note: To program your remote for simultaneous control of both a TV and AVR, the TV must be programmed before the AVR.*

7. Press and hold the Setup button on your remote until the status LED changes from red to green.
8. Enter the first code listed for the AVR manufacturer. The status LED should flash green twice when the code is entered.
9. Press the All Power button on the remote. If the AVR turns off, you have successfully programmed your remote. Turn the AVR back on and press the VOL +/- and Mute buttons to confirm they control the volume of your device. If so, you're all set!
10. If the AVR does not turn off or the VOL +/- and Mute buttons do not work, repeat the steps above using the next code listed for your AVR manufacturer.

### Here's how to program your remote for only AVR control:

1. Install the remote control batteries and make sure your AVR and set-top box or DTA are powered on.
2. Find the manufacturer of your AVR on the back of this guide.
3. Press and hold the Setup button on your remote until the status LED changes from red to green.
4. Enter the first code listed for the AVR manufacturer. The status LED should flash green twice when the code is entered.

5. Press the TV Power button on the remote. If the AVR turns off, you have successfully programmed your remote. Turn the AVR back on and press the VOL +/- and Mute buttons to confirm they control the volume of your device. If so, you're all set!

6. If the AVR does not turn off or the VOL +/- and Mute buttons do not work, repeat the steps above using next code listed for the device manufacturer. You may need to try several codes to find the one that works for your device.

## Instrucciones para programar su control remoto para que controle solamente un AVR:

1. Coloque las baterías al control remoto y asegúrese de que su AVR y decodificador o DTA estén encendidos.
2. Busque el fabricante de su AVR en la parte posterior de esta guía.
3. Mantenga presionado el botón Setup (Configurar) del control remoto hasta que la luz LED de estado cambie de color rojo a verde.
4. Ingrese el primer código de la lista del fabricante del AVR. La luz LED de estado debe parpadear en color verde dos veces cuando se ingresa el código.
5. Presione el botón TV Power (Encendido de televisor) del control remoto. Si el AVR se apaga, usted ha programado satisfactoriamente el control remoto. Vuelva a encender el AVR y presione los botones VOL +/- y Mute (Silenciar) para confirmar que controlan el volumen de su equipo. Si es así, ya terminó.
6. Si el AVR no se apaga o los botones VOL +/- y Mute (Silenciar) no funcionan, repita los pasos anteriores utilizando el siguiente código de la lista del fabricante del equipo. Es posible que deba probar varios códigos hasta encontrar el que funciona con su equipo.

## ¿NO PUEDE ENCONTRAR EL CÓDIGO?

Si no puede programar su control remoto para que controle un televisor y/o un AVR con los códigos que aparecen en la parte posterior de esta guía, siga los pasos a continuación para buscar su código.

1. Encienda su televisor y AVR.
2. Mantenga presionado el botón Setup (Configurar) del control remoto hasta que la luz LED de estado cambie de color rojo a verde.
3. En caso de buscar un código para televisor, ingrese 9-9-1 en el control remoto. En caso de buscar un código para AVR, ingrese 9-9-2. La luz LED de estado debe parpadear en color verde dos veces.
4. Presione el botón CH ^ reiteradamente para buscar entre los códigos del fabricante hasta que el equipo que está programando se apague.
5. Una vez que el equipo se apague, presione Setup (Configurar). La luz LED de estado del control remoto debe parpadear dos veces en color verde. Presione el botón TV Power (Encendido de televisor) del control remoto. Si el equipo se enciende, usted ha programado satisfactoriamente el control remoto.

## Programar el control remoto XFINITY para que controle su televisor y receptor de audio y video es muy sencillo.

El control remoto XFINITY ya está programado para controlar su decodificador o adaptador de transporte digital (Digital Transport Adapter, DTA). A fin de programar el control remoto para el control de Power (Encendido), Volume (Volumen), Mute (Silenciar) y TV Input (Entrada de televisión) de su televisor, o bien Power (Encendido), Volume (Volumen) y Mute (Silenciar) en su receptor de audio y video (audio video receiver, AVR), inclusive un sistema soundbar, siga los pasos a continuación.

*Nota: Un sistema soundbar es un tipo de AVR.*

### Instrucciones para programar su control remoto para que controle un televisor o televisor y AVR:

1. Coloque las baterías al control remoto y asegúrese de que su televisor, AVR y decodificador o DTA estén encendidos.
2. Consulte las secciones "Códigos de configuración para televisores" y "Códigos de configuración para AVR y Sistema Soundbar" en la parte posterior de esta guía para encontrar a los fabricantes de su televisor y AVR.
3. Mantenga presionado el botón Setup (Configurar) de su control remoto hasta que la luz LED de estado cambie de color rojo a verde.
4. Ingrese el primer código de la lista del fabricante del televisor. La luz LED de estado debe parpadear en color verde dos veces cuando se ingresa el código.
5. Presione el botón TV Power (Encendido de televisor) del control remoto. Si el televisor se apaga, usted ha programado satisfactoriamente el control remoto. Vuelva a encender el televisor y presione los botones VOL +/- y

Mute (Silenciar) para confirmar que controlan el volumen de su equipo.

6. Si el televisor (o el AVR) no se apaga o los botones VOL +/- y Mute (Silenciar) no funcionan, repita los pasos anteriores utilizando el código siguiente de la lista del fabricante de su televisor.

Si solamente quiere programar el control remoto para que controle el televisor, ya terminó. Continúe con los pasos siguientes con el fin de programar su control remoto para control de un AVR.

*Nota: Si desea programar su control remoto para que controle simultáneamente un televisor y un AVR, debe programar el televisor antes que el AVR.*

7. Mantenga presionado el botón Setup (Configurar) del control remoto hasta que la luz LED de estado cambie de color rojo a verde.
8. Ingrese el primer código de la lista del fabricante del AVR. La luz LED de estado debe parpadear en color verde dos veces cuando se ingresa el código.
9. Presione el botón All Power (Todo encendido) del control remoto. Si el AVR se apaga, usted ha programado satisfactoriamente el control remoto. Vuelva a encender el AVR y presione los botones VOL +/- y Mute (Silenciar) para confirmar que controlan el volumen de su equipo. Si es así, ya terminó.
10. Si el AVR no se apaga o los botones VOL +/- y Mute (Silenciar) no funcionan, repita los pasos anteriores utilizando el código siguiente de la lista del fabricante de su AVR.

## Info and Codes

## Información y Códigos

## SETUP CODES FOR TVs

### CÓDIGOS DE CONFIGURACIÓN PARA TELEVISORES

3M	10737, 11616, 11655
A-Mark	10003
Abex	10032
Accurian	11803
Acer	12244, 12245
Action	10873
ADC	12246
Admiral	10093,10463, 12246, 12258, 12286
Advert	10761,10783, 10815, 10817, 10842, 11933, 12267
Adventura	10046
Aftrom	10891
Aiko	10092
Aiwa	10701, 11914, 12248, 12270
Akai	10030,10060, 10098, 10672, 10702, 10812, 11207, 11385, 10030,10060,10098,10672, 10702, 10812, 11207, 11385, 11675, 11676, 11688, 11689, 11692, 11903, 11935
Alaron	10179, 10183, 10216
Albatron	10700, 10843
Amark	12286
Ambassador	10177
American Action	10180
Ampro	10751
Anaba	12249
Anam	10180
Anam National	10055
AO	10030, 12250, 12268, 12284, 12287, 11590, 11365
Aomni	11623
Apex Digital	10156, 10748, 10879, 10765, 10767, 10879, 10890, 11991
Archer	10003, 12286
Aspect	12251
Astar	11531, 11738
Audiovox	10451, 10180, 10092, 10003, 10623, 10802, 10846, 10875, 11284, 11951, 11952
Aurora Systems	10801
Aventura	10171
Bang & Olufsen	12252
Belcor	10019, 12284
Bell & Howell	10154, 10016, 12246, 12293
BenQ	11032, 11315
BlueSky	12253, 12254
Bradford	10180
Brillan	11007, 11257, 11258
Brockwood	10019
Broksonic	10236, 10463, 12258
Brokwood	12284
Bush	10355,
Byd:sign	11309
Cadia	11283
Candle	10030, 10046, 10056, 10186, 12284
Canon	10793, 11396
Carnivale	10030
Carver	10054, 10170
Casio	10611, 11205
CCE	10217, 10329
Celebrity	10000
Celera	10765
Centrios	12255
Changhong	10765
Cineral	12253
Cinego	11986
Citizen	10060, 10030, 10092, 10046, 10056, 10186, 10280, 10561, 11669, 11671, 11672, 11928, 11935, 12246, 12258, 12284, 12287
Clarion	10180
Classic	11984
CLP Classic	12284
Coby	12017, 12256, 12257
Colortyme	12284
Commercial	11447, 10047
Solutions	
Compaq	10749
Concerto	10056, 12284
Contec	10180, 12287
Craig	10180
Crosley	10054
Crown	10180
CTX	12286
Curtis Mathes	10047, 10054, 10154, 10451, 10093, 10060, 10702, 10030, 10145, 10166, 10016, 10056, 10466, 10747, 11147, 11347, 11919, 12246, 12284, 12293
CXC	10180
CyberHome	10794
Cybervision	12253
Cytrom	11326, 12003
Daewoo	10451, 10092, 10019, 10066, 11661, 10623, 10067,10091, 10661,10672,11909,11928, 12268, 12284
Daytron	10019, 12284
Dell	11264, 11080, 11178, 11403
Delta	11369
Denon	10145, 10511
Denstar	10628
Diamond Vision	11801, 11996, 12288
Digitstar	11565, 12267
Digital Lifestyles	11765, 11822
Digital Projection	11482, 11725, 11726, 11750
Inc.	
Dimensia	12293
Disney	12258, 12259
Dream Vision	11297
Dukane	12251
Dumont	10017
Durabrand	10463, 10180, 10178, 10171, 10003, 11034, 12258
Dwin	10093, 10747, 10774
Dynatech	10049
Dynex	11463, 11780, 11785
Elki	10735
Electroband	10000, 12287
Electrograph	11755, 11623
Electrohome	10463, 10446, 11570, 11670, 11672, 11760, 11761, 12284
Elektra	12246
Element	11687, 12260
Emerson	10154, 10451, 10236, 10463, 10180, 10178, 10171, 11963, 11928, 11913, 11911, 11909, 11905, 11665, 10282, 10280, 10270, 10183, 10181, 10179, 10177, 10038, 10019, 10623, 11963, 12248, 12258, 12270, 12284, 12285, 12288
Emprex	11422, 11546, 11765
Envision	10030, 10813, 11365, 12250, 12284
Epson	11122, 11290
Erae	11222
ESA	10812, 10171, 11963
Fisher	10154, 10159
Fujitsu	10179, 10186, 10683, 10853, 12008, 10809
Funai	10180, 10171, 10179, 11904, 11963, 11271, 12248, 12270
Futuretech	10180
Gateway	11755, 11756
GE	11447, 10047, 10051, 10451, 10178, 10021, 10027, 10029, 10055, 10135, 10279, 10282, 10747, 11907, 11919, 11922, 11347, 12284, 12290, 12293
Gibraltar	10017, 10030, 10019, 12284
Go Video	10886, 11823, 11831
GoldStar	10178, 10030, 10002, 10019, 12248, 12268, 12269, 12270, 12271, 12284
Goodmans	10360
Gradiente	10392, 12284
Grundig	10683
Grunpy	10180, 10179
H & B	11366
Haier	11034, 10768, 11009, 12295
Hallmark	10178, 12284
Hanns.G	11783
Hannspree	11348, 11745, 11783, 12261
Harley Davidson	10043, 10179, 11904
Harman/Kardon	10054, 10078
Harvard	10180, 10068
Hauppauge	12262
Havermy	10093
Helios	10865
Hello Kitty	10451
Hewlett Packard	11494, 11502, 11088, 11089, 11101
Hisense	10748, 11660, 12296
Hitachi	11145, 10145, 12243, 12143, 11904, 11345, 10797, 10737, 10724, 10723, 10413, 10279, 10227, 10173, 10151, 10097, 10095, 10056, 10038, 10032, 10016, 11960, 12246, 12248, 12251, 12270, 12284
Hyundai	10849, 11219, 11294
I-hnc	11746
ilo	11286, 11603, 11665, 11684, 11990
Infinity	10054, 12275
InFocus	10736, 10738, 10741, 10781, 11516, 12293
Initial	11970
Insignia	10191, 11780, 11892, 11204,

	11326, 11517, 11641, 11963, 12002, 12258, 12263, 12264, 12267
Inteq	10017
IX	10877
Janeil	10046
JBL	10054
JCB	10000
JC Penney	12268, 12284, 12293
Jensen	10761, 10050, 10815, 10817, 11299, 11933, 12284
JVC	10053, 10036, 10160, 10169, 10731, 11349, 11253, 12265
Kamp	10216
Kawasaki	12266
Kawasho	10216, 10308, 12284
Kaypani	10052
KDS	11687
KEC	10180
Kenwood	10030, 10019, 12284
KLH	10765, 10767
Kloss	10024, 10046, 10078
Knoll Systems	10781
Konka	10628, 10632, 10638, 10707, 11385, 11831, 11939
Kost	11262, 11483
Kreisen	10876, 11474
KTV	10180, 10030, 10183, 10217, 10280, 12274, 12287
Kurazai	12246
Lasonic	12288
Legend	12267
LG	11265, 10178, 10700, 10442, 10856, 11178, 11530, 11637, 11758, 11934, 11993, 12248, 12268, 12269, 12270, 12271, 12284
Llyod's	11904
Lodgenet	12246, 12293
Loewe	10136
Logik	10016, 12246, 12293
Luce	10837, 11031
Luxman	10056, 12284
LXI	10047, 10054, 10154, 10156, 10178, 10747, 12248, 12270, 12284, 12293
Magnavox	11454, 11866, 10054, 10030, 10706, 11990, 11963, 11913, 11904, 11525, 11365, 11198, 11254, 10386, 10802, 10230, 10187, 10186, 10179, 10096, 10036, 10028, 10024, 10020, 12275, 12284
Magnin	11907
Majestic	10015, 10016, 12246, 12293
Marantz	10054, 10030, 10704, 10854, 10855, 11398, 11554, 12284
Matsushita	10250, 10650
Maxent	11755, 11757
MB Quart	11868
Medion	12259
Megapower	10700
Megatron	10178, 10145, 10003, 12251, 12271, 12284
MEI	12287
Memorex	10154, 10463, 10150, 10178, 10016, 10179, 10877, 11570, 11911, 11920, 12246, 12258, 12284, 12293
MGA	10150, 10178, 10030, 10019, 10155, 11907, 12268, 12284
Micro	11436
Midland	10047, 10017, 10051, 10032, 10747
Mintek	11990, 11603
Minutz	10021
Mitsubishi	11250, 10093, 10150, 10178, 10014, 10019, 10098, 10155, 10331, 10358, 10592, 10836, 10868, 11278, 11392, 12268, 12284
MonivisoIn	10700, 10843
Montgomery Ward	12246, 12293
Motorola	10093, 10055, 10835, 12286
Moxell	10835
MTC	10060, 10030, 10019, 10049, 10056, 10091, 10216, 12268, 12284, 12287
Multitech	10180, 10049, 10217
Myron & Davis	12251, 12270, 12284
NAD	10156, 10178, 10866, 10037, 10056, 12284
Nakamichi	11493
Naxa	11998
NEC	10030, 10019, 10036, 10056, 10170, 10434, 10455, 10497, 10882, 11398, 11704, 11797, 12026, 12268, 12284
NetTV	11755

Nikko	10178, 10030, 10092, 12284
Niko	11581
Noblex	10430
Norcent	10748, 10824, 11089, 11365, 11590, 11591
Norwood Micro	11286, 11296, 11303
Noshi	10018
NTC	10092
NuVision	11657
Olevia	11144, 11240, 11331, 12272
Olympus	11342
Onwa	10180
Optimus	10154, 10250, 10166, 10650, 11913, 12273
Optoma	10887, 11348, 11674
Optonica	10093, 10165, 12286
Orion	10236, 10463, 11463, 10179, 11905, 11911, 12258
Panasonic	10250, 10051, 10055, 10650, 11291, 11941, 10162, 10226, 10375, 11310, 11410, 11919, 12273, 12274
Penney	10047, 10156, 10051, 10060, 10178, 10030, 11919, 11907, 10747, 10309, 10149, 10032, 10027, 10021, 10019, 10018, 10003, 10002, 11347
Petters	11523
Philco	10054, 10030, 10019, 10020, 10028, 10096, 10302, 12268, 11925
12284	
Philips	11454, 10054, 10037, 10690, 11483, 12275, 12284
Phillips-Magnavox	12275
Pilot	10030, 10019, 12284
Pioneer	10166, 10679, 10866, 10038, 10172, 11398, 12284
Piva	12277, 12276
Polarar	11496
Polaroid	10765, 12063, 12002, 11991, 11962, 11769, 11767, 11766, 11762, 11687, 11565, 11538, 11523, 11385, 11341, 11328, 11327, 11326, 11316, 11314, 11286, 11276, 11262, 10865, 12267
Portland	10092, 10019, 12268, 12284
Prima	10761, 10815, 10817, 11389, 11785, 11933, 10783, 12267
Princeton	10700, 10717
Princeton Graphics	12286
Prism	10051
Proscan	11447, 10047, 11347, 10466, 10747, 11922, 12291, 12293
Proton	10178, 10003, 10031, 10052, 10466, 12284
Protron	11320, 11323
Proview	10835, 11687
Pulsar	10017, 10019, 12284
Puneet	11546
Pvision	11222
Quasar	10250, 10051, 10055, 10165, 10650, 10219, 11919, 12273, 12274
RadioShack	10047, 10154, 10180, 10178, 10030, 10165, 12248, 12270, 12284, 12290, 12293
RCA	11447, 10047, 12002, 11953, 11948, 11922, 11919, 11907, 11781, 10747, 10278, 10254, 10090, 10679, 11047 11147, 11247, 11347, 11547, 11958, 10038, 10029, 10019, 10018, 12268, 12284, 12290, 12291, 12292, 12293
Realistic	10154, 10180, 10178, 10030, 10165, 10019, 10032, 10056, 12248, 12270, 12284, 12293
RevolutionHD	11623
Rhapsody	10183, 10216, 12287
Runco	10017, 10030, 10497, 10612, 11398, 11629
Sampo	10030, 11755, 10032, 10052, 11597, 12284
Samsung	10812, 10702, 10178, 10030, 11959, 11632, 11575, 11060, 10814, 10766, 10587, 10482, 10427, 10408, 10329, 10217, 10056, 10032, 10019, 11903, 12268, 12280, 12281, 12284
Sansui	10463, 11409, 11904, 11911, 11935, 12258, 12282
Sanyo	10154, 10088, 10159, 10232, 10484, 10735, 10798, 10799, 11907, 12284
Sceptre	10878, 11360, 11599
Scimitsu	10019
Scotch	10178, 12284

Scott	10236, 10180, 10178, 10019, 10179, 10309, 11711, 12284
Sears	10047, 10054, 10154, 10156, 10178, 10171, 10015, 10149, 10159, 11068, 10179, 10747, 11007, 11904, 10056, 12284, 12293
Seleco	10737, 11297
Selectron	12283
Sharp	10093, 10153, 10165, 10386, 11602, 10491, 10851, 12284, 12285, 12286
Sharper Image	11950
Sheng Chia	10093
Sherwood	11399
Shogun	10019, 12284
Signature	10016, 12246, 12293
Signet	10800, 10844, 11262
SiM2 Multimedia	11297
Simpson	10186, 10187
Skyworth	11799
Solarism	11220
Sole	10813, 11031, 11366, 11377, 11483, 11530, 11623, 12075, 12076
Sonic	12287
Sony	11100, 10000, 10011, 10353, 10834, 11317, 11400, 11685, 11786, 11791, 11904, 11925
Soundesign	10180, 10178, 10179, 10186, 12284
Sova	11320, 11952
Soyo	11546, 11746, 11824, 11826, 11828, 11830, 11831
Spectra	12288
Spectricon	10003
Spectroniq	11687
Squareview	10171
SSS	10180, 10019, 12284
Starlite	10180
Studio Experience	10843
SunBrite	11420, 11435
Superscan	10093, 10864
Supra	12284
Supre-Macy	10046
Supreme	10000
SVA	10748, 10587, 10768, 10865, 10870, 10871, 10872, 12289
Sylvania	11864, 10054, 10030, 10171, 11271, 10020, 10028, 10065, 10096, 11314, 11665, 11963, 12248, 12258, 12270, 12284
Symphonic	10180, 10171, 11904, 11913, 12248, 12270