




## OPERATING SET-UP

**8** When the TV power turns on, press the [VERIFY] icon.



**9** Use the operation buttons on the screen to confirm TV operation.

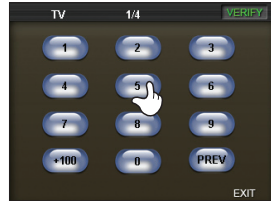

**10** If all TV functions are operating, press the [EXIT] icon.



**11** Press the [OK] icon to save.  
Repeat steps 3-10 to set another device.





## OPERATING SET-UP

### I CODE LEARNING

- 1 Press the [REMOTE] icon on the screen to open the menu.  
The [REMOTE] screen appears.



- 2 Press the [Settings] icon on the screen.  
The [Settings] screen appears.



- 3 Press the [LEARN] icon on the screen.  
Place remote and the original remote head to head.



- 4 Press the [NEXT] icon on the screen.





## OPERATING SET-UP

**5** Select a device that you want to learn.




**6** Press the button to be learned on the remote.



**7** Press the button on the original remote control.



**8** Press [EXIT] button to complete the procedure.  
If there is a learn failure message, repeat Step 6~7 again.

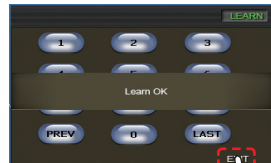



## OPERATING SET-UP

### I SELECT SIGNAL BETWEEN IR/RF(Network Mode)

RF mode needs to be used together with models which are compatible with the TSR750.

(Model name : RHxx and ZRxx series)

This procedure needs to be proceeded after completing PAIRING THE REMOTE CONTROL WITH THE RECEIVER Procedure. Otherwise, device can not be controlled through receiver.

- 1 Press the [REMOTE] icon on the screen to open the menu.

The [REMOTE] screen appears.



- 2 Press the [Settings] icon on the screen.

The [Settings] screen appears.



- 3 Select [IR/RF] on the top menu bar.

All devices are selected as IR.

HOME : IR OUTPUT  
AVR : RF OUTPUT



- 4 Press a device which you like to change.


Ex) TV





## OPERATING SET-UP

- 5** The receiver connected through previous pairing procedure is displayed. Select a device. If you do not want, press [EXIT] button.

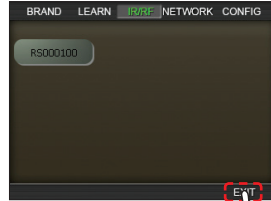

- 6** When complete, the icon of TV is changed to RF.



- 7** Press [EXIT] button to complete the procedure.





## OPERATING SET-UP

### I SELECT SIGNAL BETWEEN IR/RF (Stand\_Alone Mode)

RF mode needs to be used together with models which are compatible with the TSR750.  
(Model name : RHxx and ZRxx series)

- 1 Press the [REMOTE] icon on the screen to open the menu.  
The [REMOTE] screen appears.



- 2 Press the [Setting] icon on the screen.  
The [Setting] screen appears.



- 3 Select [IR/RF] on the top menu bar.  
All devices are selected as IR.

HOME : IR OUTPUT  
AVR : RF OUTPUT



- 4 Press a device which you like to change.  
Ex) TV





## OPERATING SET-UP

- 5** Press [+] or [-] to change RF Channel.  
Press [OK] button to save RF channel.



- 6** Once it is completed, TV icon is changed to RF.



- 7** Press [EXIT] button to complete the procedure.





## OPERATING SET-UP

### PAIRING THE REMOTE CONTROL WITH THE RECEIVER (Network Mode)

Receiver needs to be set up in advance according to the operating(Network) section on the receiver manual.

- 1 Press the [REMOTE] icon on the screen to open the menu.  
The [REMOTE] screen appears.



- 2 Press the [Setting] icon on the screen.  
The [Setting] screen appears.





- 3 Select [NETWORK] on the top menu bar.  
It will take around 15-30 sec. to join network.



In case of success in joining...

In case of failure joining...

- 4 In case of success in joining, the find devices procedure will be proceeded.

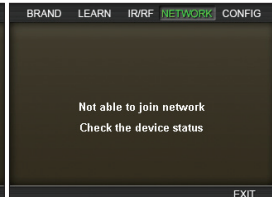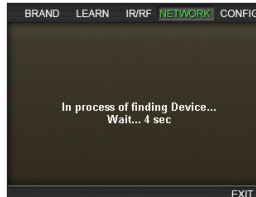





## OPERATING SET-UP


5

Once procedure is completed, a device is displayed.  
Compare the label on the bottom of the receiver with device name.  
If not the same, Press [Update] Button.  
If the same, Press [EXIT] button to finalize procedure.



6

In case that device is not found, press [Update] button.

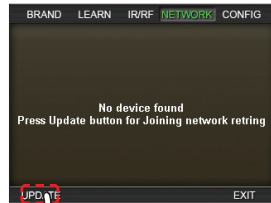

### Note

#### ■ RF Frequency Range

Ch11: 2405MHz, Ch12: 2410MHz, Ch13: 2415MHz, Ch14: 2420MHz, Ch15: 2425MHz,  
Ch16: 2430MHz, Ch17: 2435MHz, Ch18: 2440MHz, Ch19: 2445MHz, Ch20: 2450MHz,  
Ch21: 2455MHz, Ch22: 2460MHz, Ch23: 2465MHz, Ch24: 2470MHz, Ch25: 2475MHz,  
Ch26:2480MHz (16Channel, Fc)



## OPERATING SET-UP

### I CONFIGURATION (TOUCH, EXTERNAL BUTTON SOUND Settings)

- 1 Press the [REMOTE] icon on the screen to open the menu.  
The [REMOTE] screen appears.




- 2 Press the [Settings] icon on the screen.  
The [Settings] screen appears.



- 3 Press the [CONFIG] icon in the top menu bar.



- 4 Select the Touch or External Button to be modified, and select a sound.  
When settings are complete, press the [EXIT] icon to end.

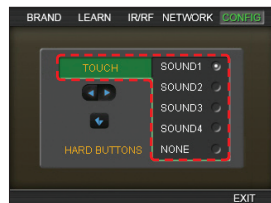



## PHOTO

### I PHOTO Function Buttons



1	<b>▲▼◀▶</b>	<b>ARROW</b>	Moves [UP/DOWN/LEFT/RIGHT] in the preview screen.
	<b>OK</b>	<b>OK</b>	Opens the selected image file for viewing.
2	<b>MENU</b>	<b>MENU</b>	Opens a preview of the image in the Picture Frame folder.
3	<b>EXIT</b>	<b>EXIT</b>	Ends the still image screen and begins the slide mode.
4	<b>🏠</b>	<b>HOME</b>	Moves to the Home screen.
5	<b>CH +, CH -</b>	<b>CHANNEL</b>	Plays the [Next/Previous] MP3 file.
	<b>VOL +, VOL -</b>	<b>VOLUME</b>	Turns the volume of the currently playing MP3 file [Up/Down].
6	<b>🔇</b>	<b>MUTE</b>	Mutes the volume of the currently playing MP3 file.



# PHOTO

## I PHOTO SET-UP (SLIDE MODE)

Touching the photo image on the screen moves to the PHOTO SET-UP.



1	DELAY	<b>+, -</b>	[Increases/Decreases] the delay time.
		<b>10</b>	Displays the delay time.
2	SLIDE	<b>MOVE</b>	Photo images appear from left to right.
		<b>IN</b>	Photo images appear from the outside edges inward to the center.
		<b>OUT</b>	Photo images appear from the center outward to the outside edges.
3	<b>CONTINUE</b>		Saves the settings and continues viewing.
4	<b>EXIT</b>		Ends the photo display.



# PHOTO

## I PHOTO DISPLAY

- 1** Press the [REMOTE] icon on the screen to open the menu.  
The [PHOTO] screen appears.




- 2** Photo images are automatically displayed.  
Any MP3 files contained in the Picture Frame folder are also played.



- 3** Press the [MENU] button during display.  
The image preview appears at the bottom of the LCD screen.



- 4** Move the cursor via the [UP/DOWN/LEFT/RIGHT] buttons to the image to be used in the still screen.  
The corresponding image can also be touched.

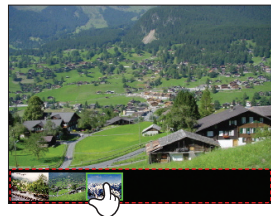




## PHOTO

- 5** After selecting the desired image, press the [OK] button.



- 6** To end the still screen and convert to slide mode, press the [EXIT] button.

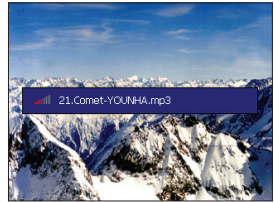

- 7** Press the product's [HOME] button to end the photo mode.  
The main screen appears.






# PHOTO

## I Music File and Image File Saving

The following are instructions for using the PHOTO function of the remote control to save image and music files.

- Supported File Formats -
- Music Files: MP3, WAV
  - Image Files: BMP, JPG, PNG

**1** Turn the remote control power ON, and connect it to the PC via the USB cable.

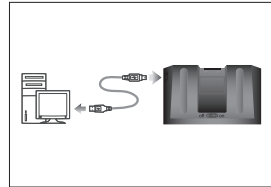

**2** When the connection is complete, the ActiveSync program opens. Click the [Cancel] icon in the ActiveSync screen.



### Note

- Please refer to the manager help to save image or music file on remote control.



# UTILITY

## I UTILITY Main Screen



1		Calendar
2		Calculator
3		Program Version
4		Game





## UTILITY

### I Calendar

Displays the current year, month, day, and time.



1	Operation Icons	Moves to the next/previous month.
2	TODAY	Displays the current day.
3	EXIT	Ends the calendar function.



## UTILITY

### I Calculator


Offers a calculator function.



1	BackSpace	Deletes entered numbers one at a time.
2	C	Resets the input field.
3	000	Multiplies the current number by 1000.
4	EXIT	Ends the calculator function.

### I Program Version

Displays the current version of the installed program.

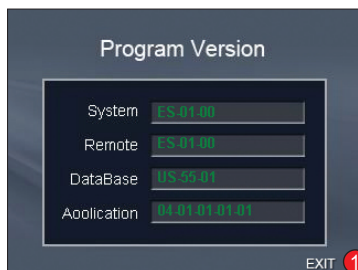

1	EXIT	Ends the program version function.
---	------	------------------------------------



## UTILITY

---

### I Game




1	START	Begins the PUZZLE game.
2	CONFIG	Controls the game settings.
3	SCORE	Displays the rank order of puzzle completion times.
4	EXIT	Ends the game function.



## UTILITY

### I Game Settings

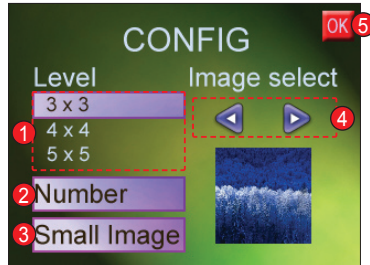

1	Level	Selects the game difficulty.
2	Number	Displays the number of the fragmented image.
3	Small Imge	Displays the image of the puzzle to be completed.
4	Image select	Selects the image to be used in the game.
5	OK	Saves the settings and returns to the main game screen.




## UTILITY

### I Game Instructions


- 1 Press the [UTILITY] icon on the screen to open the menu.  
The [UTILITY] screen appears.




- 2 Press the [GAME] icon on the screen.  
The [GAME] screen appears.

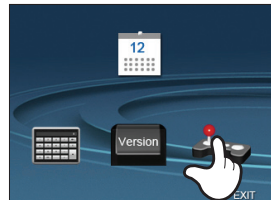

- 3 Press the [START] icon on the main game screen.  
The game begins.

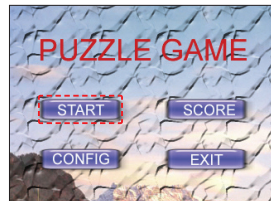

- 4 After the puzzle image to be completed is scrambled, the game begins.  
Drag and arrange the pieces to comprise the image shown in the upper right of the screen to finish.  
To end the game at any time, press the [EXIT] icon.

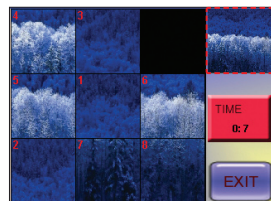






# SETTING

## I SETTING Main Screen

**1** Press the [SETTING] icon on the screen to open the menu.




**2** The SYSTEM SET-UP screen appears. Select the SYSTEM, START PROGRAM, CHARGING MODE, and DIMMING MODE settings.

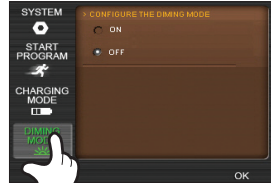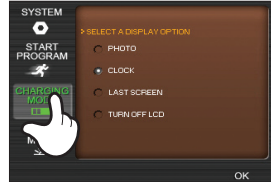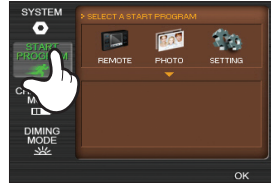



# SETTING

## I SYSTEM

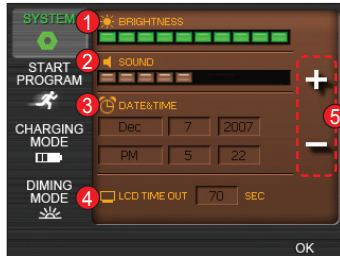

1	BRIGHTNESS	Adjusts the LCD brightness.
2	SOUND	Adjusts the sound volume.
3	DATE & TIME	Adjusts the current time and day/month/year.
4	LCD TIME OUT	Sets the time period before the remote control is automatically turned off.
5	To modify settings, select the corresponding part, and use the [+ , -] buttons to adjust.	



# SETTING

## I START PROGRAM




1	SELECT A START PROGRAM	Runs automatically upon product operation as set by the user.
---	------------------------	---





# SETTING

## I DISPLAY MODE SET-UP WHILE CHARGING

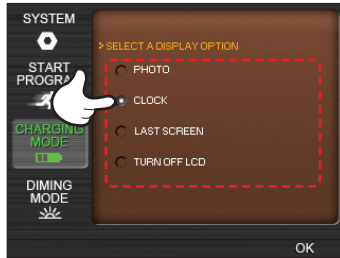


1	SELECT A DISPLAY OPTION	PHOTO: Runs the PHOTO function of the remote control CLOCK: Displays the current time and year, month, day calendar LAST SCREEN: Keep LCD screen TURN OFF LCD: Turns off the LCD screen
---	-------------------------	--



# SETTING

## DIMING MODE

This function dims the LCD screen after a specified amount of time to reduce glare.

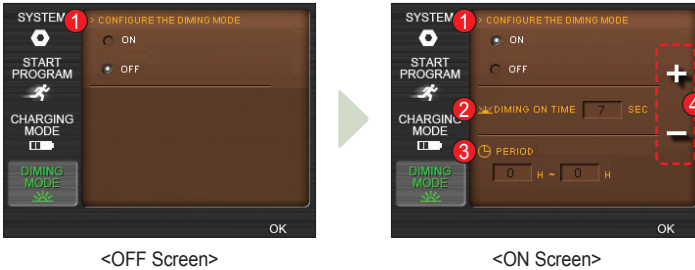

1	CONFIGURE THE DIMMING MODE	Turns the dimming mode ON/OFF.
2	DIMMING ON TIME	Sets the time interval before automatic dimming of the remote control LCD screen.
3	PERIOD	Sets the start time and end time for the dimming mode. (24-hour based clock)
4	To modify settings, select the corresponding part, and use the [+ , -] buttons to adjust.	

A large, vertically oriented rounded rectangle with a thin gray border. Inside the rectangle, there are 25 horizontal dotted lines spaced evenly, providing a template for writing. The lines are evenly spaced and extend across the width of the box. The corners of the box are rounded.