

INTOVA

X4K

QUICK START GUIDE



FCC STATEMENT


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- » Reorient or relocate the receiving antenna.
- » Increase the separation between the equipment and receiver.
- » Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- » Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

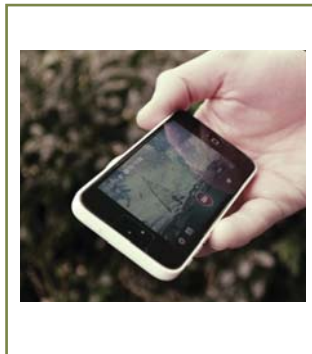

WiFi REMOTE FUNCTION

(For use above water/on land only)

- 1. Download & install INTOVA WiFi app** onto an iOS or Android wireless device such as a smart phone or tablet.
- 2. Turn on camera's WiFi** by pressing and holding MENU button for 2 sec until "X" disappears from WiFi icon on lower left corner of LCD screen.
- 3. Connect to X4K camera**
WiFi signal: INTOVA X4K
Password: 1234567890
- 4. Open INTOVA WiFi app** to control camera.



2.4G REMOTE

(For use above water/on land only)

- L. Selected mode indicator**
 - » Align mode icon to select.
- M. Mode selector ring**
 - » Turn ring to select video/photo/time lapse/slow motion modes.
- N. Remote "shutter" button**
 - » Press to start/stop video, take photo.
- O. Adjustable Velcro strap**
 - » Attach remote to wrist or arm.

The 2.4G remote is not waterproof. Damage due to use underwater or exposure to water is not covered under warranty.
For complete instructions on WiFi or 2.4G remote go to www.intova.com

BUTTONS AND INTERFACE

A. LED Video Light/Flash

- » Flashes red when video recording is in progress.
 - » Flashes blue when remote control function is activated.
- ### B. Shutter Button
- » Video mode: start/stop recording.
 - » Photo mode: shutter button.
 - » View mode: enter Playback menu
 - 1) set Video Play mode
 - 2) select single/all file delete
 - » Video Light/Flash on/off (press & hold 2 seconds).

C. Power/Mode Button

- » Power the camera on/off (press & hold 2 seconds).
- » Select Video/Photo/View mode (quick press).
- » View mode: view thumbnails, return to thumbnail view, exit view mode/go to video mode.
- » Video/Photo Menus: exit menus/menu functions/function choices.
- » Playback menu: exit menu and return to view mode.

D. Indicator Light

- » Red LED is ON while charging and OFF when charge is complete.

- » Flashes red when video recording is in progress.
- » Flashes blue when remote control function is activated.

E. Door Lock

F. Removable Housing Door

G. Tripod Mount

H. Float Strap Attachment

I. Down Button

- » Scroll to select: menu/menu function/function choice/thumbnail.
- » Video/photo mode: Digital zoom out.
- » Video playback: speed up video playback.
- » One touch LCD on/off.

J. Menu/OK Button

- » Access Menu.
- » Select.
- » One touch WiFi on/off. (press & hold 2 seconds)
- » Playback mode: start/stop video.

K. Up Button

- » Scroll to select: menu/menu function/function choice/thumbnail.
- » Video/photo mode: Digital zoom in.
- » Video playback: slow down video playback.

SPECIFICATIONS AND PRECAUTIONS

- » A microSD card up to 128GB in size and minimum 95MB/s speed must be properly inserted into the X4K camera's card port before use.
- » If using a microSD card that was previously used in a different digital device, FORMAT memory card in a computer prior to use since previously existing files on a memory card may cause camera to malfunction.
- » Use supplied mini USB cable plugged into a computer's USB port to recharging camera's li-ion battery. If using a USB wall plug adapter, the USB output must be 5V DC and 1A. Using a different output voltage can cause damage to the camera and is not covered under warranty.
- » If camera is not used for a prolonged period of time, the li-ion battery must be recharged periodically to maintain operating ability. Allowing total discharge of the battery may cause it to become non-functional and is not covered under warranty.
- » O-ring on waterproof door must be properly maintained by inspecting and removing any dirt, sand, hair, debris, etc. before and after use. Apply minimal amount of silicone grease to O-ring only when necessary. Too much silicone grease applied at one time or a build up of excess silicone grease can lead to leakage and is not covered under warranty.
- » Do not leave or store the camera in direct sunlight. Prolonged exposure to direct sunlight can damage the camera and is not covered under warranty.
- » Do not aim camera directly into the sun for a prolonged period since this can damage the image sensor and is not covered under warranty.
- » Store in a cool, dry environment.
- » Clean with a soft dry cloth and take special care around lens.

LIMITED WARRANTY

This product has a limited 1 year warranty, to the original purchaser, to be free from defects in materials and workmanship. Follow all product instructions and warnings as warranty does not cover damage due to misuse, improper care, accidents, or alterations. See www.intova.com for further details.



1. OPEN THE HOUSING DOOR



2. INSERT LI-ION BATTERY



3. CHARGE BATTERY



4. INSERT MICRO SD CARD



5. POWER ON (press and hold 2 seconds)



6. PRESS SHUTTER TO SHOOT/RECORD



7. VIDEO LIGHT OR FLASH

* **To activate LED video light:** in video mode press and hold shutter button for 2 seconds until light bulb icon appears.

» Video light will turn on when starting to record and turns off when recording is stopped.

* **To activate LED photo flash:** in photo mode press and hold shutter button for 2 seconds until light bulb icon appears.

» Photo flash will go off when taking a photo.
Note: Flash will only sync in extremely low light to no light conditions.

Need help using your camera?

WERE HERE FOR YOU.

Visit our website:

www.intova.com

Email customer support:

tech@intova.net

Call customer support:

+1(808) 837-0074