

# INSTRUCTIONS FOR OPERATION

RH380T LCD thermal remote control manual

## SETTING THE OPERATING CONTROLS

1. This unit operates on AAA 1.5 volts battery\*4 (not included). (We use AAA battery\*4)  
To prevent possible damage if the battery should leak, be sure to remove the battery when the unit is not use.

2. Store the controller away from excess heat or humidity.

3. This remote control unit is required with 16 code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security system. If you find that your fan and light kit go on and off without using your control, simply change the combination code in your transmitter and receiver.

4. Operation buttons on the panel of transmitter.

FAN key – For fan speed control

甲、 6→5→4→3→2→1→2→3 Cycle Operation

乙、 ON←→OFF

FAN/REV key – Fan reverse control

LIGHT DOWN key – For down light brightness and ON/OFF control.

LIGHT UPPER key – For upper light brightness and ON/OFF control.

LEARN key (SET) – Setting for learn code

5. Start the fan and Turn off the fan:


Press the selected speed button to run the fan at the desired.

Press the FAN button over 0.7 second for adjusting the ceiling fan speed. Press within 0.7 second for ON/OFF control.

6. Light control :

Turn the light on or off by only touching the LIGHT CONTROL button.

Keep pressing the button in excess of 0.7 second it becomes a dimmer, the light varies cyclically in 0.8 second.

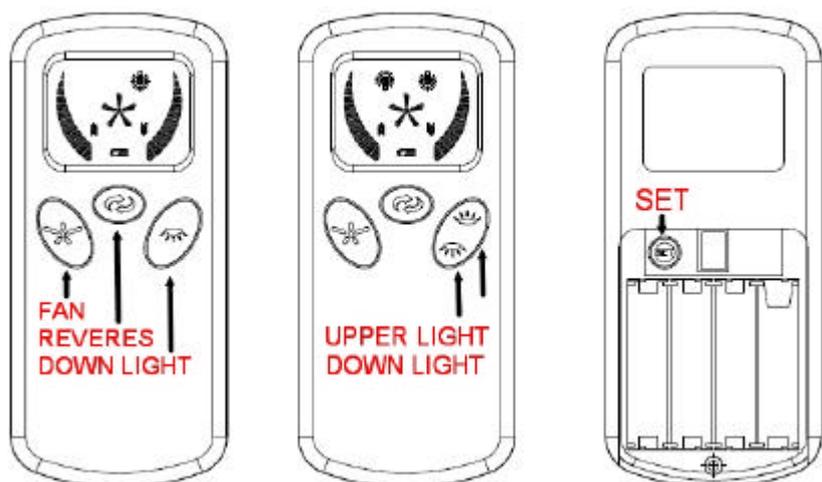

## **GENERAL INFORMATION :**

**This REMOTE controller is designed to separately control your ceiling fan speed and light brightness .**

**The Light ON/OFF button will control the light brightness ON/OFF .**

## **INSTRUCTIONS FOR INSTALLATION AND OPERATION OF FAN SPEED CONTROLLER**

### **A. Setting the code on your new transmitter .**

#### **1. Remove battery cover .**


**Press firmly below arrow and slide battery cover off .**

#### **2. Slide code switches to your choice of UP and DOWN position .**

**Factory setting is all UP . Do not use this setting .**

**Use ball point pen or small screwdriver .**

**Slide firmly up or down .**

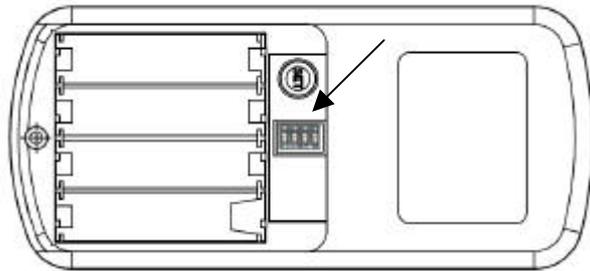

### **B. Setting the code on your Receiver unit .**

#### **1. turn on the power**

**2. To press the SET button within 1 minute and for over 3 seconds.**

**3. The learning will complete if the receiver light flash twice.**

## **NOTICE :**

**The changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment .**

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATIONS IS SUBJECT INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFEERENCE THAT MAY CAUSE UNDESRIED OPERATION.**