

INSTRUCTIONS FOR OPERATION

SETTING THE OPERATING CONTROLS

1. This unit operates on a 12 volts battery (not included).
To prevent possible damage if the battery should leak , be sure to remove the battery when the unit is not use .
2. Store the controller away from excess heat or humidity .
3. This remote control unit is required with 16 code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security system . If you find that your fan and light kit go on and off without using your control , simply change the combination code in your transmitter and receiver .
4. Operation buttons on the panel of transmitter .
HIGH key – For fan High speed .
MED key – For fan Medium speed .
LOW key – For fan Low speed .
OFF key – For fan speed off .
REV key – For fan speed Reverse .
LIGHT CONTROL key – For light brightness and ON/OFF control .
5. Start the fan :
Press the selected speed button to run the fan at the desired .
6. Turn off the fan :
Press the OFF button .
7. Light control :
Turn the light on or off by only touching the LIGHT CONTROL button .
Keep pressing the button in excess of 0.7 second it becomes a dimmer , the light varies cyclically in 0.8 second .


Page : 2-1

GENERAL INFORMATION :

This REMOTE controller is designed to separately control your ceiling fan speed and light brightness . The Light ON/OFF button will control the light brightness ON/OFF . The red indicator on the transmitter will light when the button is pressed .

INSTRUCTIONS FOR INSTALLATION AND OPERATION OF FAN SPEED CONTROLLER

- A. Setting the code on your new transmitter .
 1. Remove battery cover .

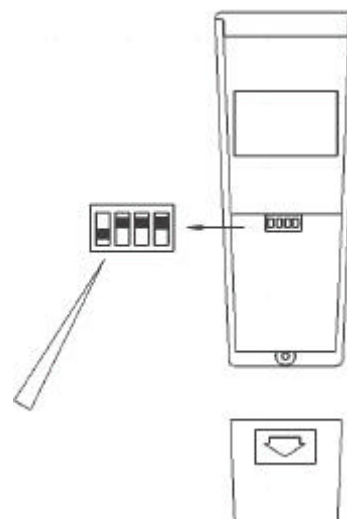

Press firmly below arrow and slide battery cover off .

- 2. Slide code switches to your choice of UP and DOWN position .**
- 3. Factory setting is all UP . Do not use this setting .**
- 4. Use ball point pen or small screwdriver .**
- 5. Slide firmly up or down .**

B. Setting the code on your new Receiver unit .

- 1. Slide code switches to the same positions as set on your transmitter .They must be set to same positions to work .**
- 2. Replace battery cover on transmitter .**

NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment .

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATIONS IS SUBJECT INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFEERENCE THAT MAY CAUSE UNDESRIED OPERATION.