

# INSTRUCTIONS FOR OPERATION

## SETTING THE OPERATING CONTROLS

1. This unit operates on a 12 volts battery (not included).  
To prevent possible damage if the battery should leak , be sure to remove the battery when the unit is not use .
2. Store the controller away from excess heat or humidity .
3. This remote control unit is requipped with 16 code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security system . If you find that your fan and light kit go on and off without using your control , simply change the combination code in your transmitter and receiver .
4. Operation buttons on the panel of transmitter .  
HIGH key – For fan High speed .  
MED key – For fan Medium speed .  
LOW key – For fan Low speed .  
OFF key – For fan speed off .  
REV key – For fan speed Reverse .  
UP LIGHT CONTROL key – For light brightness and ON/OFF control .  
DOWN LIGHT CONTROL key – For light brightness and ON/OFF control .
5. Start the fan :  
Press the selected speed button to run the fan at the desired .
6. Turn off the fan :  
Press the OFF button .
7. Light control :  
Turn the light on or off by only touching the LIGHT CONTROL button .  
Keep pressing the button in excess of 0.7 second it becomes a dimmer , the light varies cyclically in 0.8 second .  
One of the important feature of this control is AUTO-RESUME . After power on , it allows the light return to where it was off .

## GENERAL INFORMATION :

This REMOTE controller is designed to separately control your ceiling fan speed and light brightness . The Light ON/OFF button will control the light brightness ON/OFF . The red indicator on the transmitter will light when the button is pressed .

## INSTRUCTIONS FOR INSTALLATION AND OPERATION OF FAN SPEED CONTROLLER

### A. Setting the code on your new transmitter .

1. Remove battery cover .  
Press firmly below arrow and slide battery cover off .
2. Slide code switches to your choice of UP and DOWN position .  
Factory setting is all UP . Do not use this setting .  
Use ball point pen or small screwdriver .  
Slide firmly up or down .

### B. Setting the code on your new Receiver unit .

1. Slide code switches to the same positions as set on your transmitter .  
They must be set to same positions to work .
2. Replace battery cover on transmitter .
3. Make sure the code switches are on the left positions .

## NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment .

*The term "IC:" before the radio certification number only signifies that Industry Canada Technical specifications were met.*

*Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.*

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATIONS IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: ( 1 ) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND ( 2 ) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFEERENCE THAT MAY CAUSE UNDESRIED OPERATION.**