

INSTRUCTIONS FOR OPERATION

UC7087T LCD thermal remote control manual

SETTING THE OPERATING CONTROLS

1. This unit operates on AAA 1.5 volts battery*4 (not included). (We use AAA battery*4)
To prevent possible damage if the battery should leak, be sure to remove the battery when the unit is not use.

2. Store the controller away from excess heat or humidity.

3. This remote control unit is required with 16 code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security system. If you find that your fan and light kit go on and off without using your control, simply change the combination code in your transmitter and receiver.

4. Operation buttons on the panel of transmitter.

FAN() key – For fan speed control

HI→MED→LOW→OFF→ Cycle Operation

FAN AUTO key – Auto temp. set-up → manual → cycle set-up

Temp. of indoor is lower than set-up temp. OFF

Temp. of indoor is lower than set-up temp. 0~2 LOW SPEED

Temp. of indoor is lower than set-up temp. 2 or 4 MED SPEED

Temp. of indoor is lower than set-up temp. 4 or 8 HI SPEED

TIMER key – Set timer option of FAN OR LIGHT

HOUR key – Have time or temp. up.

HOUR key – Have time or temp. down.

FAN/REV key – Fan reverse control

LIGHT() key – For light brightness and ON/OFF control.

LIGHT DELAY key – Auto off after 3 mins.

5. Start the fan and Turn off the fan:

Press the selected speed button to run the fan at the desired.

6. Light control :

Turn the light on or off by only touching the LIGHT CONTROL button.

Keep pressing the button in excess of 0.7 second it becomes a dimmer, the light varies cyclically in 0.8 second.

GENERAL INFORMATION :

This REMOTE controller is designed to separately control your ceiling fan speed and light brightness .

The Light ON/OFF button will control the light brightness ON/OFF .

INSTRUCTIONS FOR INSTALLATION AND OPERATION OF FAN SPEED CONTROLLER

A. Setting the code on your new transmitter .

1. Remove battery cover .

Press firmly below arrow and slide battery cover off .

2. Slide code switches to your choice of UP and DOWN position .

Factory setting is all UP . Do not use this setting .

Use ball point pen or small screwdriver .

Slide firmly up or down .



B. Setting the code on your new Receiver unit .

1. Slide code switches to the same positions as set on your transmitter .

They must be set to same positions to work .

2. Replace battery cover on transmitter .

3. Make sure the code switches are on the left positions .

NOTICE :The changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment .

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATIONS IS SUBJECT INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFEERENCE THAT MAY CAUSE UNDESRIED OPERATION.