

# INSTRUCTIONS FOR OPERATION

## SETTING THE OPERATING CONTROLS

1. This unit operates on a 12 volts battery (not included).  
To prevent possible damage if the battery should leak , be sure to remove the battery when the unit is not use .
2. Store the controller away from excess heat or humidity .
3. This remote control unit is required with 16 code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security system . If you find that your fan and light kit go on and off without using your control , simply change the combination code in your transmitter and receiver .
4. Operation buttons on the panel of transmitter .  
HIGH key – For fan High speed .  
MED key – For fan Medium speed .  
LOW key – For fan Low speed .  
OFF key – For fan speed off .  
LIGHT CONTROL key – For light brightness and ON/OFF control .
5. Start the fan :  
Press the selected speed button to run the fan at the desired .
6. Turn off the fan :  
Press the OFF button .
7. Light control :  
Turn the light on or off by only touching the LIGHT CONTROL button .  
Keep pressing the button in excess of 0.7 second it becomes a dimmer , the light varies cyclically in 0.8 second .  
One of the important feature of this control is AUTO-RESUME . After power on , it allows the light return to where it was off .

## **GENERAL INFORMATION :**

**This REMOTE controller is designed to separately control your ceiling fan speed and light brightness . The Light ON/OFF button will control the light brightness ON/OFF . The red indicator on the transmitter will light when the button is pressed .**

## **INSTRUCTIONS FOR INSTALLATION AND OPERATION OF FAN SPEED CONTROLLER**

### **A. Setting the code on your new transmitter .**

#### **1. Remove battery cover .**

**Press firmly below arrow and slide battery cover off .**

#### **2. Slide code switches to your choice of UP and DOWN position .**

**Factory setting is all UP . Do not use this setting .**

**Use ball point pen or small screwdriver .**

**Slide firmly up or down .**

### **B. Setting the code on your new Receiver unit .**

#### **1. Slide code switches to the same positions as set on your transmitter .**

**They must be set to same positions to work .**

#### **2. Replace battery cover on transmitter .**

#### **3. Make sure the code switches are on the left positions .**

## **NOTICE :**

**The changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment .**

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATIONS IS SUBJECT INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFEERENCE THAT MAY CAUSE UNDESRIED OPERATION.**

*The term "IC:" before the radio certification number only signifies that Industry Canada Technica specifications were met.*

*Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.*