

# INSTRUCTIONS FOR OPERATION

## SETTING THE OPERATING CONTROLS

1. This unit operates on AAA 1.5 volts battery\*2 (not included).  
To prevent possible damage if the battery should leak , be sure to remove the battery when the unit is not use .
2. Store the controller away from excess heat or humidity .
3. This remote control unit is required with 32 code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security system . If you find that your fan and light kit go on and off without using your control , simply change the combination code in your transmitter and receiver .

### 4. Operation buttons on the panel of transmitter .

- ▲ key – For fan speed up
- ▼ key – For fan speed down
- OFF key – For fan speed off .
- REV key – For fan speed Reverse .
- 💡 key – For upper light brightness and ON/OFF control .
- 💡 key – For bottom light brightness and ON/OFF control .

### 5. Start the fan :

Press the selected speed button to run the fan at the desired .  
By press the speed up-down button to select the needed speed, and though the LED light to see the fan speed.

### 6. Turn off the fan :

Press the OFF button .

### 7. Light control :

Turn the light on or off by only touching the LIGHT CONTROL button .  
Keep pressing the button in excess of 0.7 second it becomes a dimmer , the light varies cyclically in 0.8 second .  
One of the important feature of this control is AUTO-RESUME . After power on , it allows the light return to where it was off .



## GENERAL INFORMATION :

This REMOTE controller is designed to separately control your ceiling fan speed and light brightness .

## INSTRUCTIONS FOR INSTALLATION AND OPERATION OF FAN SPEED CONTROLLER

### A. Setting the code on your new transmitter .

#### 1. Remove battery cover .

Press firmly below arrow and slide battery cover off .

#### 2. Slide code switches to your choice of UP and DOWN position .

Factory setting is all UP . Do not use this setting .

Use ball point pen or small screwdriver .

Slide firmly up or down .


### B. Setting the code on your new Receiver unit .

#### 1. Slide code switches to the same positions as set on your transmitter .

They must be set to same positions to work .

#### 2. Replace battery cover on transmitter .

#### 3. Make sure the code switches are on the left positions .

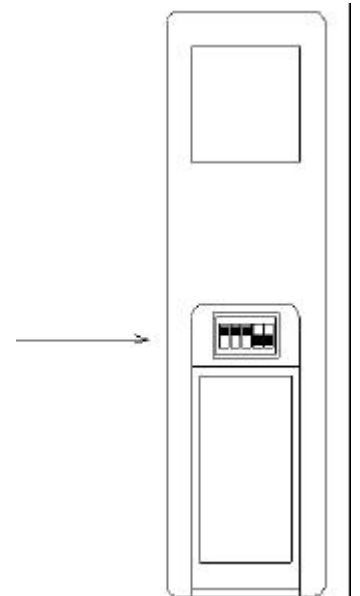

## NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment .

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATIONS IS SUBJECT INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFEERENCE THAT MAY CAUSE UNDESRIED OPERATION.**

*The term "IC:" before the radio certification number only signifies that Industry Canada Technical specifications were met.*

*Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.*