

# INSTRUCTIONS FOR OPERATION

## SETTING THE OPERATING CONTROLS

1. **This unit operates on two 3 volts battery (not included).**  
To prevent possible damage if the battery should leak , be sure to remove the battery when the unit is not use .
2. **Store the controller away from excess heat or humidity .**
3. **This remote control unit is required with 16 code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security system . If you find that your fan and light kit go on and off without using your control , simply change the combination code in your transmitter and receiver .**
4. **Operation buttons on the panel of transmitter .**
  - 6 key – For fan Maximum speed .
  - 5 key – For fan high speed .
  - 4 key – For fan Medium speed .
  - 3 key – For fan Low speed .
  - 2 key – For fan Lower speed .
  - 1 key – For fan Minimum speed .
  - REV key – For fan speed reverse .
  - OFF key – For fan speed off .
  - UP LIGHT CONTROL key – For light brightness and ON/OFF control .
  - DOWN LIGHT CONTROL key – For light brightness and ON/OFF control .
5. **Start the fan :**  
Press the selected speed button to run the fan at the desired .
6. **Turn off the fan :**  
Press the OFF button .
7. **Light control :**  
Turn the light on or off by only touching the LIGHT CONTROL button .  
Keep pressing the button in excess of 0.7 second it becomes a dimmer ,  
the light varies cyclically in 0.8 second .  
One of the important feature of this control is AUTO-RESUME . After power on , it allows the light return to where it was off .

## **GENERAL INFORMATION :**

This REMOTE controller is designed to separately control your ceiling fan speed and light brightness . The Light ON/OFF button will control the light brightness ON/OFF . The red indicator on the transmitter will light when the button is pressed .

## **INSTRUCTIONS FOR INSTALLATION AND OPERATION OF FAN SPEED CONTROLLER**

### **A. Setting the code on your new transmitter .**

- 1. Remove battery cover .**  
Press firmly below arrow and slide battery cover off .
- 2. Slide code switches to your choice of UP and DOWN position .**  
Factory setting is all UP . Do not use this setting .  
Use ball point pen or small screwdriver .  
Slide firmly up or down .

### **B. Setting the code on your new Receiver unit .**

- 1. Slide code switches to the same positions as set on your transmitter .**  
They must be set to same positions to work .
- 2. Replace battery cover on transmitter .**
- 3. Make sure the code switches are on the left positions .**

## **NOTICE :**

**The changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment .**

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATIONS IS SUBJECT INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFEERENCE THAT MAY CAUSE UNDESRIED OPERATION.**

*The term "IC:" before the radio certification number only signifies that Industry Canada Technical specifications were met.*

*Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.*