

# **Exhibit E**

# **User's Manual**

**RHINE ELECTRONIC CO., LTD.**

**FCC ID.: CHQ8BT7083R**

**Receiver of Remote Control**

# INSTRUCTIONS FOR OPERATION

## SETTING THE OPERATING CONTROLS

This receiver must combine with the transmission signal of the transmitter, so that it can control the ceiling fan's speed, and the light brightness.

## INSTRUCTIONS FOR INSTALLATION AND OPERATION OF FAN SPEED CONTROLLER

### A. Setting the code on your new transmitter.

1. Slide code switches to your choice of UP and DOWN position.

Factory setting is all UP. Do not use this setting.

Use ball point pen or small screwdriver.

Slide firmly up or down.

### B. Setting the code on your new Receiver unit.

1. Slide code switches to the same positions as set on your transmitter.

They must be set to same positions to work.

2. Mark sure the code switches are on the right position.

## NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

