

# INSTRUCTIONS FOR OPERATION

Page : 2-1

## SETTING THE OPERATING CONTROLS

1. This unit operates on a 9 volts battery (not included).  
To prevent possible damage if the battery should leak , be sure to remove the battery when the unit is not use .
2. Store the controller away from excess heat or humidity .
3. This remote control unit is reequiped with 16 code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security system . If you find that your fan and light kit go on and off without using your control , simply change the combination code in your transmitter and receiver .
4. Operation buttons on the panel of transmitter .  
HIGH key – For fan High speed .  
MED key – For fan Medium speed .  
LOW key – For fan Low speed .  
OFF key – For fan speed off .  
REV key – For fan speed Reverse .  
LIGHT CONTROL key – For light brightness and ON/OFF control .
5. Start the fan :  
Press the selected speed button to run the fan at the desired .
6. Turn off the fan :  
Press the OFF button .
7. Light control :  
Turn the light on or off by only touching the LIGHT CONTROL button .  
Keep pressing the button in excess of 0.7 second it becomes a dimmer ,  
the light varies cyclically in 0.8 second .  
One of the important feature of this control is AUTO-RESUME . After power on , it allows the light return to where it was off .

## GENERAL INFORMATION :

This REMOTE controller is designed to separately control your ceiling fan speed and light brightness . There are five buttons (HIGHT , MED , LOW , OFF , REV) to control the fan speed and off . The Light Dimmer button will control the light brightness dimmer and ON/OFF . The red indicator on the transmitter will light when the button is pressed .

## INSTRUCTIONS FOR INSTALLATION AND OPERATION OF FAN SPEED CONTROLLER

### A. Setting the code on your new transmitter .

1. Remove battery cover .  
Press firmly below arrow and slide battery cover off .
2. Slide code switches to your choice of UP and DOWN position .  
Factory setting is all UP . Do not use this setting .  
Use ball point pen or small screwdriver .  
Slide firmly up or down .

### B. Setting the code on your new Receiver unit .

1. Slide code switches to the same positions as set on your transmitter .  
They must be set to same positions to work .
2. Replace battery cover on transmitter .
3. Make sure the code switches are on the left positions .

## NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment .

Model : UC7097T

FCC ID : CHQ8BT7097T

This device complies with part 15 of the FCC rules .

Operation is subject to the following two conditions . (1)

This device may not cause harmful interference and (2)

This device must accept any interference received ,

Including interference that may cause undesired operation .

MADE IN TAIWAN