

# ***Exhibit E..... User's Manual***

## Directions for LCD Ceiling Fan Remote Controller

( Model 7098T : With Fan Reverse—Turning function )

( Model 7099T : Without Fan Reverse—Turning function )

### 1. FAN SPEED Button (blue):

Pressing this blue button can adjust the fan speed by manual.

Fan speed will circulate as follows :

OFF → HIGH → MIDDLE → LOW

Press the FAN SPEED button each time.

### 2. FOR/REV Button (Only for Model No. 7098T )

Pressing this button can decide which direction the fan will turn.

Turning forward ↔ Turning reverse

There is an arrow sign toward up or down showing on the LCD screen.

### 3. LIGHT Button :

( i ) Press this yellow button to turn the light on or off.

( ii ) Pressing and holding this button on dim the light brightness.

Dimming range of light brightness: 20% to 100%.

100% ▶ 98% ▶ 96%..... 22% ▶ 20% ▶ 22% ▶ 24% → 96% ▶ 98% ▶ 100%

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.