

# INSTRUCTIONS FOR OPERATION

## SETTING THE OPERATING CONTROLS

**1. This unit operates on a 12 volts battery (not included).**

To prevent possible damage if the battery should leak , be sure to remove the battery when the unit is not use .

**2. Store the controller away from excess heat or humidity .**

**3. This remote control unit is required with 16 code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security system . If you find that your fan and light kit go on and off without using your control , simply change the combination code in your transmitter and receiver .**

**4. Operation buttons on the panel of transmitter .**

**VI key – For fan Maxsmum speed .**

**V key – For fan High speed .**

**IV key – For fan Medium speed .**

**III key – For fan Low speed .**

**II key – For fan Lower speed .**

**I key – For fan Minimum speed .**

**key – For fan speed off .**

**REV key – For fan speed Reverse .**

**UP LIGHT CONTROL key – For light brightness and ON/OFF control .**

**DOWN LIGHT CONTROL key – For light brightness and ON/OFF control .**

**5. Start the fan :**

Press the selected speed button to run the fan at the desired .

**6. Turn off the fan :**

Press the OFF button .

**7. Light control :**

Turn the light on or off by only touching the LIGHT CONTROL button .

Keep pressing the button in excess of 0.7 second it becomes a dimmer , the light varies cyclically in 0.8 second .

One of the important feature of this control is AUTO-RESUME . After power on , it allows the light return to where it was off .

## GENERAL INFORMATION :

This REMOTE controller is designed to separately control your ceiling fan speed and light brightness . The Light ON/OFF button will control the light brightness ON/OFF . The red indicator on the transmitter will light when the button is pressed .


## INSTRUCTIONS FOR INSTALLATION AND OPERATION OF FAN SPEED CONTROLLER

### A. Setting the code on your new transmitter .

1. Remove battery cover .  
Press firmly below arrow and slide battery cover off .
2. Slide code switches to your choice of UP and DOWN position .  
Factory setting is all UP . Do not use this setting .  
Use ball point pen or small screwdriver .  
Slide firmly up or down .

### B. Setting the code on your new Receiver unit .

1. Slide code switches to the same positions as set on your transmitter .  
They must be set to same positions to work .
2. Replace battery cover on transmitter .
3. Make sure the code switches are on the left positions .

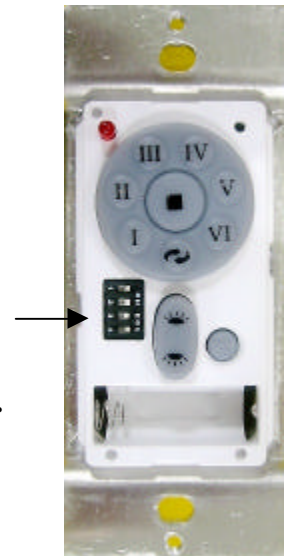

**NOTICE :** The changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment .

This device complies with part 15 of the FCC Rules. Operations is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.