


INSTRUCTIONS FOR OPERATION

SETTING THE OPERATING CONTROLS

1. This device which one of black lines series with AC 120V power supply. Now, we take 60Hz power supply to afford power supply of transmitter when it trough rectify. So, there is no troubles with change batteries forever.
2. Store the controller away from excess heat or humidity .
3. This remote control unit is required with 32 code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security system . If you find that your fan and light kit go on and off without using your control , simply change the combination code in your transmitter and receiver .
4. Operation buttons on the panel of transmitter .

 key – For fan speed Reverse .

 key – For light brightness and light ON/OFF control .

 key – For fan speed control , and FAN ON/OFF control .

 key – POWER SW , for POWER ON/OFF

5. Fan control :


Turn the FAN on or off by only touching the  button .

Keep pressing the button in excess of 0.7 second it becomes a

Press the selected speed button to run the fan at the desired .

By press the speed up-down button to select the needed speed, and though the LED light to see the fan speed.

6. Fan reverse control :

Press the  button Change the direction of the fan to run

7. Light control :

Turn the light on or off by only touching the  button .

Keep pressing the button in excess of 0.7 second it becomes a dimmer , the light varies cyclically in 0.8 second .

One of the important feature of this control is AUTO-RESUME . After power

on , it allows the light return to where it was off .

8. Power switch


Turn off the power for Fan and Light

GENERAL INFORMATION :

This REMOTE controller is designed to separately control your ceiling fan speed and light brightness .

INSTRUCTIONS FOR INSTALLATION AND OPERATION OF FAN SPEED CONTROLLER

A. Setup for ceiling fan controller

1. Turn off the power. (In order to make sure the electricity is entirely released, please press any button on the controller till no LED display showing)
2. Turn on the power
3. Press the  button for more than 3 sec. The ceiling fan controller will has 2 blinks. It means the setup is successful. You could start to control the ceiling fan light and fan speed.

NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATIONS IS SUBJECT INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFEERENCE THAT MAY CAUSE UNDESRIED OPERATION.

IMPORTANT NOTE:

To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.