

INSTRUCTIONS FOR OPERATION

SETTING THE OPERATING CONTROLS

1. This unit operates on a 12 volts battery (not included).

To prevent possible damage if the battery should leak , be sure to remove the battery when the unit is not use .

2. Store the controller away from excess heat or humidity .

3. This remote control unit is required with 16 code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security system . If you find that your fan and light kit go on and off without using your control , simply change the combination code in your transmitter and receiver .

4. Operation buttons on the panel of transmitter .

VI key – For fan Maximum speed .

V key – For fan high speed .

IV key – For fan Medium speed .

III key – For fan Low speed .

II key – For fan Lower speed .

I key – For fan Minimum speed .

OFF key – For fan speed off .

REV key – For fan speed Reverse .

CONTROL key – For light brightness and ON/OFF control .

SET key – For learn

5. Start the fan :

Press the selected speed button to run the fan at the desired .

6. Turn off the fan :

Press the OFF button .

7. Light control :

Turn the light on or off by only touching the LIGHT CONTROL button .

Keep pressing the button in excess of 0.7 second it becomes a dimmer , the light varies cyclically in 0.8 second .

One of the important feature of this control is AUTO-RESUME . After power on , it allows the light return to where it was off .

GENERAL INFORMATION :

This REMOTE controller is designed to separately control your ceiling fan speed and light brightness . The Light ON/OFF button will control the light brightness ON/OFF . The red indicator on the transmitter will light when the button is pressed .

INSTRUCTIONS FOR INSTALLATION AND OPERATION OF FAN SPEED CONTROLLER

- A. Setting the code on your new transmitter .**
- 1. Remove battery cover .
Press firmly below arrow and slide battery cover off .**
 - 2. Slide code switches to your choice of UP and DOWN position .
Factory setting is all UP . Do not use this setting .
Use ball point pen or small screwdriver .
Slide firmly up or down .**
- B. Setting the code on your new Receiver unit .**
- 1. Slide code switches to the same positions as set on your transmitter .
They must be set to same positions to work .**
 - 2. Replace battery cover on transmitter .**
 - 3. Make sure the code switches are on the left positions .**

NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment .

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference

received, including interference that may cause