

# Universal Remote Control

Replace Five Remotes With One!

This Hampton Bay Universal Remote Is Compatible With Most Models Of The Following Brands

TV							
A-mark	Carnivale	Emerson	JC Penny	Mitsubishi	Prism	Sharp	Tiefunken
Abex	Carver	Envision	JCB	Motorola	Proscan	Shogun	Teknika
Admiral	Celebrity	Fisher	JVC	MTC	Proton	Signature	TMK
Adventura	Cineral	Fujitsu	KEC	Multitech	Pulsar	Sylvania	Toshiba
Aiko	Citizen	Funai	Kenwood	NAD	Quasar	Simpson	Tosonic
Akai	Clairtone	Futuretech	Kloss	National	Radio Shack	Sony	Totevision
Alaron	Concerto	GE	KTV	NEC	RCA	Soundesign	Trical
Allegro	Contec	Gibraiter	LG	Nikko	Realistic	Spectricon	Universal
Ambassador	Contec/cony	Goldstar	Luxman	Noshi	Rhapsody	Squareview	Vector research
Anam	Craig	Go Video	LXI	NTC	Runco	SSS	Victor
AOC	Crosley	Gradiente	Magnavox	Onwa	Sampo	Starlite	Vidikron
Archer	Crown	Grunpy	Marantz	Optimus	Samsung	Supre-Macy	Vidtech
Audiovox	CXC	Harman	MEI	Optonica	Samsux	Supreme	Viking
Aumark	Curtis Mathes	Harman/Kardon	Majstic	Orion	Sansei	Sylvania	Wards
Baysonic	Daewoo	Harley Davidson	Matsushita	Panasonic	Sansui	Symphonic	Westinghouse
Belcor	Daytron	Harvard	Megatron	Penney	Sanyo	Tandy	Words
Beuamark	Denon	Hitachi	Memorex	Philco	Scotch	Tatung	Yamaha
Bradford	Dumont	Infinity	MGA	Philips	Scott	Technics	Zenith
Broksonic	Dwin	Inteq	MGA/Mitsubishi	Pilot	Sears	Technika	Zonda
Brockwood	Electroband	Janeil	Midland	Pioneer	Semivox	Technol Ace	
Candle	Electrohome	JBL	Minutz	Portland	Semo	Techwood	

VCR							
American high	Cineral	GE	Lloyd' s	NAP	Profitronic	Sanyo	Thomas
Admiral	Citizen	Goldstar	LXI	NEC	Proscan	Scott	TMK
Adventura	Colt	Go Video	Magnasonic	Nikko	Protec	Sears	Toshiba
Aiko	Craig	Gradiente	Magnavox	Nikon	Pulsar	Semp	Totevision
Aiwa	Curtis Mathes	Harley Davidson	Maqin	Noblex	Quasar	Sharp	Unitech
Akai	Daewoo	Harman/Kardon	Marantz	Olympus	Quarter	Shintom	Vector
Amstrad	Daytron	Harwood	Marta	Optimus	Quartz	Shogun	Vector research
Asha	Denon	Headquarter	MEI	Optonica	Radio Shack	Signature	Videosonic
Audiovox	Dynatech	HI-Q	Matsushita	Orion	Randex	Singer	Video Concepts
Beaumark	Electroponic	Hitachi	Memorex	Panasonic	RCA	Sony	Wards
Bell & Howell	Electrohome	Jensen	MGA	Penney	Realistic	STS	White Westinghouse
Broksonic	Emerex	JVC	MGN technology	Pentax	Ricon	Sylvania	XR-1000
Calix	Emerson	KEC	Minolta	Philco	Ridix	Symphonic	Yamaha
Canon	Fisher	Kenwood	Mitsubishi	Philips	Runco	Tatung	Zenith
Capehart	Fuji	KLH	Motorola	Pilot	Samsung	Teac	Some models
Carver	Funai	Kodak	MTC	Pioneer	Sanky	Technics	
CCE	Garrard	Logik	Multitech	Portland	Sansui	Technika	

SAT.							
Aifa	Dx Antenn	HTS	Legend	Panasonic	RCA	STS	United satellite
Aiko	DX Communications	Hughes Network Sys.	Macom	Pansat	RCA DSS	STS satellite	Veccom
Alfa gold	Echostar	Hughes satellite	Macom satellite	Panaset	RC-AK	Space TV	Video pall
Alphastar	Equus	Instrument	Magnavox	Pbi	Realistic	Sun Moon Star	Viewstar
Best	Eurostar	Intersat	Memorex	Philips	Rural cable	Superguige	Vortec
Channel Master	Expressvu	IQ	Micro formula	President	Samsung	Tadiran	Winner
Chaparral	Fortec star	IQ Prism	Mina	Primester	Scientific Atlanta	Technosat	Zenith
Citoh	Fujitsu	Janeil	Mitsubishi	Prosat	Signal super LT 930	Tedex	Zenith satellite
Digital satellite TV	General Instrument	Jerrold	Orb	Proscan	Skardin	Toshiba	
Drake	Hitachi	JVC	Orbit	Quick draw	Sony	Tosonic	
Drake satellite	Homecable	Kenwood	Pace	Radio Shack	Star	Uniden	

Cable							
ABC	Best	Focus	Jasco	OAK sigma 500	Regal	Stargate	Tusa
Aeon	Cable star	Garrard	JEBSEE	Optimus	Regency	Starquest	TV86
Aifa	Cabletenna	GC Electronics	Jerrold	Panasonic	Rembrandt	Sylvania	Unika
Aikotec	Cableview	Gemini	KOKA	Panther	Runco	TADA	United artists
Allegro	Century	G.I	LEON	Paragon	Samsung	Taicom	Universal
Antena	Citizen	GMI	Magnasonic	Philips	Scientific Atlanta	Tandy	Videoway
Antronix	Colour voice	Golden	Magnavox	Pioneer	Seam	Tay shoen	Viewstar

APO	Comtronics	Goldstar	Mechanics	Popular	Sg	Televue	Winer
Archer	Contec	Goodmind	Memorex	Proscan	Signal	Texscan	WISO
Asia	Cs-100	Hamlin	Movie Time	Pulsar	Signature	TFC	Zenith
Asiagiant-777	Digi	Hitachi	NAP	Radio Shack	Skygiant	Timeless	Zentek
Atlanta	Eastem	Hytex	Novaplex	RCA	SL Marx	Tocom	
Belcor	Emerson	IEEC	NSC	Realistic	Sprucer	Toshiba	
Bell & Howell	Everquest	IMC	OAK	Recoton	Starcom	Trans	

#### DVD

Harman/Kardon	Kenwood	Mitsubishi	Optimus	Pioneer	Sony	Yamaha	
JVC	Magnavox	Onkyo	Philips	Samsung	Toshiba	Zenith	

#### Ceiling FAN

HomeDepot	Casablanca	Emerson	Gulf. Coast	Mica Lamp	Nutonel	Regency	West Wind
Avion	Craftmade	Famimation	Harbor Breeze	Minka	Old Ftavan	Sea Wook	Westing House
Hunter	Elmark	Galleia	Lumin Air	Momte Carlo	Quorum	Sea Gull	

## Table Of Contents

Setting Your Remote Dip Switches .....

Battery Installation .....

Programming Your Universal Remote

TV .....

TV Codes .....

VCR .....

VCR Codes .....

DVD .....

DVD Codes .....

Cable / Satellite .....

Cable / Satellite Codes .....

Fan .....


Fan Codes .....

Programming With Code Search .....

Retrieval Codes .....

Button Function .....

Troubles Shooting .....

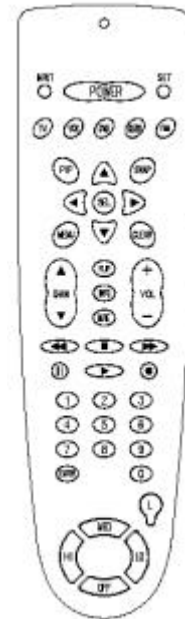


## Setting Your Remote Dip Switches

Your dip switches control the radio frequency signal that is used to control your ceiling fan. The dip switches in the remote should be the same as the dip switches/pin jumpers in the receiver that is installed in your ceiling fan.

1. Remove the battery compartment cover.
2. Set the dip switches in the remote to the same code as the dip switches in the receiver.

This remote is only compatible with two kinds of Frequency System: 303.875-304MHz and 350MHz.

Note: If your ceiling fan receiver is provided with five code switches and frequency 303.875-304MHz, slide the first code switch to ON position and slide other four code switches to the same positions as set on the transmitter.

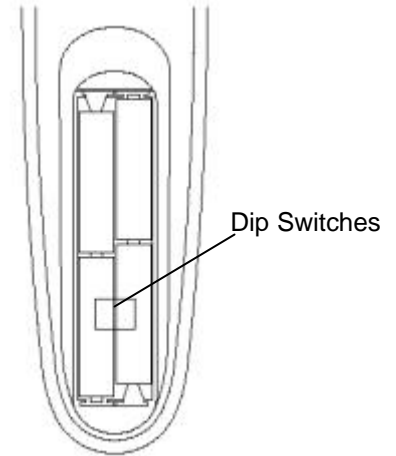

## Battery Installation


Your Universal Remote requires 4 new AAA alkaline batteries.

To install the batteries:

1. Match the batteries to the + and - marks inside the battery case, then insert the batteries.
2. Replace the battery cover.

## Programming For TV

1. Manually turn on the TV.  
Find the three-digit code for your TV in the code list below.
2. Press and hold the **SET** button; meanwhile, press and release the **TV** button, until the **INDICATOR LIGHT** lights, then release the **SET** button.
3. Enter the code using the Number Buttons.

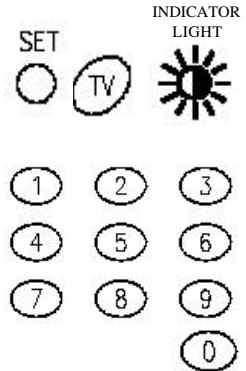

After your code is entered, the **INDICATOR LIGHT** will turn off.

Note: If your code is unavailable, the **INDICATOR LIGHT** will blink twice then remain lit. Please repeat the step 3.

4. Aim the remote at your TV and press the **POWER** button.  
Your TV should turn off.



Note: If your TV does not respond, try all the codes for your brand.  
If the codes do not work, or your brand is not listed,  
try the Code Search method on page xx.

5. Write your code here for easy reference.


TV CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>

TV Code List					
A-mark	002	Hitachi	012,020,027,062,063,067,072,077	RCA	005,006,015,016,022,024,059,060,062,078
Abex	012	Infinity	018	Realistic	011,012,013,020,030,034,038,040,070,075
Admiral	024	Inteq	004	Rhapsody	041
Adventura	014	Janeil	014	Runco	004,011,053,054,080
Aiko	023	JBL	018	Sampo	011,012,013
Akai	011	JC Penny	072	Samsung	011,012,013,020,021,038,067,079
Alaron	039	JCB	061	Samsux	013
Allegro	057,058	JVC	017,067,072	Sansei	050
Ambassador	037	KEC	040	Sansui	051
Anam	019,040	Kenwood	006	Sanyo	028,030,033,070
AOC	002,006,011,041	Kloss	009,014	Scotch	038
Archer	002	KTV	013,040,041,046,067	Scott	006,038,039,040,044,067
Audiovox	002,023,040,050,055	LG	020	Sears	015,018,020,028,030,031,033,036,038,039,070,071,072
Aumark	021	Lux man	020	Semivox	040
Baysonic	040	LXI	004,018,030,031,060,070,071	Semo	031
Belcor	006	Magnavox	007,009,011,018,025,036,039,042,043,049,065,067,	Sharp	013,024,032,034,049,081,067
Beuamark	004,011,039	Marantz	011,018	Shogun	006
Bradford	040	MEI	041	Signature	003
Broksonic	002,044,051	Majestic	003	Sylvania	007,009,011,025,042
Brockwood	006	Matsushita	045	Simpson	042,043
Candle	011,014,020,042	Megatron	002,027	Sony	026,061
Carnivale	011	Memorex	003,020,021,028,030,045	Soundesign	038,039,040,042
Carver	018	MGA	006,001,029	Spectricon	002
Celebrity	061	MGA/Mitsubishi	073	Squareview	036
Cineral	023,050	Midland	004,012,013	SSS	040
Citizen	011,013,014,020,021,023,042,046	Minutz	008	Starlite	040
Clairtone	041	Mitsubishi	006,024,028,038	Supre-Macy	014
Concerto	020	Motorola	019,024	Supreme	061
Contec	032,040,041,067	MTC	006,011,020,021,041	Sylvania	018,043,048,065,069
Contec/cony	072	Multitech	040	Symphonic	036
Craig	040	NAD	031,035,038,071	Tandy	024
Crosley	018	National	019	Tatung	002,019,071
Crown	013,040	NEC	006,011,020,053	Technics	004,015,016,045,060
CXC	040	Nikko	004,011,015,023,030,031,038,060	Technika	003,006,013,018,020,021,023,028,039,040,042,072
Curtis Mathes	011,013,018,020,021,024,027,035,050,052,059,060,067	Noshi	005	Technol Ace	039
Daewoo	006,013,023,050,055,056	NTC	023	Techwood	002,020
Daytron	006,013	Onwa	040	Tefunken	020
Denon	027	Optimus	030,035,045	Teknika	067
Dumont	004,006	Optonica	024,034	TMK	020,037,038
Dwin	057,058	Orion	039,044,051	Toshiba	021,030,031,070,071,072
Electroband	041,061	Panasonic	001,015,016,017,018,019,021,024,027,028,030,031,034,038,045,060,074	Tosonic	041
Electrohome	048,067	Penney	002,005,006,008,010,011,012,013,015,016,020,021,031,038,060,067	Totevision	013,067
Emerson	006,013,037,038,039,040,041,044,046,047,051,055,056,062,067,075,076	Philco	006,007,009,011,018,024,027,042,043,051,065,067	Trical	032
Envision	011	Philips	004,005,006,007,008,009,013,018,036,061,065,082,067	Universal	008,010
Fisher	030,033,070	Pilot	006,011,013	Vector research	011
Fujitsu	039	Pioneer	035,062	Victor	017
Funai	036,039,040	Portland	006,013,023,067	Vidikron	018
Futuretech	040	Prism	016	Vidtech	006,038
GE	008,010,024,047,050,059,060,066	Proscan	011,015	Viking	014
Glbraiter	004,006	Proton	002,038,052,067	Wards	007,008,010,011,018,020,025,026,031,034,038,039,043,065,066
Goldstar	001,006,011,013,020,064,067	Pulsar	004,006	Westinghouse	055,056
Go Video	021	Quasar	016,019,034,045	Words	003,006
Gradiente	017,020	Radio Shack	006,012,013,015,020,030,034,038,040,067,070	Yamaha	006,011
Grunpy	039,040			Zenith	003,004,023,028
Harman	018			Zonda	002
Harman/Kardon	018				
Harley Davidson	039				
Harvard	040				


## Programming For VCR

1. Manually turn on the VCR.  
Find the three-digit code for your VCR in the code list below.

2. Press and hold the **SET** button; meanwhile, press and release the **VCR** button, until the **INDICATOR LIGHT** lights, then release the **SET** button.

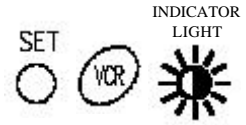

 3. Enter the code using the Number Buttons.

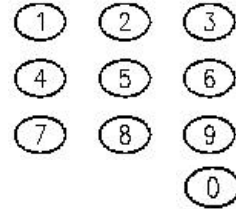

After your code is entered, the **INDICATOR LIGHT** will turn off.

Note: If your code is unavailable, the **INDICATOR LIGHT** will blink twice then remain lit. Please repeat the step 3.

4. Aim the remote at your VCR and press the **POWER** button.  
Your VCR should turn off.



Note: If your VCR does not respond, try all the codes for your brand.  
If the codes do not work, or your brand is not listed,  
try the Code Search method on page xx.

5. Write your code here for easy reference.

VCR CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>

## VCR Code List

 
American high	007	KEC	009,044	Quartz	017
Admiral	019	Kenwood	010,013,017,025	Radio Shack	053,059
Adventura	059	KLH	027	Randex	009
Aiko	044	Kodak	007,009	RCA	007,014,019,030,031,036,042
Aiwa	009,046,059,067,068	Logik	027	Realistic	007,009,017,018,019,023,024,029,059
Akai	013,021,022,030,069	Lloyd's	037,059	Ricon	006
Amstrad	070	LXI	009	Ridix	009
Asha	042	Magnasonic	044,052	Runco	011
Audiovox	009	Magnavox	007,011,028,032,059	Samsung	016,042
Beaumont	042	Magin	042	Sanky	011,019
Bell & Howell	029	Marantz	007,010,028	Sansui	013,025,043,049,059
Broksonic	001,033,035,038,045,049,071	Marta	009	Sanyo	017,018,029,042
Calix	009	MEI	007	Scott	015,016,033,035,039,040
Canon	007	Matsushita	007,034,048	Sears	007,009,014,017,018,020,024,029,030,059
Capehart	003	Memorex	007,009,011,017,018,019,029,042,046,053,056,057,059	Semp	016
Carver	028	MGA	015,021,022,042	Sharp	019,023
CCE	027,044	MGN technology	042	Shintom	027
Cineral	044	Minolta	014,030	Shogun	042
Citizen	009,044	Mitsubishi	015,019,021,022,025,074,075	Signature	007
Colt	027	Motorola	007,019	Singer	027
Craig	009,018,027,042,043	MTC	042,059	Sony	004,006,007,059
Curtis Mathes	007,013,034	Multitech	027,059	STS	014
Daewoo	003,016,044,051	NAP	005,006,007,009,011,014,024,030	Sylvania	007,015,028,032,059
Daytron	003	NEC	010,012,013,025,029	Symphonic	052,059,070
Denon	014	Nikko	009	Tatung	013
Dynatech	059	Nikon	006	Teac	013,059
Electrohome	009	Noblex	042	Technics	007,011,034,036
Electrophonic	009	Olympus	007	Technika	007,009,059
Electrohome	009	Optimus	009,019,029,034,047,048,052,054,055,056,057	Thomas	059
Emerex	004	Optonica	023	TMK	008,037,042
Emerson	001,008,009,015,021,022,026,033,035,037,038,040,044,045,049,051,059,071	Orion	001,035,045,049	Toshiba	015,016,024,039,040
Fisher	018,020,024,029	Panasonic	007,034,041,048,056	Totevision	009,042
Fuji	005,007	Penney	007,009,010,012,014,020,042	Unitech	042
Funai	059,070	Pentax	014,030	Vector	016
Garrard	059,070	Philco	007,038	Vector research	010,012
GE	007,019,036,042	Phillips	023,028,032	Vediosonic	042
Goldstar	009,010	Pilot	009	Video Concepts	012,016,021,022
Go Video	047,050,072,073	Pioneer	025	Wards	007,014,016,018,019,023,027,028,040,042,059
Gradiente	002,059	Portland	003	White Westinghouse	044
Harley Davidson	059	Profitronic	042	XR-1000	007,027,059
Harman/Kardon	010,028	Proscan	036	Yamaha	010,013
Harwood	026,027	Protec	027	Zenith	005,006,011,049,059
Headquarter	017	Pulsar	011	Some models	060,061,062,063,065,066
HI-Q	018	Quasar	007,034,048,056		
Hitachi	013,014,030,059	Quarter	017		
Jensen	013				
JVC	002,013,025				




## Programming For DVD

1. Manually turn on the DVD.  
Find the three-digit code for your DVD in the code list below.

2. Press and hold the **SET** button; meanwhile, press and release the **DVD** button, until the **INDICATOR LIGHT** lights, then release the **SET** button.

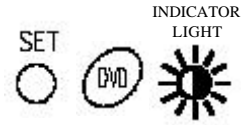

3. Enter the code using the Number Buttons.

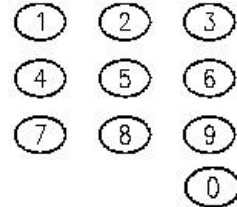

After your code is entered, the **INDICATOR LIGHT** will turn off.

Note: If your code is unavailable, the **INDICATOR LIGHT** will blink twice then remain lit. Please repeat the step 3.

4. Aim the remote at your DVD and press the **POWER** button.  
Your DVD should turn off.



Note: If your DVD does not respond, try all the codes for your brand.  
If the codes do not work, or your brand is not listed,  
try the Code Search method on page xx.

5. Write your code here for easy reference.

DVD CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>

**DVD Code List**


Harman/Kardon	010	Onkyo	001	Sony	004
JVC	007	Optimus	003	Toshiba	001
Kenwood	005	Philips	001	Yamaha	006
Magnavox	001	Pioneer	003,008	Zenith	001,011
Mitsubishi	002	Samsung	009		

## Programming For Cable / Satellite


1. Manually turn on the Cable / Satellite.

Find the three-digit code for your Cable / Satellite in the code list below.

2. Press and hold the **SET** button; meanwhile, press and release the **CBL/SAT** button, until the **INDICATOR LIGHT** lights, then release the **SET** button.

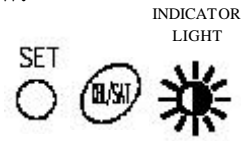

3. Enter the code using the Number Buttons.

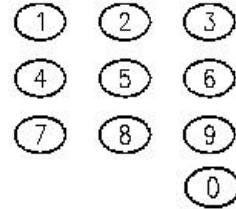

After your code is entered, the **INDICATOR LIGHT** will turn off.

Note: If your code is unavailable, the **INDICATOR LIGHT** will blink twice then remain lit. Please repeat the step 3.

4. Aim the remote at your Cable / Satellite and press the **POWER** button. Your Cable / Satellite should turn off.



Note: If your Cable / Satellite does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page xx.

5. Write your code here for easy reference.

CBL/SAT CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>

## Cable Code List

ABC	001,003,004,005,006,008,009, 011,194,195,246	Goodmind	044	Realistic	028
Aeon	228	Hamlin	013,020,031,086	Recoton	035
Aifa	240,251,253,255	Hitachi	006	Samsung	021,025
Aikotec	267,268	Hytex	004	Scientific Atlanta	132,252
Allegro	026,034	IEEC	206,215,216,217,239	Seam	039
Antena	266	IMC	256	Sg	211
Antronix	015,028	Jasco	010,026,034	Signal	010,021
APO	221	JEBSEE	223	Signature	006
Archer	015,026,028,044	Jerrold	003,006,007,009,010,032,037, 129,130,131,196,237,238,245, 262	Skygiant	212,213,214
Asia	247			SL Marx	021
Asiagiant-777	233	KOKA	202,205	Sprucer	014
Atlanta	005,011,038,250,254	LEON	198,219	Starcom	003,010
Belcor	022	Magnasonic	018	Stargate	021,044
Bell & Howell	009	Magnavox	009,018	Starquest	010
Best	197	Mechanics	035	Sylvania	001
Cable star	022	Memorex	085	TADA	199,236
Cabletenna	015	Movie Time	023	Taicom	202,220
Cableview	015	NAP	004	Tandy	030
Century	026,241	Novaplex	042	Tay shoen	222,225
Citizen	026,034	NSC	023	Televue	021
Colour voice	017,019	OAK	004,012	Texscan	001
Comtronics	021	OAK sigma 500	200	TFC	033
Contec	012	Optimus	014	Timeless	036
Cs-100	218	Panasonic	014,024,085	Tocom	007,008
Digi	043	Panther	043,244	Toshiba	085
Eastem	002,207,208,209,210,227,234	Paragon	085,243,249	Trans	224,226,230,235,242
Emerson	044	Philips	017,018,019,026	Tusa	010
Everquest	010,021	Pioneer	016,025,041	TV86	023
Focus	035	Popular	035	Unika	015,026,028
Garrard	026	Proscan	014	United artists	004
GC Electronics	022,028	Pulsar	085	Universal	015,022,026,027,028
Gemini	010	Radio Shack	010,034,044,045	Videoway	029
G.I	006,032,037,129,130,131,257, 258,259,260	RCA	014	Viewstar	018,023,030
GMI	198,219,229,231,232	Regal	013,031	Winer	201
Golden	248	Regency	002	WISO	203,204
Goldstar	021,025	Rembrandt	006	Zenith	005,010,028,040,085
		Runco	085	Zentek	035

## Satellite Code List

 
Aifa	190	IQ	061	RC-AK	152
Aiko	184	IQ Prism	061	Realistic	052
Alfa gold	177	Janeil	056,095	Rural cable	091
Alphastar	078,124	Jerrold	068,072	Samsung	124,155
Best	148	JVC	079	Scientific Atlanta	146,183
Channel Master	046,062	Kenwood	096	Signal super LT 930	154
Chaparral	049,060,062,063,098,114	Legend	066,099	Skardin	191,192,193
Citoh	125	Macom	046,089,093,126	Sony	073
Digital satellite TV	179,180,181,182	Macom satellite	138	Star	058,094,122,123,128
Drake	046,050,102,065,106,108,115, 118,121,169,170	Magnavox	075,076	STS	047,061
Drake satellite	139,140,141	Memorex	066,076	STS satellite	137
Dx Antenn	047	Micro formula	171	Space TV	173
DX Communications	116	Mina	167	Sun Moon Star	188
Echostar	055,057,066,099,079,111,149, 153,156,157,158,159,160,163, 164,165	Mitsubishi	168	Superguige	097,105
Equus	110	Orb	104	Tadiran	185
Eurostar	166	Orbit	162	Technosat	163
Expressvu	079	Pace	189	Tedelex	161
Fortec star	175,176	Panasonic	056,074,088	Toshiba	053,138
Fujitsu	095	Pansat	101,120,151	Tosonic	080
General Instrument	068,091,092,093,117,126,127	Panaset	187	Uniden	048,051,052,064,069,075,076, 090,097,099,107,109
Hitachi	081,261	Pbi	171	United satellite	134,136
Homecable	064	Philips	059,075,076,174	Veccom	171
HTS	079,112	President	051	Video pall	095
		Primester	068,072,150	Viewstar	119
		Prosat	145	Vortec	178
		Proscan	071		

Hughes Network Sys.	077	Quick draw	116	Winner	144,147
Hughes satellite	261	Radio Shack	091,092,071	Zenith	050,065,083,095,138
Instrument	072	RCA	054,070,071,082,143,183	Zenith satellite	133,139,140,141
Intersat	113	RCA DSS	263,264,265		

## Programming For FAN

1. Manually turn on the FAN.  
Find the three-digit code for your FAN in the code list below.

2. Press and hold the **SET** button; meanwhile, press and release the **FAN** button, until the **INDICATOR LIGHT** lights, then release the **SET** button.

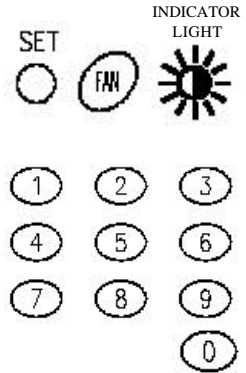

3. Enter the code using the Number Buttons.

After your code is entered, the **INDICATOR LIGHT** will turn off.

Note: If your code is unavailable, the **INDICATOR LIGHT** will blink twice then remain lit. Please repeat the step 3.

4. Aim the remote at your FAN and press the **POWER** button.  
Your FAN should turn off.



Note: If your FAN does not respond, try all the codes for your brand.  
If the codes do not work, or your brand is not listed,  
try the Code Search method on page xx.

5. Write your code here for easy reference.

FAN CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>

### Ceiling Fan Code List


HomeDepot	001,002	Galleia	001	Old Ftavan	001
Avion	001	Gulf. Coast	001	Quorum	001
Hunter	001,003,004	Harbor Breeze	001,002	Regency	001
Casablanca	001	Lumin Air	001	Sea Wook	001
Craftmade	001	Mica Lamp	001	Sea Gull	001
Elmark	001	Minka	001	West Wind	001
Emerson	001	Momte Carlo	001	Westing House	001
Famimation	001	Nutonel	001		

## Programming With Code Search

If your TV, VCR, DVD or Cable/Satellite doesn't respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following the steps below.

Note: The code search function is not available for the fan device.

1. Turn on the device you wish to program.
2. Press and hold the **SET** button; meanwhile, press and release the device button for the device you are programming (**TV, VCR, DVD** or **Cable/Satellite**).  
Until the **INDICATOR LIGHT** lights, then release the **SET** button.
3. Press and release the **SET** button again to start the search action.  
The **INDICATOR LIGHT** will keep blinking.
4. Press and release the **POWER** button until your device turns off.
5. When your device turns off, press and release the device button to store the code. The **INDICATOR LIGHT** will turn off to indicate the code search is completed.

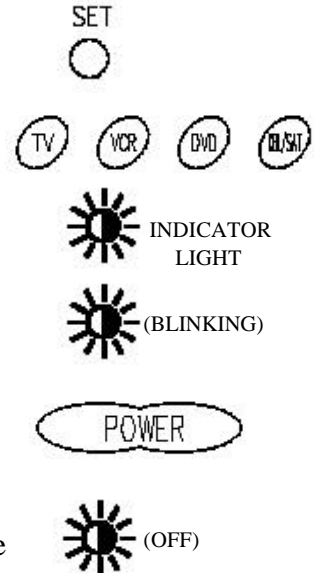


Note: While pressing the **POWER** button to search your device code, you may also advance to the proper code quickly by pressing the **SET** button to change the searching direction forward or backward.



## Retrieving Codes

If you need to find the three-digit code for your TV, VCR, DVD, Cable/Satellite or FAN after your device is set-up, use this procedure.



1. Press and release the device button.
2. Press and hold the **SET** button, then press and release the Number Buttons (**1**, **2** or **3**) to retrieve the digit of the code which you want (First, second or third).
3. Release the **SET** button, the number of times which the **INDICATOR LIGHT** blinks is the digit of your code.

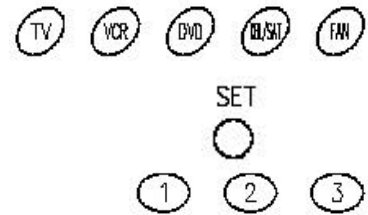

Note: If the **INDICATOR LIGHT** does not blink, that means the digit is “ 0 “.

4. Repeat the above steps until you have retrieved all three numbers in the code.

## Button Function

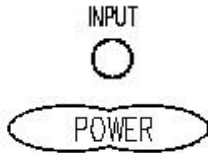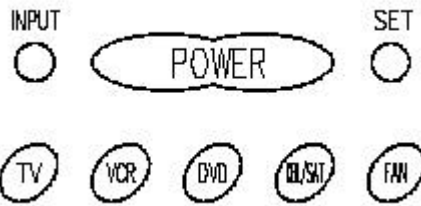

**INPUT** - Press the INPUT button to switch viewing between television and other devices.

**POWER** - Press the POWER button to turn off or on the selected device. Note: May only turn the device off. Try the device button to turn the device on.

**TV** - Press the TV button to select the television to control.


**VCR** - Press the VCR button to select the VCR to control.

**DVD** - Press the DVD button to select the DVD to control.

**CBL/SAT** - Press the CBL/SAT button to select the cable/satellite to control.

**FAN** - Press the FAN button to select the ceiling fan to control.



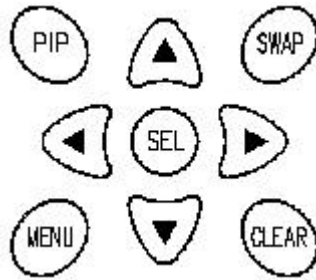

PIP - Press the PIP button to turn on or off the picture-in-picture feature.




SWAP - Press the SWAP button to exchange the view in the picture-in-picture with the view on the main television screen.



MENU - Press the MENU button to view the selected device's menu.




CLEAR - Press the CLEAR button to exit the selected device's menu.

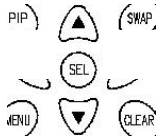

DIRECTION KEYS - Press the DIRECTION KEYS to move the cursor in the menu screens and program guide of the selected device.



SELECT - Press the SELECT button to select items from the selected device's screen menu

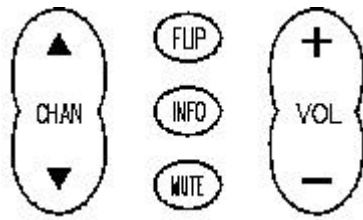

CHANNEL - Press the CHANNEL button to select the next higher or lower channel.




FLIP - Press the FLIP button to display the previous television channel.




INFO - Press the INFO button to display information on the selected device.



MUTE - Press the MUTE button to turn off or on the sound.

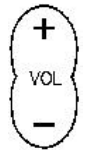

VOLUME - Press the VOLUME button to raise or lower the volume.

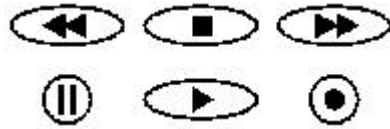

REW - Press the REW button to fast rewind on your selected device.



STOP - Press the STOP button to stop your selected device.



FFD - Press the FFD button to fast forward on your selected device.




PAUSE - Press the PAUSE button to pause on your screen while using your selected device.



PLAY - Press the PLAY button to play while using your selected device.




REC - Press the REC button to record your VCR.

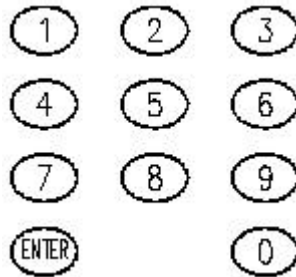

NUMBER BUTTONS - Press the NUMBER BUTTONS to manually enter the channel numbers.



ENTER - Press the Enter button after entering channel numbers if necessary.

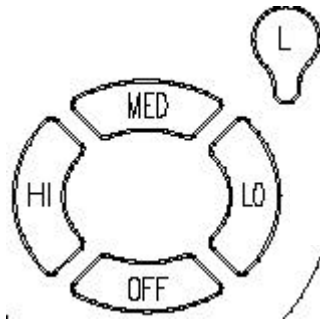

LIGHT - Press the LIGHT button to turn your light off or on. Press and hold the LIGHT button to dim or brighten the light.



HI - Press the HI button to select your fan on high speed.



MED - Press the MED button to select your fan on medium speed.



LO - Press the LO button to select your fan on low speed.



OFF - Press the OFF button to turn off your fan.

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

NOTICE : The changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment .

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions. (1) This device may not cause harmful interference and (2) This device must accept any interference received, including interference that may cause undesired operation.

*The term "IC:" before the radio certification number only signifies that Industry Canada Technical specifications were met.*

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## Troubles Shooting

Indicator light not blinking when you press any button.

1. Check that batteries are properly installed.
2. Replace the batteries with 4 new AAA Alkaline batteries.

The remote does not operate your device.

1. Try all the codes listed for your brand.
2. Try the Code Search method (page xx).

No performing commands properly.

Start Code Search over again to locate the proper code.

Nothing happens when operating ceiling fan.

1. Make sure dip switches in both the transmitter and receiver are set to the same code.
2. Make sure ceiling fan is initially set on high speed.

No respond after pressing a button.

1. Make sure you have new batteries, and you are aiming your remote at your device.
2. Check that batteries are properly installed.

Note: reprogramming may be required after batteries are removed.