

Sun Visor Bluetooth Handsfree Car Kit

Appearance and Functions:
 1) Speaker
 2) Mute button (Exchange language and private talking)
 3) Status Indicator (LED)
 4) Volume + (+)
 5) Volume - (-)
 6) MFB button (Multi-Function button)
 7) Microphone
 8) Charging socket

Bluetooth

User Manual

LED indicator will be off and Voice Report says "Power off".

NOTE:

- Charging indication will be delayed for a few minutes if the speakerphone has not been used for a long time or if the battery is drained.
- To prolong durability of battery and ensure the stability of the speakerphone's functioning, it is recommended to charge the speakerphone immediately whenever low battery voltage indicator appears. The red LED will flash every 3 seconds. The unit will shut down soon when battery is very low.
- The red LED will flash every 3 seconds whenever the battery is low and will turn off in 30 seconds.

2. Speakerphone Power On/Off

To Power On: Press and hold the "MFB" button for 3 seconds until you hear a short beep. The blue LED indicator will be on and flash 5 times and Voice Report says "Power on".

To Power Off: In standby mode, press and hold the "MFB" button for 3 seconds until you hear 3 beeps. The red LED will flash 3 times and Voice Report says "Power off".

3. Pairing

Automatic or manual connection after searching will apply to the mobile phone's configuration. Prior to using the first time you must pair the speakerphone manually with Bluetooth-enabled mobile phones. Follow the pairing process as follows:

- Place the speakerphone and mobile phone no further than 3 feet apart.
- Be sure the speakerphone is in OFF mode.
- Press and hold the "MFB" button for 6 seconds until you hear the Voice Report "Ready to pair". The LED indicator will flash between red and blue alternately. It is now ready for pairing.
- Activate your mobile phone's Bluetooth function and search for available devices by referring to your mobile phone's user manual for details.
- Select "iTrak" from the list.
- Enter the pre-programmed code "0000" to pair the mobile phone with the speakerphone. When pairing is completed you may hear a long beep and the blue LED indicator will flash slowly 3 times. The Voice Report says "Phone 1 connected". This means the pairing was successful. The speakerphone then goes to standby mode and the blue LED indicator will flash every 3 seconds.
- Be sure your speakerphone and mobile phone are placed within approxi-

1. Charging the Battery

The product with built-in rechargeable battery can be charged with the charger (included). To use your Bluetooth speakerphone for the first time, charge the speakerphone fully. While charging, the red LED indicator will light up. After charging is completed the red LED indicator will be off and Voice Report says "Power off".

2. Pairing the Second Phone

The Bluetooth speakerphone allows you to match 2 cell phones at the same time:

- After the 1st cell phone pairing is successful, turn off the speakerphone, then turn it on again.
- For pairing the 2nd phone, follow the same steps above as for the 1st phone. After the 2nd cell phone has been paired successfully, Voice Report says "Phone 2 connected".

NOTE:

During the pairing process if you cannot get successful pairing within 2 minutes, the speakerphone will power off. Repeat the steps above and retry the pairing process. Automatic re-connection between speakerphone and mobile phone:

- The speakerphone will automatically connect to the mobile phone it was previously paired with.
- When the speakerphone is powered off or the paired mobile phone is more than 30 feet away from the speakerphone, the connection will be lost and the Voice Report will say "Phone 1 & 2 disconnected".
- Once the speakerphone is powered on again within 30 feet from the paired mobile phone the connection will be resumed automatically. There will be a long beep from the speakerphone to indicate the successful re-connection.
- If the speakerphone and mobile phone are not moved within 30 feet of each other, the speakerphone will power off automatically after 10 minutes. (Automatic or manual connection will apply to the mobile phone's configuration.)
- If desired, to connect your speakerphone with another Bluetooth phone, select "Disconnecting" to remove connection from your phone list. As a result, the speakerphone will disconnect with its pre-paired phone and Voice Report says "Phone 1 disconnected".

NOTE:

When making the connection, the blue LED indicator will blink shortly and quickly. Then the speakerphone will power off automatically after 10 minutes.

4. Using the Speakerphone

- Be sure your speakerphone and mobile phone are placed within 30 feet which is the recommended Bluetooth sensing distance.

6) Adjusting the Volume

When the speakerphone is paired with the mobile phone, press the "Volume+" or "Volume-" button repeatedly until it reaches the desired volume level. Voice Report says "Volume highest" or "Volume lowest" once the limited volume (up or down) is reached.

7) Conversation Switch Between Speakerphone and Mobile Phone From Speakerphone to Mobile Phone:

When a conversation is in progress through the speakerphone, press the Mode button to activate and the conversation will be switched from the speakerphone to the mobile phone. Press the Mode button again to switch back to the speakerphone.

NOTE:

This function is not available in all Bluetooth-enabled devices. It depends on the compatibility of the paired device.

8. Disconnection

You may disconnect the speakerphone from your mobile phone by powering off the speakerphone or by selecting "BT Speaker B" on your phone. If you accidentally disconnect the mobile phone when the speakerphone is on, the speakerphone will shut down automatically after 10 minutes.

9. Conversation from Second Phone

When 2 phones are connected at the same time, the first you connected is the primary that can be used for voice-dialing and redialing (after pressing MFB button). The second phone connected is secondary and you would use the "+" button for voice-dialing and redialing as below:

- Voice-dialing: Press "+" button once to activate the secondary phone's voice-dialing function.
- Redialing: Press "+" button twice to redial the last outgoing number of the secondary phone.

7. Low Voltage Protection of Battery

When the voltage of the battery has drained to 3.3V, the red LED will flash every 3 seconds and the speakerphone will power off automatically when the voltage is under 3.0V.

8. LED indication

Speakerphone Status	Red LED	Blue LED	Sound	Voice report
Off Mode	Off	Off		
Power On	On for 3 seconds	On for 3 seconds	Short beep	yes
Standby before Pairing	Flashes on every 3 seconds	Flashes on every 3 seconds	3 beeps	yes
Standby after Pairing	Flashes on every 3 seconds	Flashes on every 3 seconds		yes
Standby low Voltage	Flashes on every 3 seconds	Flashes on every 3 seconds		yes
Talking in progress	Flashes on every 3 seconds	Flashes on every 3 seconds		yes
Pairing in Progress	red light and blue light flash alternately			
Pairing Completed	Flashes on every 3 seconds		Short beep	yes
Privacy Handset	Steady on			
Charging in Progress	Steady on			
Charging Completed	Off	ON		

9. Care and Maintenance

- Do not expose the speakerphone to liquid, moisture or humidity. It is not waterproof.
- Do not use abrasive cleaning solvents to clean the speakerphone.
- Do not place the speakerphone in high temperatures.
- Do not expose the speakerphone to sharp objects as this will cause scratching and damage the cabinet.
- Do not attempt to open or disassemble the speakerphone as it does not contain serviceable components.
- If you do not use the speakerphone for a long time, be sure to store it in a dry place, free of extreme temperatures, humidity and dust.

10. Safety Information

- Check local laws regarding use of mobile phones and speakerphones while driving. If you use the speakerphone while driving, be sure your attention and focus remain on your and others' safety.

2) Never allow children to hold the speakerphone while asleep. Small parts may be a choking hazard.

3) Observe all signs that require an electrical device of Radio Frequency product to be switched off in designated areas, i.e., hospitals, blasting areas, potentially explosive atmospheres.

4) Turn off your speakerphone before boarding an airplane and do not use your speakerphone while air traveling.

5) Never place or store the speakerphone over the area of an automobile's safety airbag as it may cause serious injury when the airbag deploys.

11. Troubleshooting

If you are unable to connect the speakerphone and mobile phone, please try the following:

- Be sure the speakerphone is paired with your mobile phone.
- Be sure your mobile phone's Bluetooth feature is activated. Refer to your mobile phone user guide for specific instructions.
- Be sure the speakerphone is within a maximum of 30 feet of your mobile phone(s) and there are no obstructions, such as a wall or other electronic devices in between as it may cause interference transmission.
- If all the above steps do not resolve your problem, remove the battery for a few minutes and re-try the steps for pairing, etc.

The Bluetooth speakerphone is compliant with and adopts the Bluetooth Specification 2.0. However, interoperability between the device and other Bluetooth-enabled products is not guaranteed because it depends on compatibility. For more information on the compatibility between the device and other Bluetooth-enabled products, check with the manufacturer.

NOTE:

The product's configuration may change or be upgraded according to this product's development plan without prior notice.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: --Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help.

iTrak
Encore Technology

3-YEAR LIMITED WARRANTY

ELECTRO BRAND INC. (EBINC) warrants to the original consumer of this Encore Technology product that it will furnish a replacement for, or at its sole option, repair any part which proves (upon inspection by EBINC) to be defective under normal use within 3 years of the original purchase date.

This warranty does not apply to approximate items, including, but not limited to, antennas, knobs, cabinets or cases, and in the case of batteries, for damage caused by leaking batteries. It also does not apply to the product, or to any part thereof, that has been damaged through misuse or negligence.

Furthermore, this warranty will become invalid if, in the judgment of EBINC, the product or any part thereof has been installed incorrectly, repaired or altered by other than EBINC Warranty Service Department.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

For Service, Warranty, or Product Information,
 Please contact the Electro Brand Inc.,
 Customer Service Department at:
 1-800-963-3956, Ext. 117
 between the hours of 9:00 a.m. and 4:00 p.m. Central Standard Time
 Monday through Friday.

PLEASE SAVE THIS CARD TOGETHER WITH ORIGINAL DATED PROOF OF PURCHASE
 FOR YOUR RECORDS AND FOR CUSTOMER SERVICE.

Date purchased _____ Model number _____

Size: 260x180