

# ENDEAVOR

BLUETOOTH EARBUDS



### BLUETOOTH EARBUDS


Thank you for choosing our product. This product was created, according to USA regulation, by our professional team. For best use of your new device we recommend carefully reading the user manual and keeping it for your records.

#### Specifications

- Model No.: BTH-040
- Cable Length: 18.1 in (46cm)
- Weight: 0.3 oz (10g)
- Battery: 3.7V / 55mAh\*2
- Charging Interface: Micro USB
- Charge Input: 5V / 1.0A
- Charge Time: approximately 2 hours
- Talk Time: approximately 3 hours
- Playtime: up to 10 hours

2

### CONTROLS - ILLUSTRATED

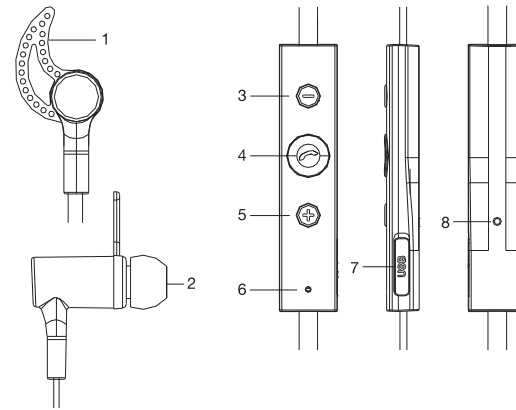

3

4

### CONTROLS

1. Adjustment Piece
2. Ear Bud
3. Volume Down / Previous
4. Power Button / Play / Pause
5. Volume Up / Next
6. Bluetooth Indicator
7. Micro USB Port
8. Microphone

### LED COLOR INDICATOR

SPEAKER STATUS	LIGHT INDICATOR
Bluetooth Pairing	Quickly flashes Red & Blue
Paired	Flashes Blue twice every second
Standby	Flashes Blue twice every 2 seconds
Talk Mode	Continuously flashes Blue
Charging	Solid Red Light
Fully Charged	Solid Blue Light
Battery Capacity: 100-15%	Blue Light
Battery Capacity: 100-15%	Red Light
Battery Capacity: Below 5%	Quickly flashes Red

5

### CAUTION:

- Do not use abrasive cleaners to clean your speaker. It could cause scratches and damage.
- Do not bring your speaker in to contact with any sharp objects. It could cause scratches and damage.
- Do not insert anything into your speaker unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your speaker yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your speaker battery, it is built-in and is not changeable.
- Use only the manufacturer supplied charger to charge your speaker. Other chargers may look similar, but using them could result in electric shock and could damage.
- Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Turn off your speaker prior to boarding an aircraft. Do not use the speaker inside an aircraft unless allowed by your airline.
- Dispose of the speaker and its battery in accordance with local regulations. Do not dispose of the battery with regular household waste.

### PAIRING YOUR BLUETOOTH EARBUDS

1. Press and hold the Power/Play/Pause button for 3 seconds to enter Bluetooth pairing mode. The LED indicator light will quickly flash blue and red.
2. With your device powered on, search "ENDEAVOR" on your bluetooth searching list. Proceed to pair your Bluetooth device with the earbuds.
3. After being paired successfully, you will hear an audible signal. When paired you are able to use this device to play your media of choice.
4. When you are finished using your earbuds, turn off your device by pressing and holding the Power/Play/Pause button for 3 seconds.

7

### PLAYBACK FUNCTIONS

1. Adjust the volume of your device by quickly pressing the Volume Up/Previous or Volume Down/Next buttons.
2. Press and hold the Volume Up/Previous button to skip to the previous song, or the Volume Down/Next for the next song.
3. Press Power/Play/Pause button on the earbuds to control the current track. You can also control your earbuds with a Bluetooth device.
4. Press the Power/Play/Pause button during an incoming call to activate 'Hands-Free' calling. The earbuds will continue playing your track when the call has completed. To reject an incoming call press and hold for 2 seconds. To redial the last number quickly press the Power/Play/Pause twice.

8

9

### FCC DISCLAIMER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause radio interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician.

### AUTOMOBILE ACCIDENT HAZARD

- Do not leave or store the Bluetooth Earbuds or any of its accessories near or over your automobile's air bag as serious injury may result when an air bag deploys.

### FIRE AND ELECTRIC SHOCK HAZARD

- Do not expose your Bluetooth Earbuds to liquid, moisture, humidity, or rain. Do not use the earbuds near a bathtub, sink, sauna, pool, or steam room. Exposure of the earbuds to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to the Bluetooth Earbuds. Such actions could result in electric shock.
- Clean the Bluetooth Earbuds only with a dry cloth.
- Do not expose your Bluetooth Earbuds to extremely high or low temperatures.
- Do not leave your Bluetooth Earbuds in direct sunlight for extended periods of time.
- Do not leave your Bluetooth Earbuds near open flames such as cooking burners, candles, or fireplaces.

**FCC Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions  
 (1) this device may not cause harmful interference, and  
 (2) this device must accept any interference received, including interference that may cause undesired operation.

10