




## Waterproof Bluetooth Speaker Model Number : S5

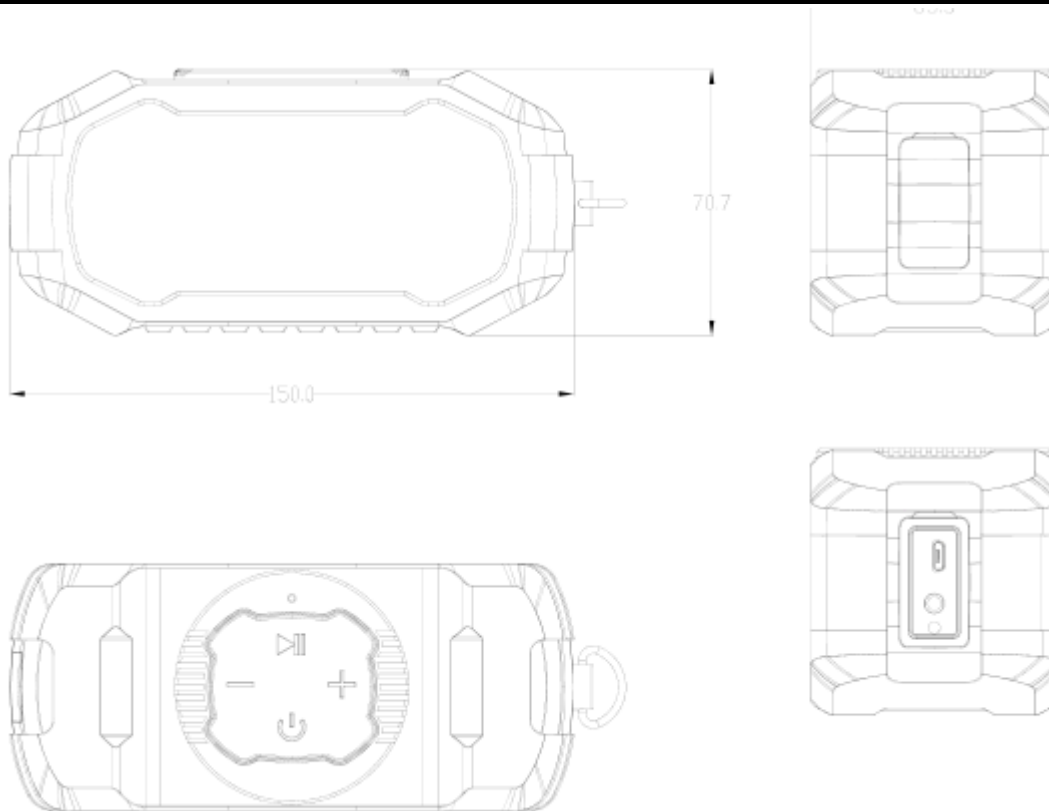



### Charging The Bluetooth Speaker






1. Open the rubber seal cover on the side. Charging time 3 hours.
2. Connect the Bluetooth Speaker's Micro USB socket with the Computer's USB port through USB cable.
3. The Charging LED will turn ON in red light; the rechargeable battery is in charging.
4. The Charging LED red light will turn OFF when the rechargeable battery is fully charged.
5. Disconnect the USB cable, and close the Rubber Seal Cover when it is done.

### Bluetooth Speaker Pairing / Reconnecting





1. Press the  button for 3 seconds, Mode LED will blink alternately in blue and red; the device is turned ON and goes into searching / pairing / reconnect mode for pair.
  2. Now, turn ON the Bluetooth function on your mobile phone.
  3. Search for **"S5"** and select it to pair.  
The Bluetooth Speaker will be reconnecting automatically if your mobile phone has been paired. (Depend on the of mobile phone's type and configuration, manual reconnection may require on some devices)
  4. If pairing is successful, Mode LED light will switch to slow blink in blue (once per 3 seconds).
  5. Press the  button for 3 seconds to turn OFF the Bluetooth Speaker.
- Note: If can't search Speaker, means the last mobile phone is reconnecting automatically

successfully. Should press the  button and  button for 3 seconds to delete last mobile and pair new mobile.

### Bluetooth Speaker Control Function

1. In playing music, press  button to pause music, press it once again to play.
2. Press the  button to increases the volume level.
3. Press the  button to decreases the volume level.
4. Press and hold the  button to play next music file.
5. Press and hold the  button to play previous music file.

### Hand Free Function & Redial For Last Call function

1. Press  button to pick up the call and the playing music will pause automatically.
2. Press  button for 2 seconds to reject the call.
3. Press  button again to hand up the call when finished. The paused music will start to play automatically.
4. To redial for last called number by the Bluetooth Speaker, even it is in music playing mode. Press twice the  button to enter into redial function.

**Tip:** speak to the MIC hole direct with distance in 30 cm to get the best speakerphone performance when necessary.

### AUX IN Function

1. In power ON mode, connect the Bluetooth Speaker's AUX IN Jack with an external device's "Earphone / AUX / LINE" Output through the Line-in cable.
2. The Bluetooth Speaker will switch to "AUX In" mode automatically from Bluetooth mode, and the Mode LED will slow blink in blue. All speaker button will be invalid under AUX-IN function.
3. Disconnect the Audio cable when it is done. Add one more notice: Line in the audio cable while the Bluetooth connected, if the music is stopped and no sound, please pull out both ends of the audio cable and then plug in again, if there is still no sound that audio cable needs to be replaced.

### **FCC Warning Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.