 


Basic Operations

 
Connecting a Audio Device (Audio) and the Remote Controller



Audio cable
(φ3.5)

Note

- ❖ If speakers without built-in amplifiers are used, prepare a separate amplifier.
- ❖ When external speakers are connected, no sound is output from the main unit's speakers.
- ❖ The volume of the external speaker can be adjusted with the [Volume +/-] button.




Audio cable
(φ3.5)



Basic Operations

Connecting a USB Device

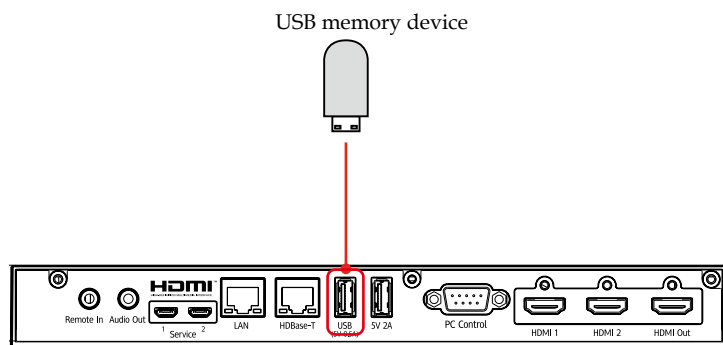

Basic Operations

Using the power cord stopper

To prevent the power cord from accidentally removing from the AC IN of the projector, use the power cord stopper.

Note


- ❖ If you pull on the power supply cord while the connector is fixed, the main unit may fall down and be damaged.

CAUTION:


To prevent the power cord from coming loose, make sure that all the prongs of the power cord are fully inserted into the AC IN terminal of the projector before using the power cord stopper to fix the power cord. A loose contact of the power cord may cause a fire or electric shock

Installing the power cord stopper

1. With the clammer facing the power supply cord, align the tip of the power supply cord stopper with the hole below the AC IN terminal and push it in.
2. Pass the power supply cord through the clammer and press the clammer to fix it.
3. Pass the power supply cord through the clammer and press the clammer to fix it.



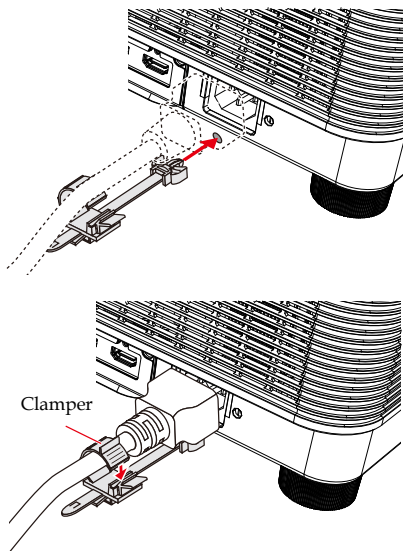


Basic Operations

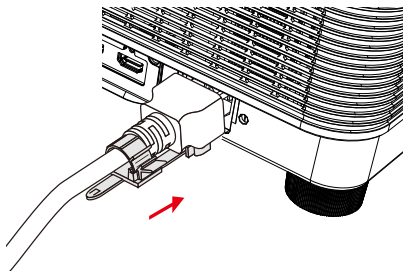

Disconnecting the power cord stopper

1. Pull to an appropriate position while pushing down the knob of the power cord stopper.
2. Press down the knob on the clamber to open the clamber and take out the power cord.
3. Push and pull the fitted part of the power cord stopper from the left and right to remove it from the main unit.

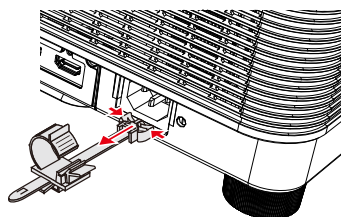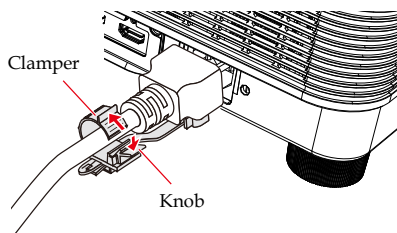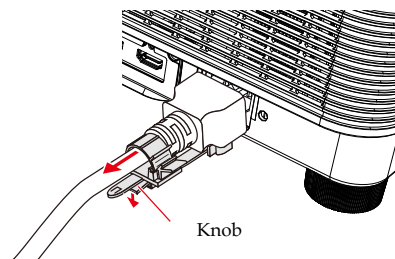


Basic Operations


Powering On/Off the Projector


Powering on the Projector

1. Please make sure the power cord and power cord stopper are securely connected. The Power indicator will turn red.


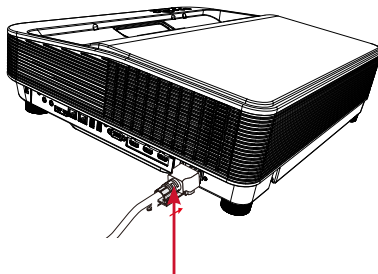


 Connect the power cord and stopper to the projector.

2. Turn on the projector by pressing the “” button on the top control panel or on the remote control.

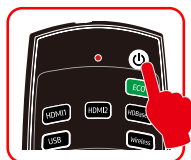

or

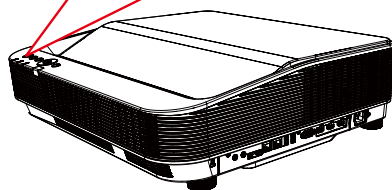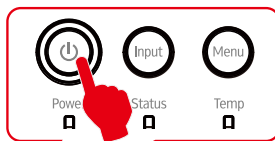

The Power indicator will flash blue.

The startup screen will display and the Power indicator will turn blue.

3. The first time you use the projector, you will be asked to select the preferred language. Turn on your source (computer, notebook, video player, etc.) The projector will detect your source automatically.

Make sure that the [Auto Source] has been set to [On].

* [Auto Source] is set to [On] as a factory default value.

Note

- ❖ Make sure that the power plug is fully inserted into both the projector AC inlet and the wall outlet.
- ❖ The AC outlet must be near this equipment and must be easily accessible.

Note

- ❖ If you connect multiple sources at the same time, press “Input” to switch inputs.

Note

- ❖ Turn on the projector first and then the signal sources.