

Usage Notice

- Caution- This product incorporates glass components, including a lens. If this should break, please handle with care to avoid injury and contact your sales representative for repair service. Avoid any broken pieces of glass since they may cause injury.
- Caution- Unauthorized substitutions may result in fire, electric shock, or other hazards.
Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to verify that the product is in proper operating condition.

Remote Control Battery

Warning

- Do not touch the battery directly with bare hands if it leaks. If the liquid gets into your eyes, do not rub them. It may cause blindness. Immediately wash with clean water and consult a doctor.

- Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

- Never throw batteries into a fire.

Using the batteries improperly may cause them to explode or leak and may result in serious injury. If battery-leaking fluid contacts skin, wash the fluid off immediately with clean water and consult a doctor. If the fluid spills on an instrument, avoid contact and wipe it off using tissue paper. Then dispose of the used tissue paper as flammable garbage after moistening the tissue with water.

- Do not mix new batteries with used batteries, old batteries, or batteries of different types. Otherwise, fluid leakage may occur.
- Risk of an explosion if battery is replaced by an incorrect type.
- Remove the batteries from the remote control when they are used up. Otherwise, fluid leakage may occur.

Notes

- Be sure to use two AA (R6) size batteries.
- Do not drop the remote control.
- Do not expose the remote control to moisture or heat.
- If the remote control does not operate correctly, or if the operating range becomes reduced, replace the batteries.
- Remove batteries from remote control when not using for extended periods.
- Avoid contact with water or liquid.
- If the batteries have leaked in the remote control, carefully wipe the case clean and install new batteries.
- Dispose of batteries according to local rules.
- Attention should be drawn to the environmental aspects of battery disposal
- When storing or disposing of batteries, insulate the terminals with tape or similar material. Do not mix with other batteries or metal objects.

Safety indications of this machine



WARNING

Class 1 laser product


[IEC 60825-1:2014, EN60825-1:2014+A11:2021, EN50689:2021]

- The laser module is equipped in this product. Use of controls or adjustments of procedures other than those specified herein may result in hazardous radiation exposure.

This product is classified as Class 1 CONSUMER LASER PRODUCT of IEC/EN 60825-1 Third edition (2014) and RG2 of IEC/EN62471-5 First edition.

Regarding the installation and management of the equipment, please comply with the relevant laws and regulations of your country.

 
1. Do not place anything in front of the lens while the projector is operating. Things placed in front of the lens may overheat and burn or start a fire. If you want to temporarily stop the projected image, use the AVMute button on the remote control.

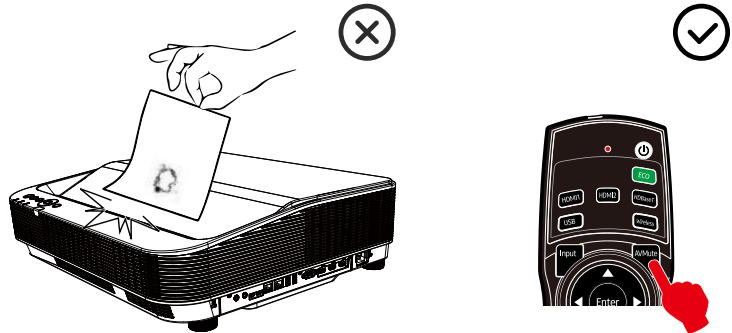


2. Projection light warning

- CLASS 1 CONSUMER LASER PRODUCT - RISK GROUP 2 IEC62471-5:2015
- Do not stare into the beam, maybe harmful to the eyes.
- Do not look into the light source light using optical instruments (such as magnifying glasses and mirrors). Visual impairment could result.
- When turning on the projector, make sure no one within projection range is looking at the lens. Be especially careful in an environment with children.

 
Usage Notice

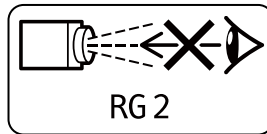


- Keep any items (magnifying glass etc.) out of the light path of the projector. The light path being projected from the lens is extensive, therefore any kind of abnormal objects that can redirect light coming out of the lens, can cause an unpredictable outcome such as a fire or injury to the eyes.
3. Do not remove any screws. Do not block or cover the vents.
 4. WARNING: This product contains a button cell or coin battery. (This label is affixed to products for USA and Canada only and is a warning statement for USA users.)

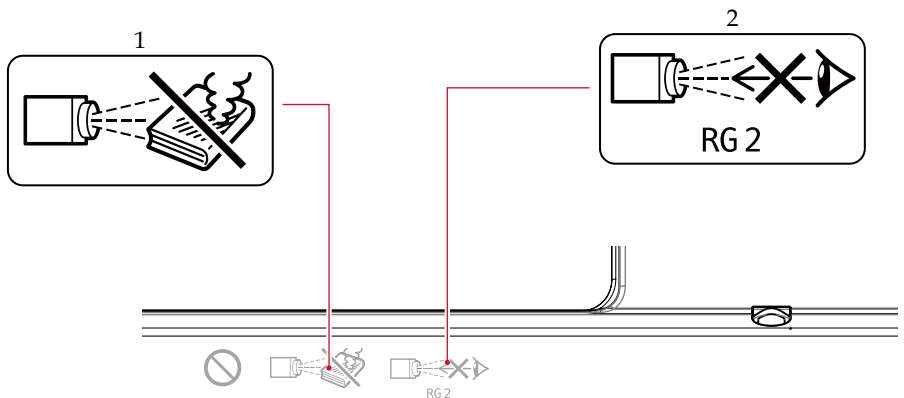 

Usage Notice

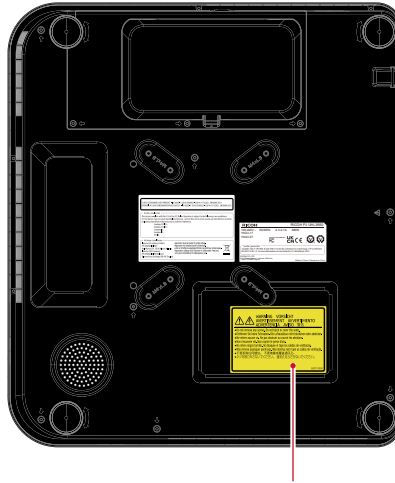 

3

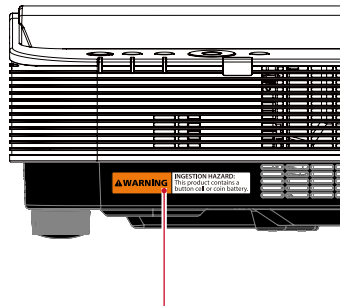 

4