

The Ferrite Core of the cable #6 in the test report's 4.2 Configuration of tested system is described in the separated manual. The separated manual is supplied when you buy the option, so it is NOT described in the Users manual.


2. Connecting the Machine

Connecting to the Ethernet Interface

This section describes how to connect Ethernet interface cable to the Ethernet interface.


★ Important

- If the main power switch is on, turn it off.
 - Use the following Ethernet cables.
 - Unshielded Twisted Pair Cable (UTP) or Shielded Twisted Pair Cable (STP) and Category type 5 or more
1. A ferrite core for the Ethernet interface cable is supplied with this machine. Attach the ferrite core about 10 cm (4 inch) (1) from the machine end of the cable.

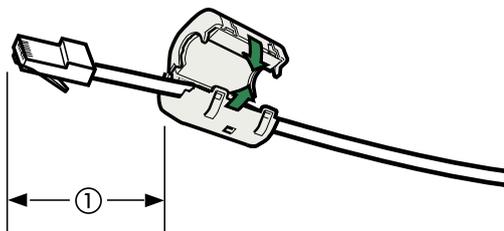

BKT031S

2. Make sure the main power switch of the machine is off.
3. Connect the Ethernet interface cable to the 10BASE-T/100BASE-TX port.

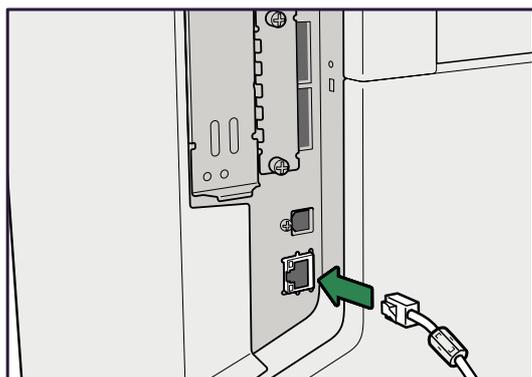

BKT002S

4. Connect the other end of the Ethernet interface cable to a network connection device such as a hub.