

Artesia

PA-88W




Owner's Manual

Virgin Musical Instruments

Precaution

Thank you for purchasing this digital instrument. For correct operation and safety, please read the manual carefully and keep it for future reference.

Safety Precautions

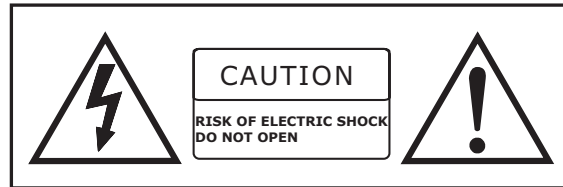

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Important Safety Instructions



(Figure 1)

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings; install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over (Figure 1).
- 13) Unplug this apparatus during lightning storms or when unused for a long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

CAUTION: Apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Always make sure all batteries are inserted the correct way around to match the +/- polarity markings.

Always replace all of the batteries at the same time. Do not combine old and new batteries, also do not mix battery types, as this can cause overheating, or fire, or battery fluid leakage.

Remove the batteries from the instrument if it is not to be used for a long time.

WARNING: This product contains chemicals, including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

Thank you for choosing Artesia!

Your portable 88 note piano not only contains leading and innovative technology but it also is developed by and for musicians of all playing levels. Featuring a natural balanced, weighted keyboard action and an advanced acousta ridge tone generation sound technology, that will provide you with a rich performing and playing experience.

This PA-88W offers many features and connection possibilities. To get the most out of your instrument, please read this manual and try out the various functions that can compliment your playing style.

Whether it is on stage, studio or home, your new portable piano is designed to give you a lifetime of musical enjoyment.

Features Include:

- . 88 Key Natural Balanced, weighted Keybed
- . 12 Acousta Ridge Instrument Voices
- . DSP Functions for additional realism
- . USB to Host and USB Audio Connection
- . MIDI, Stereo and Mono Line Outs
- . Battery Operated (6 D Cell Batteries are not included)
- . Includes AC Adaptor, Sustain Pedal, Music Rack and more

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- . Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.


Contents

Panel Control	3
Getting Started	4
Selecting a Voice	7
Demo Songs	8
Select the Demo Song	8
Stop the Demo Song	8
Reverb and Chorus Buttons	9
Layer Mode	11
To Adjust the Volume of Main Voice in Layer	11
To Adjust the Volume of the Layer Voice	12
Metronome	14
Tempo	15
Edit Functions	16
Master Tuning	16
Touch	17
EQ Adjustment	18
MIDI Functions	20
MIDI Channels	20
Local On/Off	20
Panic Key	21
Factory Reset	23
Appendix	24
Advanced Function keyboard Chart	29
Specifications	30
Warranty	31

Rear Panel

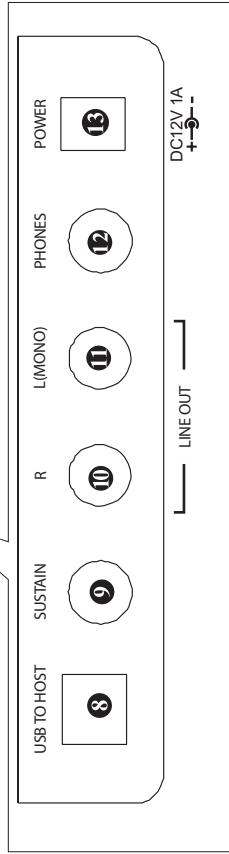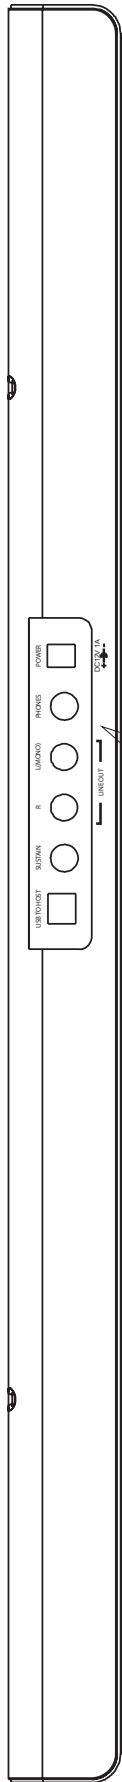

Top Panel

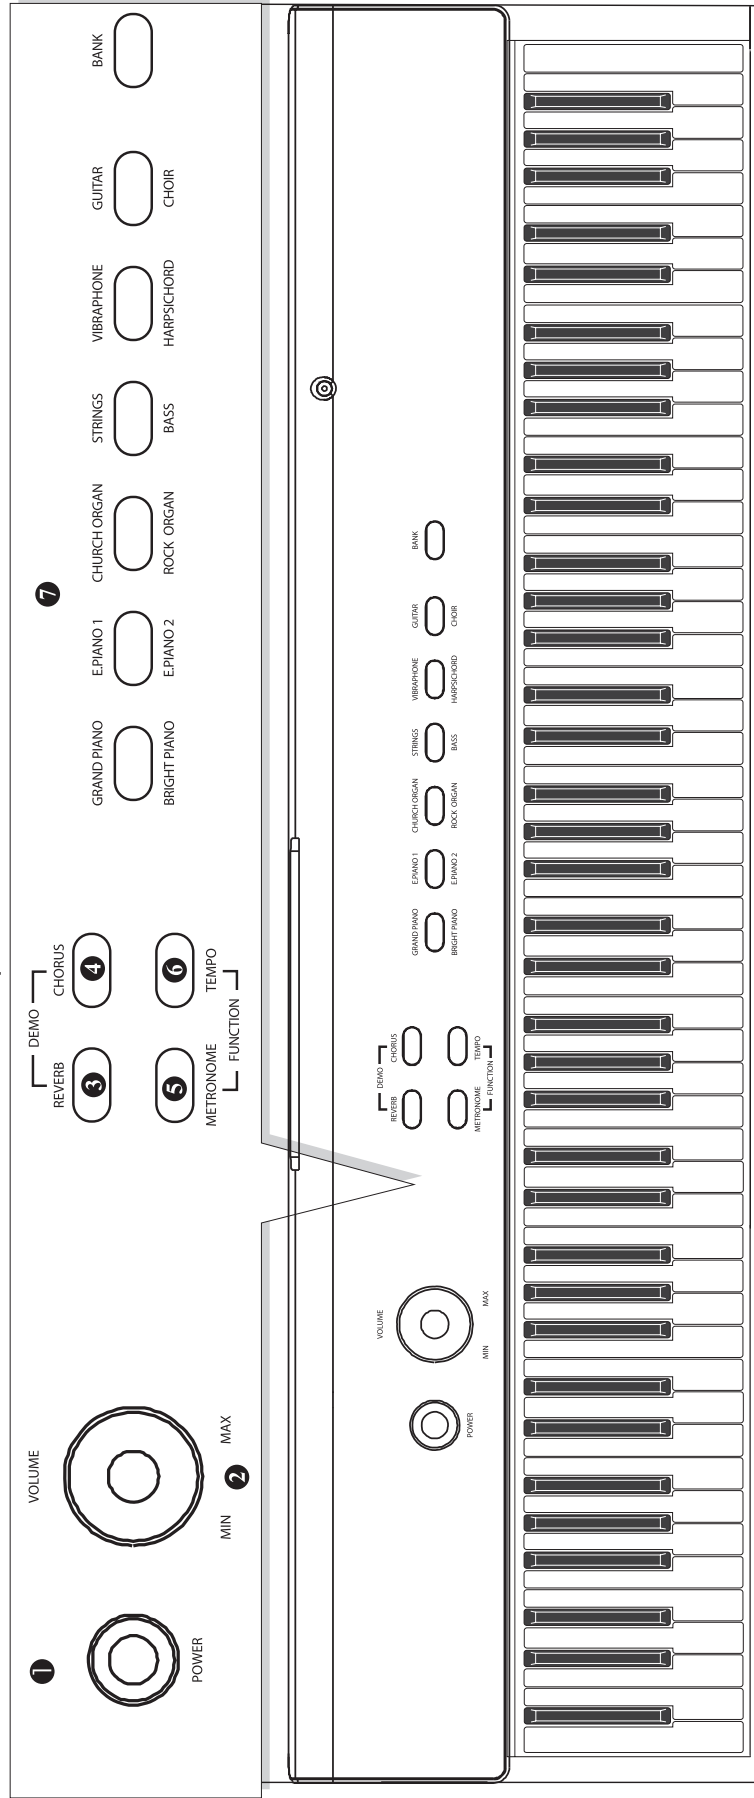


Panel Control

- 1 POWER
- 2 MASTER VOLUME
- 3 REVERB Button
- 4 CHORUS Button
- 5 METRONOME Button
- 6 TEMPO Button
- 7 VOICES Select
- 8 USB TO HOST Jack
- 9 SUATAIN Jack
- 10 LINE OUT(R) Jack
- 11 LINE OUT(L)(MONO) Jack
- 12 PHONES Jack
- 13 POWER Jack

Getting Started

Turn on the power

Before playing turn the power on by pressing the POWER switch, the panel LED will light.

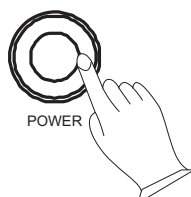


NOTE


If you don't play the Demo song, don't make any operation, the piano will turn off after 30 minutes.

Auto Power On/Off

Press the [METRONOME] and the [TEMPO] buttons together to enter the Function Mode.

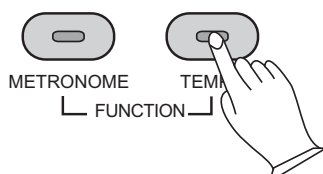

Pressing the C#2 piano key allows the user to switch auto Power On or Off. While holding down the C#2 piano key, play the C3 Key once for Auto Power On and twice for Auto Power Off.

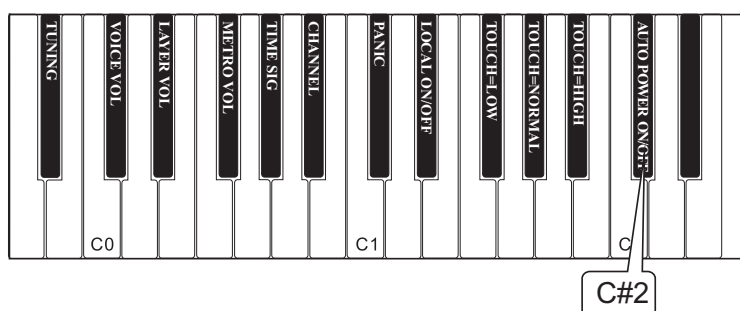


Press the [METRONOME] and the [TEMPO] buttons together again to exit the Function Mode.

NOTE

If Default is on, it means the unit will Auto Power Off after 30 minutes if there is no operation, but expect no demo playing.


Set the Volume

Initially set the [VOLUME] about half way between the "MIN" and "MAX" settings. You can adjust the volume to accommodate you play.

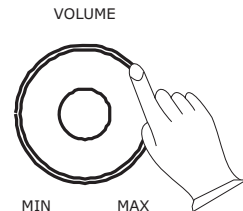


Using Headphones

One standard stereo headphones can be plugged in here for private practice or late-night playing. The internal speaker system is automatically shut off when a pair of headphones is plugged into PHONES jacks.

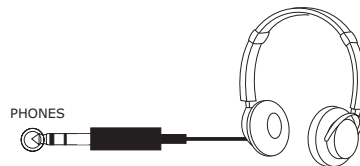

Using External Sound System

The Line Out jack(R) and Line Out jack(L)(MONO) can be used to deliver the output of the piano to a keyboard amplifier, stereo sound system, mixing console or tape recorder.

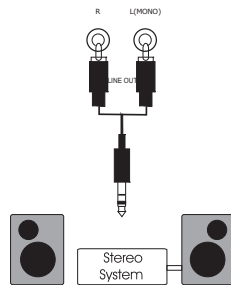

Using USB-MIDI

This piano allows the transfer of MIDI over USB. There is a specific way in which the MIDI signals are routed for maximum flexibility. In a standard Digital Piano, the built-in keyboard sends MIDI signals to the internal sound bank as well as the 5-pin MIDI output. In this digital piano, the keyboard not only sends MIDI signals to the internal sound bank (just like normal) but also sends MIDI signals simultaneously to the internal MIDI connection which hooks up inside the device to the Audio Interface. It is the Audio Interface that is used to control the USB-MIDI.



USB TO HOST


USB Audio

The PA-88W have USB Audio.

This means that you can plug in via a USB Cable to your Laptop, Tablet, iPad, and SmartPhone and be able to hear you device's audio through the pianos speaker system. This is very useful for example when you are recording your piano with your laptop and want to listen back through the pianos speakers. Or if you are using some of the instrument voices on the Garage Band app from your iPad, now you can hear it through the pianos' sound delivery system instead of just the iPad's speakers or headphones.

Sustain Pedal

The foot pedal included with your digital piano will cause piano key sounds to decay slowly as if they were being held down. A piano-style pedal may optionally be used. The jack will auto-detect the polarity of the sustain pedal.

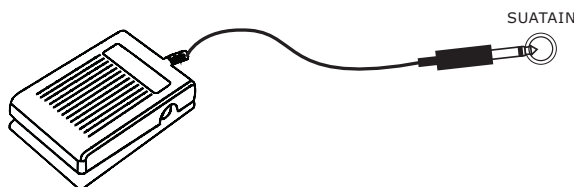

NOTE

Ensure the piano is turned off before connecting the pedal. Otherwise, it will affect the piano sound.

As standard, the pedal will affect the note playing after pressed. To change polarity, hold the foot pedal down during power up.

Using DC Power Jack

Connection for the included DC power adapter. Please use only the provided adapter.

Using Battery Power

Always make sure all batteries are inserted the correct way around to match the +/- polarity markings.


Always replace all of the batteries at the same time. Do not combine old and new batteries, also do not mix battery types, as this can cause overheating, or fire, or battery fluid leakage.

Remove the batteries from the instrument if it is not to be used for a long time.

Selecting a Voice

The piano has 12 built-in voices, which include several pianos as well as other instruments. These digitally-sampled musical instrument sounds may be selected one at a time, layered to produce two voices at once.

To select a voice (Main voice), press the appropriate Voice Select button on the right side of the front panel.

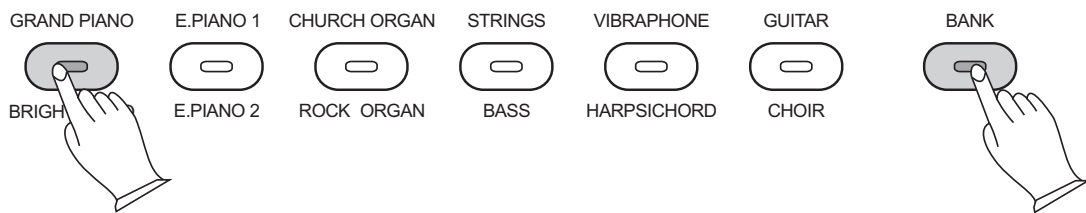

NOTE


Press the [BANK] button and the indicator is light, then press voice buttons to select the voice in the second line.

Demo Songs

There are 12 demo songs in the piano. Each demo song will demonstrate a different voice. Here's how you can select and play the demo songs.

Select the Demo Song

The demo songs may be selected by pressing the [REVERB] and [CHORUS] buttons together simultaneously. The demo starts with the Piano. The [REVERB] button, the [CHORUS] button and voice buttons will flash .

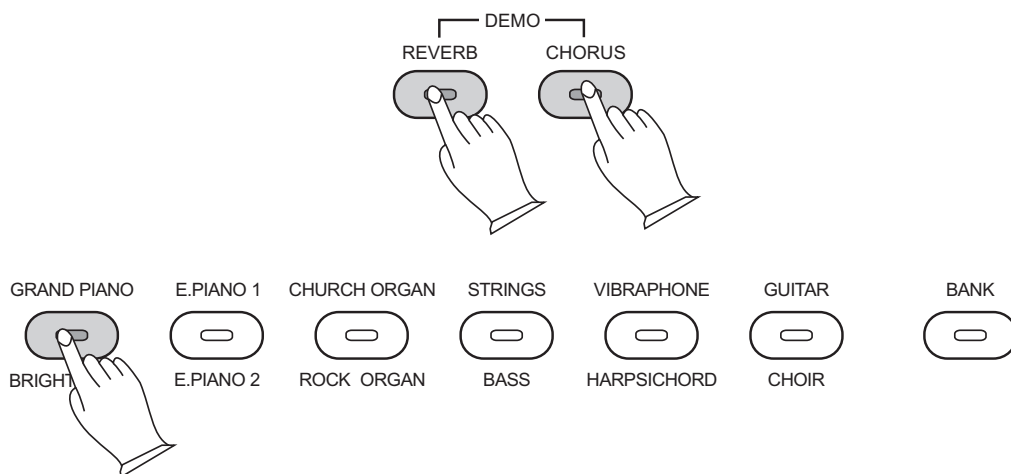


During playback, another song may be chosen by pressing a different voice select button. Press the [BANK] button and the LED button light, then press voice buttons to select the demo song in the second line.

Stop the Demo Song


To stop the demo song. Press the [REVERB] button and the [CHORUS] button together again.

To replay the current song from the beginning, press the flashing voice select button.

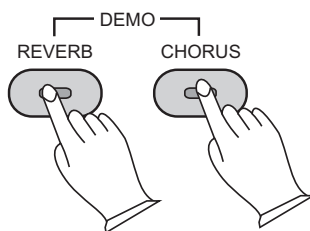

Reverb and Chorus Buttons

The Reverb and Chorus effects may be applied to each voice individually and will be retained even when the power is turned off.

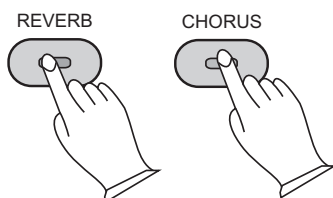


To apply either effect, press either button. The button will light and the effect will be heard when the piano is played.


To turn off the effect, press the button of the desired effect again and the LED light will not light.

Select the depth of the effects

1. Press and hold the effect button.

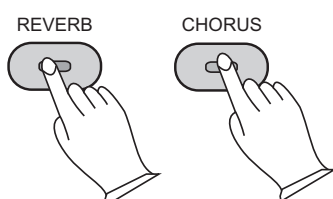

2. While this function is active the LED should blink. You can then release the button and press a key on the keyboard corresponding to the setting you want for the reverb depth. It's possible to change the setting by pressing multiple keys after each other until the right setting is found.

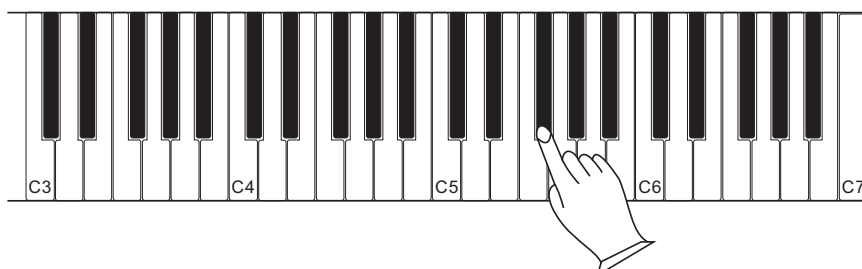

3. Set the reverb depth by pressing a key on the keyboard to select the value. See the Appendix for the value ranges.


4. Play the keyboard to hear the new setting with the sound selected.

5. To exit the [REVERB]([CHORUS]) function, press the [REVERB] ([CHORUS]) button again.


Layer Mode

In Layer mode two voices may be played simultaneously, each at selected volumes.

To enter Layer mode, press and hold the button to select the MAIN sound, then press the button for LAYER sound, and release. Both the button LED will light while layered.

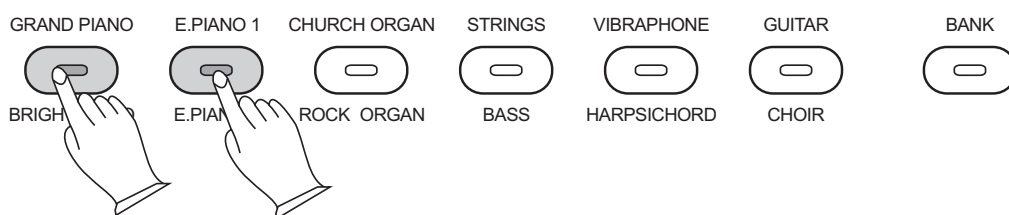


To turn Layer Mode off, select a single voice button and the other Voice will be turned off.

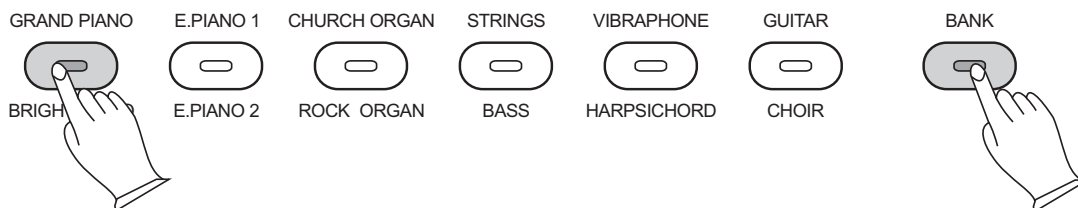


To layer two sounds in different banks, press and hold simultaneously the voice button required in the first bank and the bank button. The bank button LED will flash and the first voice button will be lit. Once the bank button is flashing can remove your hands from the buttons. Next, select the layered button from the second bank by pressing the corresponding button. Once selected this button will blink to indicate its from the second bank while the instrument from the first bank stays lit. If two voices in the first and second bank, but on the same button are selected, the buttons should merely blink. These can also be layered by double-pressing the button in which case again the button will blink.

To Adjust the Volume of Main Voice in Layer


Press the [METRONOME] and the [TEMPO] buttons together to enter Edit Mode, The LEDs for both buttons will become lit.

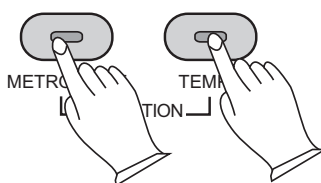

Pressing C#0 activates the voice volume menu.

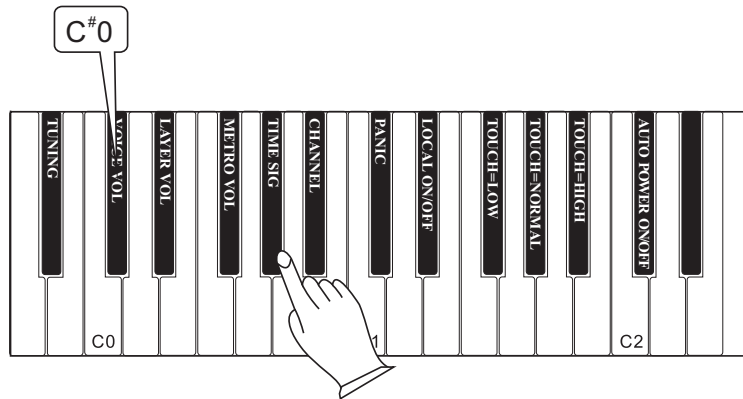


The volume can be changed in 88 note steps from 0-127 where C7=127 and A-1=0. Pressing a key will play C3 of the currently selected voice sound at the volume corresponding to the key value.

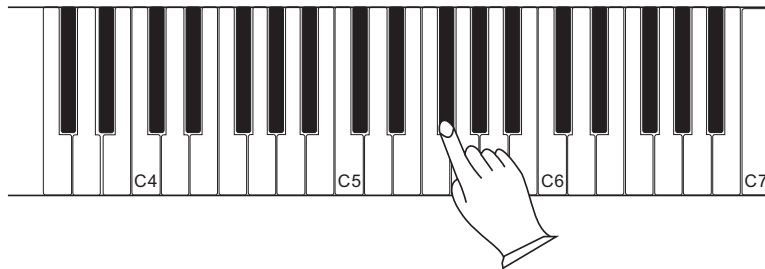


To exit the Voice Volume function, press the [METRONOME] and [TEMPO] buttons at the same time again.

To Adjust the Volume of the Layer Voice


Press the [METRONOME] button and the [TEMPO] button to enter Edit Mode.

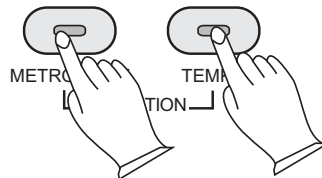

Press the (D#0) key activates the voice volume menu. The volume can be changed in 88 note steps from 0-127 where C7=127 and A-1=0.

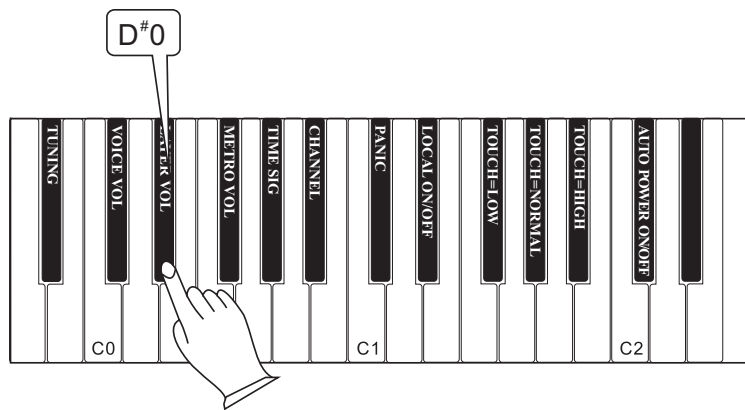

Press a key will play C3 of the currently selected layered sound at the volume corresponding to the key value.

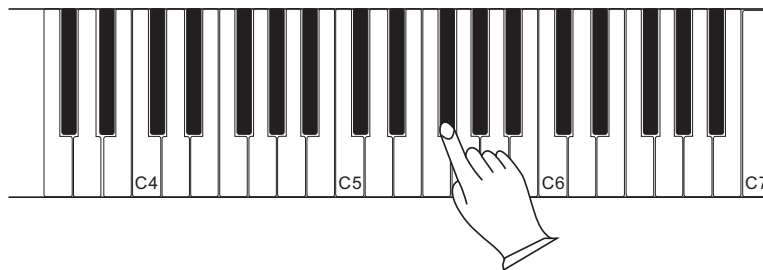


Press the [METRONOME] and the [TEMPO] again to exit Edit mode.

Metronome

Press the metronome button to turn the metronome on.


When the Metronome button is activated its LED will light and you will hear the click in the headphones or through the speakers.

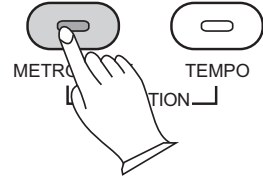

Metronome Volume


Press the [METRONOME] and [TEMPO] buttons together to enter edit mode.

Pressing F#0 activates the metronome volume menu. the volume can be changed in 88 note steps from 0-127 where C7=127 and A-1=0. Pressing a key will play the metronome sound at the volume corresponding to the key value.

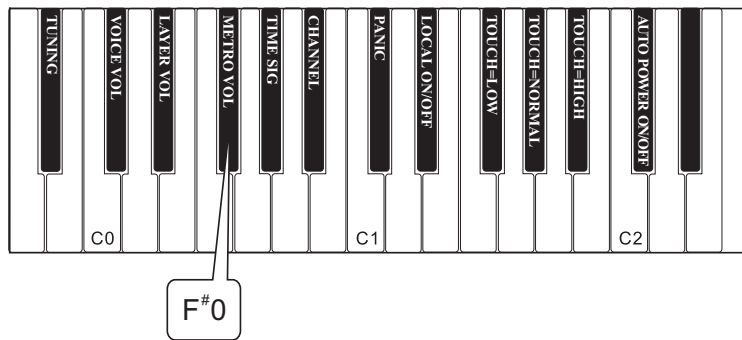

Changing the Time Signature


Pressing the [METRONOME] and the [TEMPO] buttons allows the user to change the time signature for the metronome. When this menu is selected the metronome starts playing at the current tempo setting. Pressing G#0 toggles through the time signature options starting with the current setting. Default is 4/4 and the following options are available to toggle through: 2/4, 3/4, 4/4, 5/4, 6/8, 9/8, 12/8.

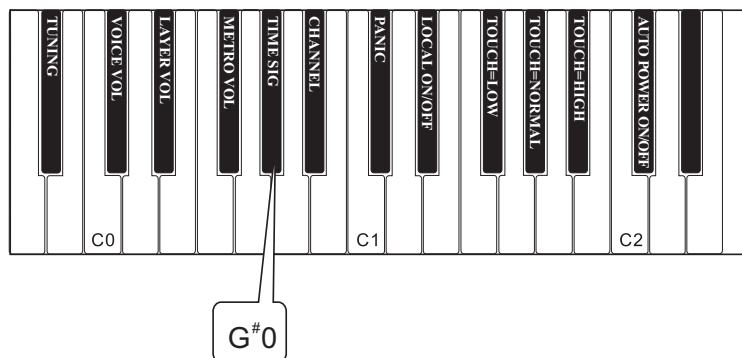

Press the [METRONOME] and the [TEMPO] buttons again to exit Edit Mode.

Tempo

The tempo of the metronome may range from 20 to 280 beats per minute (BPM).

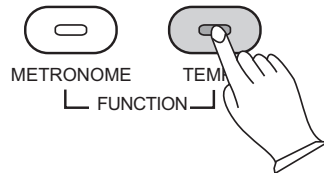

To change the tempo, press and hold the button for 3 seconds to change the setting. The LED will blink to the current tempo speed. If the Metronome is off, no sound will be heard.

Press a key on the keyboard to select a tempo. The LED will blink to the new value. It is possible to make multiple changes and see the LED tempo change as the keys are pressed.


To exit, press the tempo button. The LED will stop blinking and not light. See Appendix for the value ranges .

Tempo defaults to 120 but settings are retained when the power is turned off. For example 120BPM is the C3 piano key.

Edit Functions

In Edit Mode the keys on the keyboard are used for selecting the Function to be edited. To enter Edit Mode, press the Metronome and Tempo buttons at the same time.

Function Key Assignments

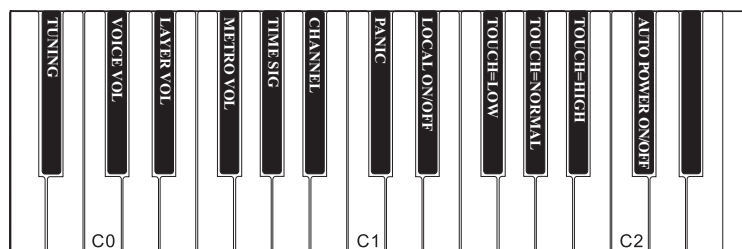


Please refer to pages 14 and 11 for information about editing the Metronome and Layer functions.

Master Tuning


The piano is tuned to A440 when the power is turned on and does not require tuning. However, if desired, the tuning may be adjusted in small increments from -50 to +50 cents (one semitone).

To change the Master Tuning:


Press the [METRONOME] and [TEMPO] button together to enter Edit Mode.

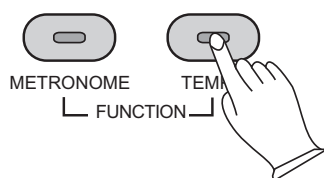

Press the Tuning key A[#]-1 to select the Master Tuning Function. The keyboard will now play middle C piano 1 voice (C3) on every note across the keyboard. Playing C3=C3. Pressing any key downwards to A[#]-1 will play C3 but change the tuning setting proportionately to tune down by a whole semi tone.

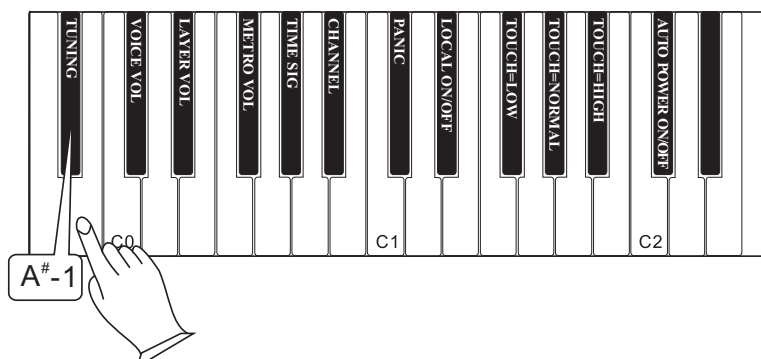

Pressing any key from C3 and up will play the c3 note but at tuning settings proportionately so that its possible tune up by a whole semi tone. The user will use his ears to determine the correct tuning setting.

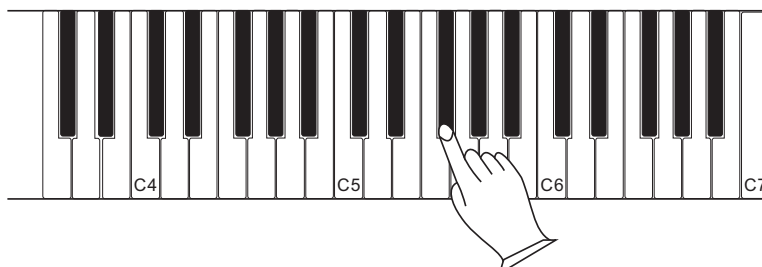


Press the [METRONOME] and the [TEMPO] buttons again to exit Edit Mode.

Touch


The Touch Select function allows the choice of 3 keyboard sensitivity settings for different playing styles: Low Sensitivity, Normal Sensitivity and High Sensitivity. This affects the volume of the piano as you play the keys.

To Set the Keyboard Sensitivity

Press the [METRONOME] and the [TEMPO] buttons together to enter the Edit mode.

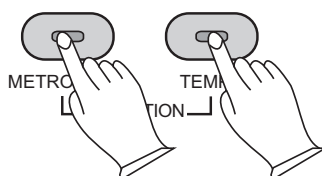

Press the desired Touch Select key (F#1, G#1, A#1) to select between Low, Normal and High velocity curves. When selecting F#1 low, Piano 1 C3 will play at velocity value 30. When G#1 Normal is selected, Piano 1 C3 will play at velocity value 70. When A#1 High is selected, Piano 1 C3 will play at velocity value 127 and the piano will exit Function Mode automatically.

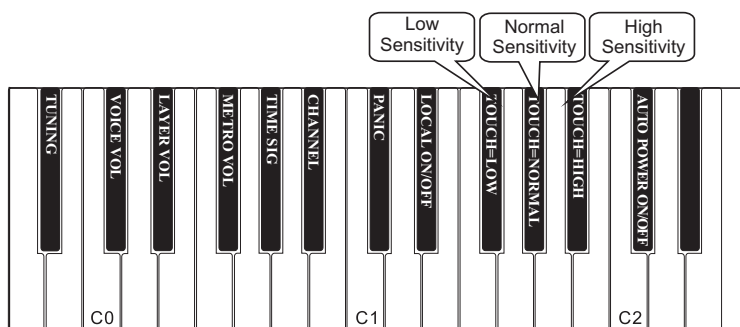


EQ Adjustment

To change the sound of your piano's amplifier you can adjust the EQ to add more Bass or to remove some of the Treble.

To Change the Bass Response

1. Press the [METRONOME] and [TEMPO] Buttons together to enter the Function Edit mode.
2. Press the A[#]5 piano key activates the Bass EQ Function

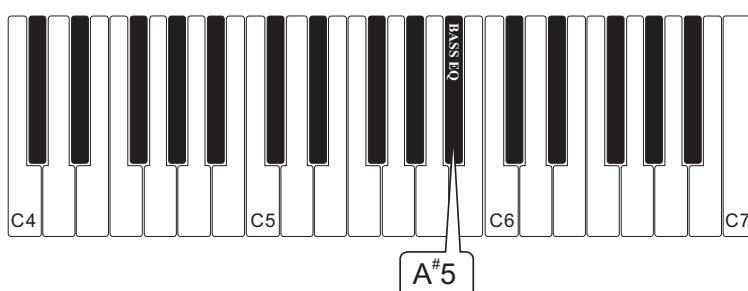

The Bass EQ can be changed by pressing white piano keys only from the A-1 piano key to D3 piano key.

Pressing the F1 Piano Key sets the Bass EQ to its center point EQ Setting.
Pressing the A-1 Piano Key will reduce the Bass response by 12dB.
Pressing the D3 Piano Key therefore increases the Bass response by 12 dB.

For Example to set the Bass EQ setting to 10 dB you would press the B2 white piano key.


To set the BASS EQ to -8 dB you would press the E0 piano key.

For the Keyboard Chart of the piano key numbers and listings please page 29 of the Advanced Keyboard Functions.

4. Press the [METRONOME] and [TEMPO] Buttons together again to exit the Function Mode. Then play the lower half of the piano to hear the bass response increase for the changes that you have made in the Bass EQ settings.

To change the Treble Response

1. Press the [METRONOME] and [TEMPO] Buttons together to enter the Function Edit Mode.
2. Press the C[#]6 piano key activates the Treble EQ Function.

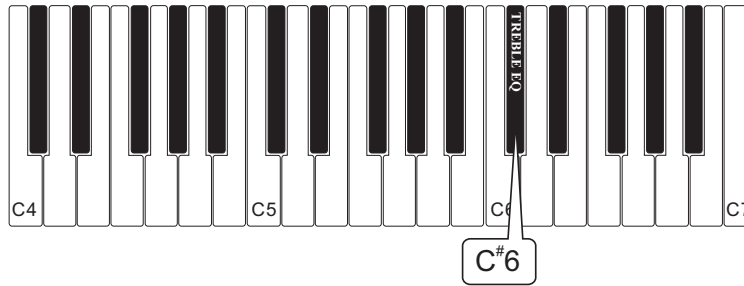

3. The Treble EQ can be changed by pressing white piano keys only from the A-1 piano key to D3 piano key.

Pressing the F1 Piano Key sets the Treble EQ to its center point EQ Setting.
 Pressing the A-1 Piano Key will reduce the Treble response by 12dB.
 Pressing the D3 Piano Key therefore increases the Treble response by 12 dB.

For Example to set the Treble EQ setting to 10 dB you would press the B2 white piano key.

To set the Treble EQ to -8 dB you would press the E0 piano key.

For the Keyboard Chart of the piano key numbers and listings please page 29 of the Advanced Keyboard Functions.

4. Press the [METRONOME] and [TEMPO] Buttons together again to exit the Function mode.

Then play the keyboard in the upper half of the piano keys to test the changes that you made in the TREBLE EQ Setting.

NOTE

Bass and Treble EQ settings will be stored in the pianos memory and the latest setting will be used when the piano is powered up again.

To set the piano to its Default Settings press and hold the [REVERB] and [CHORUS] buttons while turning the piano's power switch on.

MIDI Functions

MIDI Channels

MIDI Out channel values range from 1 to 16.


To change the MIDI Out Channel Value: While in the Edit Mode press the A#0 key the amount of times that correspond to the MIDI Out Channel that you desire.

The MIDI Out Channel Value is identified by the amount of times that the C3 Piano Note is sounded.

The default MIDI Out channel is 1.

For example: When you press A#0 piano key one time in edit mode, you will hear one note C3 sound to indicate that current MIDI Out channel is 1.

If you press The A#0 piano key 9 times in a row while still in the Edit Mode you will hear the C3 Note being played back 10 times to denote that the new MIDI Out channel is 10.

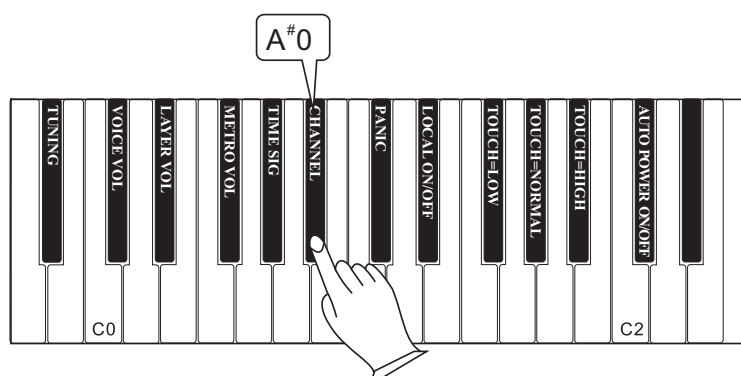


Local On/Off


Turning the Local On/Off function to Off will disconnect the keyboard from the internal sound engine of this piano. This means you can use the piano as a MIDI controller to control other MIDI devices (or virtual instrument software running on

your computer) without playing the internal sounds of this piano. You may also find other occasions (such as when you are using MIDI sequencing software on your computer) where it is useful to turn Local off.

Press the [METRONOME] and the [TEMPO] Buttons together to enter the edit mode.

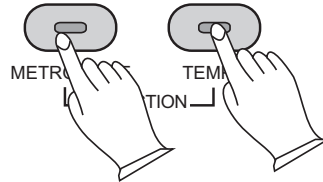

Press the Local On/Off key (D#1) to switch local on or off. When the D#1 key is first pressed the current setting is confirmed by playing the C3 piano key once for on and twice for off. If you press the D#1 key again you will need to re-enter your desired settings.

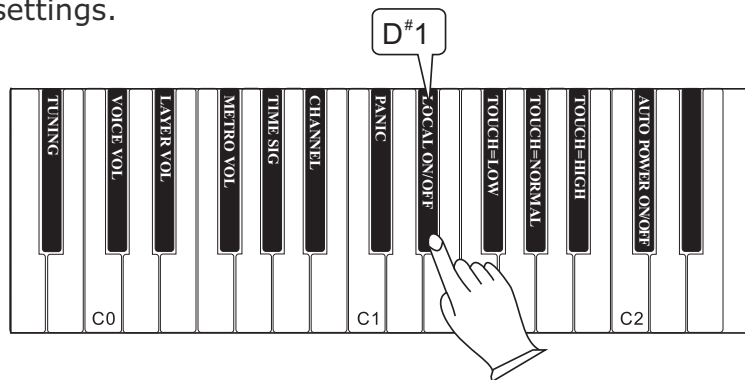

Press the [METRONOME] and the [TEMPO] Buttons again to exit the edit mode.


MIDI Panic Key

Pressing the Panic key will send out a “Reset All Controllers” and “All Notes Off” MIDI Message on ALL MIDI Channels 1 - 16. This can be especially useful for clearing “stuck notes” when controlling external MIDI devices or software.

To use the Panic key to send out a “Reset All Controllers” and “All Notes Off” MIDI Message on ALL MIDI Channels 1 - 16:

Press the [METRONOME] and [TEMPO] button together to enter Edit Mode.


Press the Panic Key (C#1) allows the user to activate Panic, which send out general MIDI reset messages such as all note off, etc. Once Panic reset has been completed, Piano will automatically exit Edit mode.

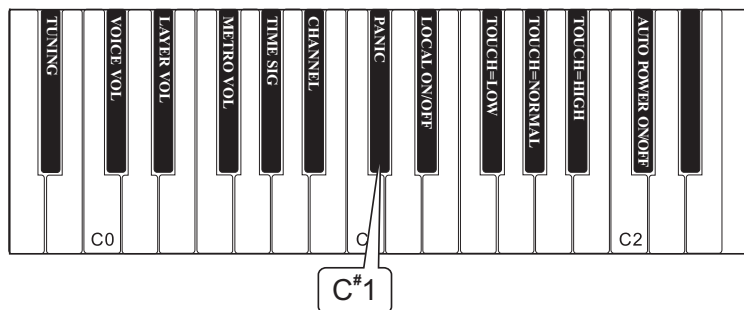

Factory Reset

Performing a Factory Reset will clear all battery backed memory and restore all functions to their factory defaults, just like they were when you used this piano for the first time.

1. Turn the Power Off.
2. Hold down the [REVERB] and the [CHORUS] buttons while powering on the piano.

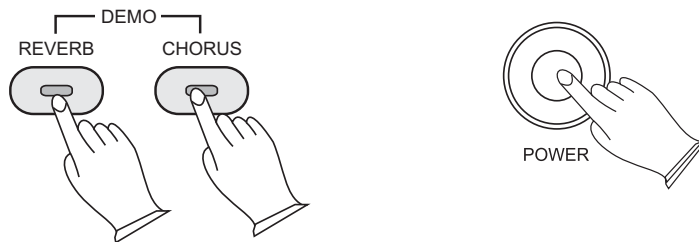

All LEDs on the device will light while these buttons are held down. Once this has happened, you can release the [REVERB] and [CHORUS] buttons.

When the [REVERB] and the [CHORUS] buttons are released, this piano will return to Performance Mode (ready-to-play). All button LEDs will return to their default states.

This piano will then function normally and as if powered on for the first time.

Appendix

MIDI Implementation Chart

Function		Transmitted	Recognized	Remarks
Basic Channel	Default	1-16	1-16	*Up to 3 channels simultaneously
	Changed	1-16	1-16	
Mode	Default	Mode 3	Mode 3	
	Messages	Yes	No	
	Altered	*****	No	
Note Number	True voice	0~127 *****	0~127	
Velocity Note	Note ON	Yes	Yes	
	Note OFF	Yes	Yes	
After Touch	Key's	No	No	
	Channels	No	No	
Pitch Bend		No	No	
Control Change		0-127	0,1,5,6,7,10,11, 32,64,65,66,67, 80,81,91,93,100, 101,121	
Program Change	True #	0-127 *****	0-11	12
System Exclusive		Yes*	Yes*	*The controller will recognize and respond to GM Device inquiries. Master Tune supported. Master Volume supported.
System Common	Song Position Pointer	No	No	
	Song Select	No	No	
	Tune Request	No	No	
System Real Time	Clock	No	No	
	Commands	No	No	
Aux Messages	All Sounds Off*	Yes	Yes	* The controller will respond to GM, but not piano voices.
	Reset All Controllers	Yes	Yes	
	Local ON/OFF*	Yes	Yes	
	ALL Notes OFF	Yes	Yes	
	Active Sensing	No	Yes	
System Reset	No	Yes		
Notes				

MIDI Channel Modes		
	POLY OFF	MONO ON
OMNI ON	Mode1	Mode3
OMNI OFF	Mode2	Mode4

Parameter adjusting instructions

According to chart shown below, choose corresponding key to set the desired values.

	Voice Vol	Layer Vol	Metro. Vol	Reverb Vol	Chorus Vol	Tempo
A-1	0	0	0	0	0	20
A#-1	2	2	2	2	2	24
B-1	4	4	4	4	4	28
C0	6	6	6	6	6	32
C#0	8	8	8	8	8	36
D0	10	10	10	10	10	40
D#0	12	12	12	12	12	44
E0	14	14	14	14	14	48
F0	16	16	16	16	16	52
F#0	18	18	18	18	18	56
G0	20	20	20	20	20	60
G#0	22	22	22	22	22	62
A0	24	24	24	24	24	64
A#0	26	26	26	26	26	66
B0	28	28	28	28	28	68
C1	30	30	30	30	30	70
C#1	32	32	32	32	32	72
D1	34	34	34	34	34	74
D#1	36	36	36	36	36	76
E1	38	38	38	38	38	80
F1	40	40	40	40	40	82
F#1	42	42	42	42	42	84
G1	44	44	44	44	44	86
G#1	46	46	46	46	46	88

	Voice Vol	Layer Vol	Metro. Vol	Reverb Vol	Chorus Vol	Tempo
A1	48	48	48	48	48	90
A#1	50	50	50	50	50	92
B1	52	52	52	52	52	94
C2	54	54	54	54	54	96
C#2	56	56	56	56	56	98
D2	58	58	58	58	58	100
D#2	60	60	60	60	60	102
E2	62	62	62	62	62	104
F2	64	64	64	64	64	106
F#2	66	66	66	66	66	108
G2	68	68	68	68	68	110
G#2	70	70	70	70	70	112
A2	72	72	72	72	72	114
A#2	74	74	74	74	74	116
B2	76	76	76	76	76	118
C3	78	78	78	78	78	120
C#3	80	80	80	80	80	122
D3	81	81	81	81	81	124
D#3	82	82	82	82	82	126
E3	83	83	83	83	83	128
F3	84	84	84	84	84	130
F#3	85	85	85	85	85	132
G3	86	86	86	86	86	134
G#3	87	87	87	87	87	136
A3	88	88	88	88	88	138
A#3	89	89	89	89	89	140
B3	90	90	90	90	90	142
C4	91	91	91	91	91	144

	Voice Vol	Layer Vol	Metro. Vol	Reverb Vol	Chorus Vol	Tempo
C#4	92	92	92	92	92	146
D4	93	93	93	93	93	148
D#4	94	94	94	94	94	150
E4	95	95	95	95	95	152
F4	96	96	96	96	96	154
F#4	97	97	97	97	97	156
G4	98	98	98	98	98	158
G#4	99	99	99	99	99	160
A4	100	100	100	100	100	162
A#4	101	101	101	101	101	164
B4	102	102	102	102	102	166
C5	103	103	103	103	103	168
C#5	104	104	104	104	104	170
D5	105	105	105	105	105	172
D#5	106	106	106	106	106	174
E5	107	107	107	107	107	176
F5	108	108	108	108	108	178
F#5	109	109	109	109	109	180
G5	110	110	110	110	110	185
G#5	111	111	111	111	111	190
A5	112	112	112	112	112	195
A#5	113	113	113	113	113	200
B5	114	114	114	114	114	205
C6	115	115	115	115	115	210
C#6	116	116	116	116	116	215
D6	117	117	117	117	117	220
D#6	118	118	118	118	118	225
E6	119	119	119	119	119	230

	Voice Vol	Layer Vol	Metro. Vol	Reverb Vol	Chorus Vol	Tempo
F6	120	120	120	120	120	235
F#6	121	121	121	121	121	240
G6	122	122	122	122	122	245
G#6	123	123	123	123	123	250
A6	124	124	124	124	124	255
A#6	125	125	125	125	125	260
B6	126	126	126	126	126	270
C7	127	127	127	127	127	280

Note:

X: No value available for this particular Edit Function on this key.

Resetting Value:

	Tune	Voice Vol	Layer Vol	Metro. Vol	Local	Channel	Tempo	Voice Select	Auto Power Off
Factory Default	0	127	100	100	ON	1	120	1(Grand Piano)	OFF

Specifications

Keyboard:	88 weighted velocity-sensitive keys
Voice:	12
Polyphony:	32
Voice Control:	Layer, Layer level, Keyboard sensitivity, Tuning
Metronome:	On/off, Level, Time signature
Pedal Response:	Sustain
Effect:	Reverb, Chorus, Bass EQ, Treble EQ
Demo Songs:	12
MIDI & Audio:	Channels 1-16, Local On/Off; USB Audio
Connectors:	USB To Host, Pedal, Line Out L/R, Phones, DC Power
Speakers:	YDT713 10W/8ohm x 2 YD66 10W/8ohm x 2
Dimensions(W x D x H)	50 x 10.6X7.1 inches,1270mm x 270mm x 180 mm
Weight:	9Kg
Supplied Accessories:	Owner's Manual, Music Rest

10505795V1.0

Warranty

This product, except the exterior cosmetic parts, is warranted to the original purchaser to be free from defects in material and workmanship under normal use as follows:

1. For a period of one year from the date of purchase, Virgin Musical Instrument Company will pay the labor charges to repair the defective product. After this one year period, you must pay all labor charges.
2. In addition, Virgin Musical Instrument Company will supply, at no charge, new or rebuilt replacements for defective parts for a period of one year from the date of purchase.

In the event repairs are needed, the original purchaser should contact Virgin Musical Instrument Company, the parent company of Artesia Pianos, at **888-998-9848**. Virgin Musical Instrument Company will then repair the product or return it to the VMI distribution center for repairs. Upon completion of the repair, the unit will be returned to the music store, freight prepaid.

This warranty will not apply to this product if it has been misused, abused, or altered. Without limiting the foregoing, bending, dropping of unit, or visible cracks and/or scratches are presumed to be defects resulting from misuse or abuse.

This warranty is void if the product has been opened.

Neither this warranty nor any other warranty expressed or implied, including implied warranties of merchantable, shall extend beyond the warranty period.

No responsibility is assumed for any incidental or consequential damages.

Outside the US contact the original retailer where the product was purchased for additional warranty details.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Artesia

Virgin Musical Instrument Company Inc

P O Box 2908

La Mesa, CA 91943

PH: 619 244-0006

E-mail: info@virginmusicalinstruments.com

www.virginmusicalinstruments.com