

# AUDIO AND TELEMATICS GUIDE

CRÉATIVE TECHNOLOGIE

# On-line handbook

Select one of the following means of access to view your handbook on-line...

Find your handbook and the audio and telematic systems on the CITROËN website, under "MyCITROËN".

---

If the "MyCITROËN" function is not available on the CITROËN public website for your country, you can find your handbook at the following address:

<http://service.citroen.com/ddb/>

Select:

- > the language,
- > the vehicle, its body style,
- > the print edition of your handbook appropriate for the date of registration of your vehicle.


---

Referring to the handbook on-line also gives you access to the latest information available, easily identified by the bookmark, associated with this symbol:



# CITROËN Connect Radio

## Multimedia audio system - Applications - Bluetooth® telephone

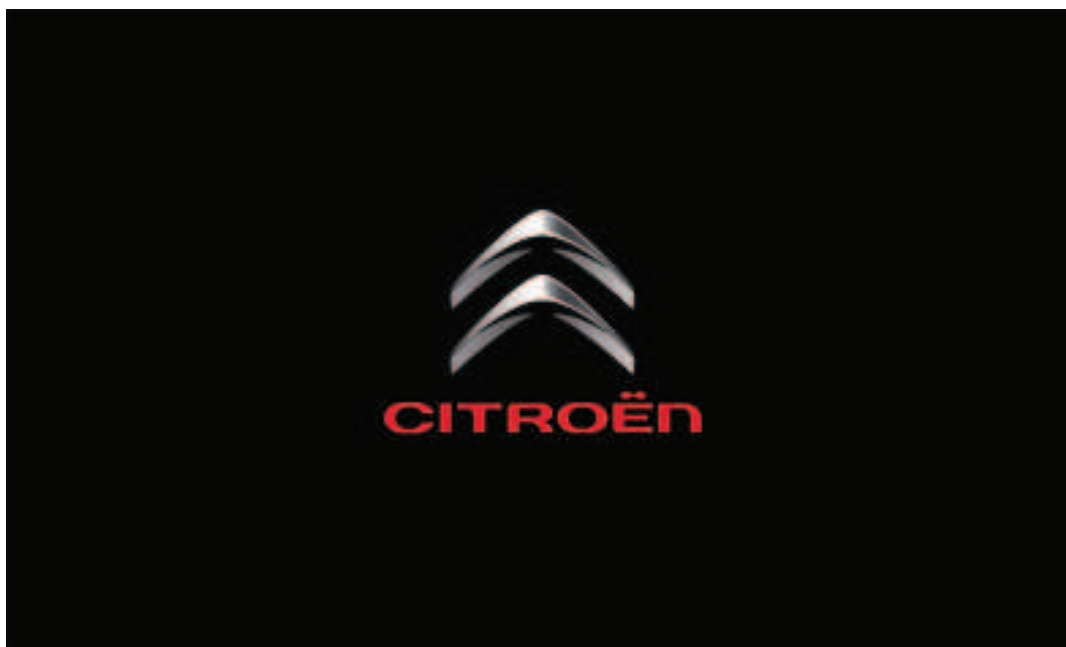

	Contents
First steps	96
Steering mounted controls - Type 1	98
Steering mounted controls - Type 2	99
Menus	100
Applications	102
Radio Media	106
Telephone	118
Settings	132
Frequently asked questions	143

**i** The different functions and settings described vary according to the version and configuration of your vehicle.

**!** As a safety measure and because it requires sustained attention by the driver, the pairing of a Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be done with the **vehicle stationary** and the ignition on.

**i** The system is protected in such a way that it will only operate in your vehicle. The display of the **Energy Economy Mode** message signals that a change to standby is imminent.

**i** The link below gives access to OSS (Open Source Software) codes for the system.  
<http://www.psa-peugeot-citroen.com/oss>

# First steps




With the engine running, a press mutes the sound.  
With the ignition off, a press turns the system on.



Volume.

Use the buttons either side of or below the touch screen for access to the menus, then press the virtual buttons in the touch screen. All of the touch areas of the screen are white. Press in the grey zone to go back a level or confirm. Press the back arrow to go back a level or confirm.

**!** The touch screen is of the "capacitive" type.  
To clean the screen, use a soft, non-abrasive cloth (spectacles cloth) with no additional product.  
Do not use sharp objects on the screen.  
Do not touch the screen with wet hands.

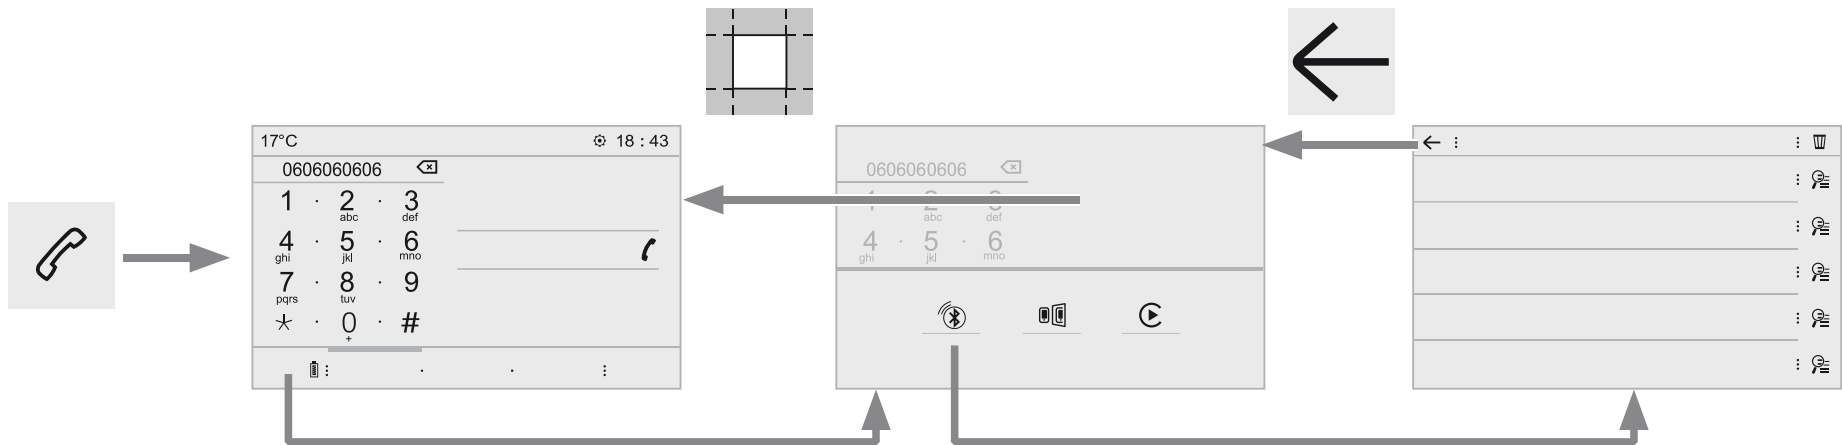

Certain information is displayed permanently in the upper band of the touch screen:

- Reminder of the air conditioning information, and direct access to the corresponding menu.
- Reminder of the Radio Media and Telephone menu information.
- Access to the Settings of the touch screen and digital instrument panel.

Select the audio source (depending on version):

- FM / DAB\* / AM\* stations.
- Telephone connected by Bluetooth\* and using Bluetooth\* audio streaming.
- CD player.
- USB memory stick.
- Media player connected to the auxiliary socket (Jack, cable not supplied).

**i** In the "Settings" menu you can create a profile for just one person or a group of people with common points, with the possibility of entering a multitude of settings (radio presets, audio settings, ambiences, ...); these settings are taken into account automatically.



**i** In very hot conditions, the volume may be limited to protect the system. It may go into standby (screen and sound off) for at least 5 minutes. The return to normal takes place when the temperature in the passenger compartment has dropped.

\* Depending on equipment.

## Steering mounted controls - Type 1



**Radio:**

Select the previous / next preset radio station.

Select the previous / next item in a menu or a list.

**Media:**

Select of the previous / next track

Select the previous / next item in a menu or a list.



**Radio:**

Short press: display the list of radio stations.

Long press: update the list.

 
**Media:**

Short press: display the list of folders.


Long press: display the sorting options.



Change audio source (Radio; USB; AUX (if a device is connected); CD; Streaming)




Confirm a selection.

 

Increase volume.



 Decrease volume.



Mute / Restore sound by simultaneously pressing the increase and decrease volume buttons.



## Steering mounted controls - Type 2



### Voice commands:

Short press, smartphone voice commands via the system.



Increase volume.



Decrease volume.



Mute/ Restore the sound.

Or

Mute by pressing the volume increase and decrease buttons simultaneously.

Restore the sound by pressing one of the two volume buttons.



**Media** (short press): change the multimedia source.

**Telephone** (short press): call.

**Call in progress** (short press): access to telephone menu.



**Telephone** (long press): reject an incoming call, end call, access to telephone menu.



**Radio** (rotate): previous / next preset.

**Media** (rotate): previous / next track, move in a list.

**Short press:** confirm a selection; other than selection, access to presets.



**Radio:** display the list of stations.

**Media:** display the list of tracks.


**Radio** (press and hold): update the list of stations received.

# Menus

According to version.




## Air conditioning

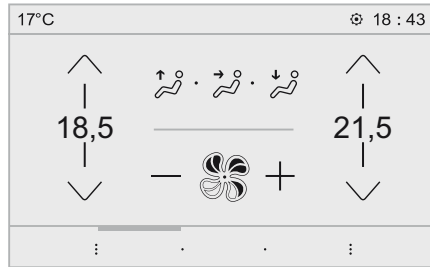


Manage the different temperature and air flow settings.




## Applications

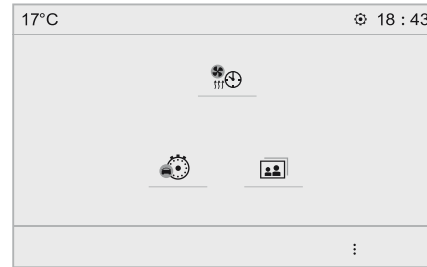

Access configurable equipment.

 


## Radio Media

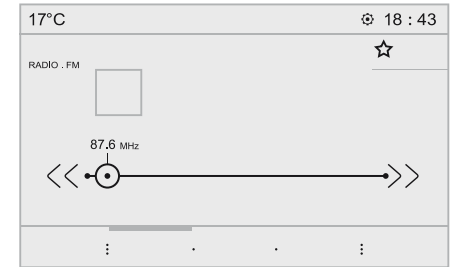

Select an audio source or radio station.



## Navigation

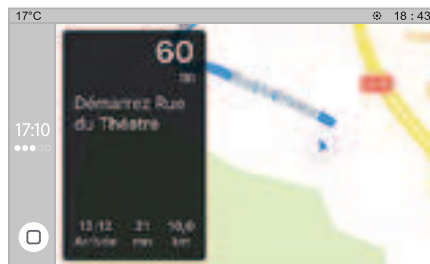

Configure the guidance and select your destination via MirrorLink™ or CarPlay®.




 **Telephone**



Connect a telephone by Bluetooth®.  
Operate certain applications on a smartphone connected via MirrorLink™ or CarPlay®.

 **Settings**

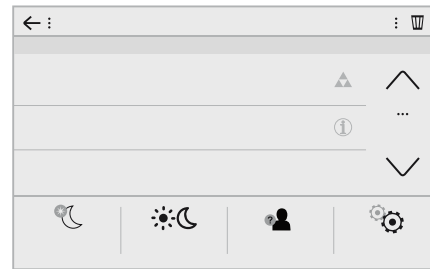

Configure a personal profile and/or configure the sound (balance, ambience, ...) and the display (language, units, date, time, ...).


 **Driving**









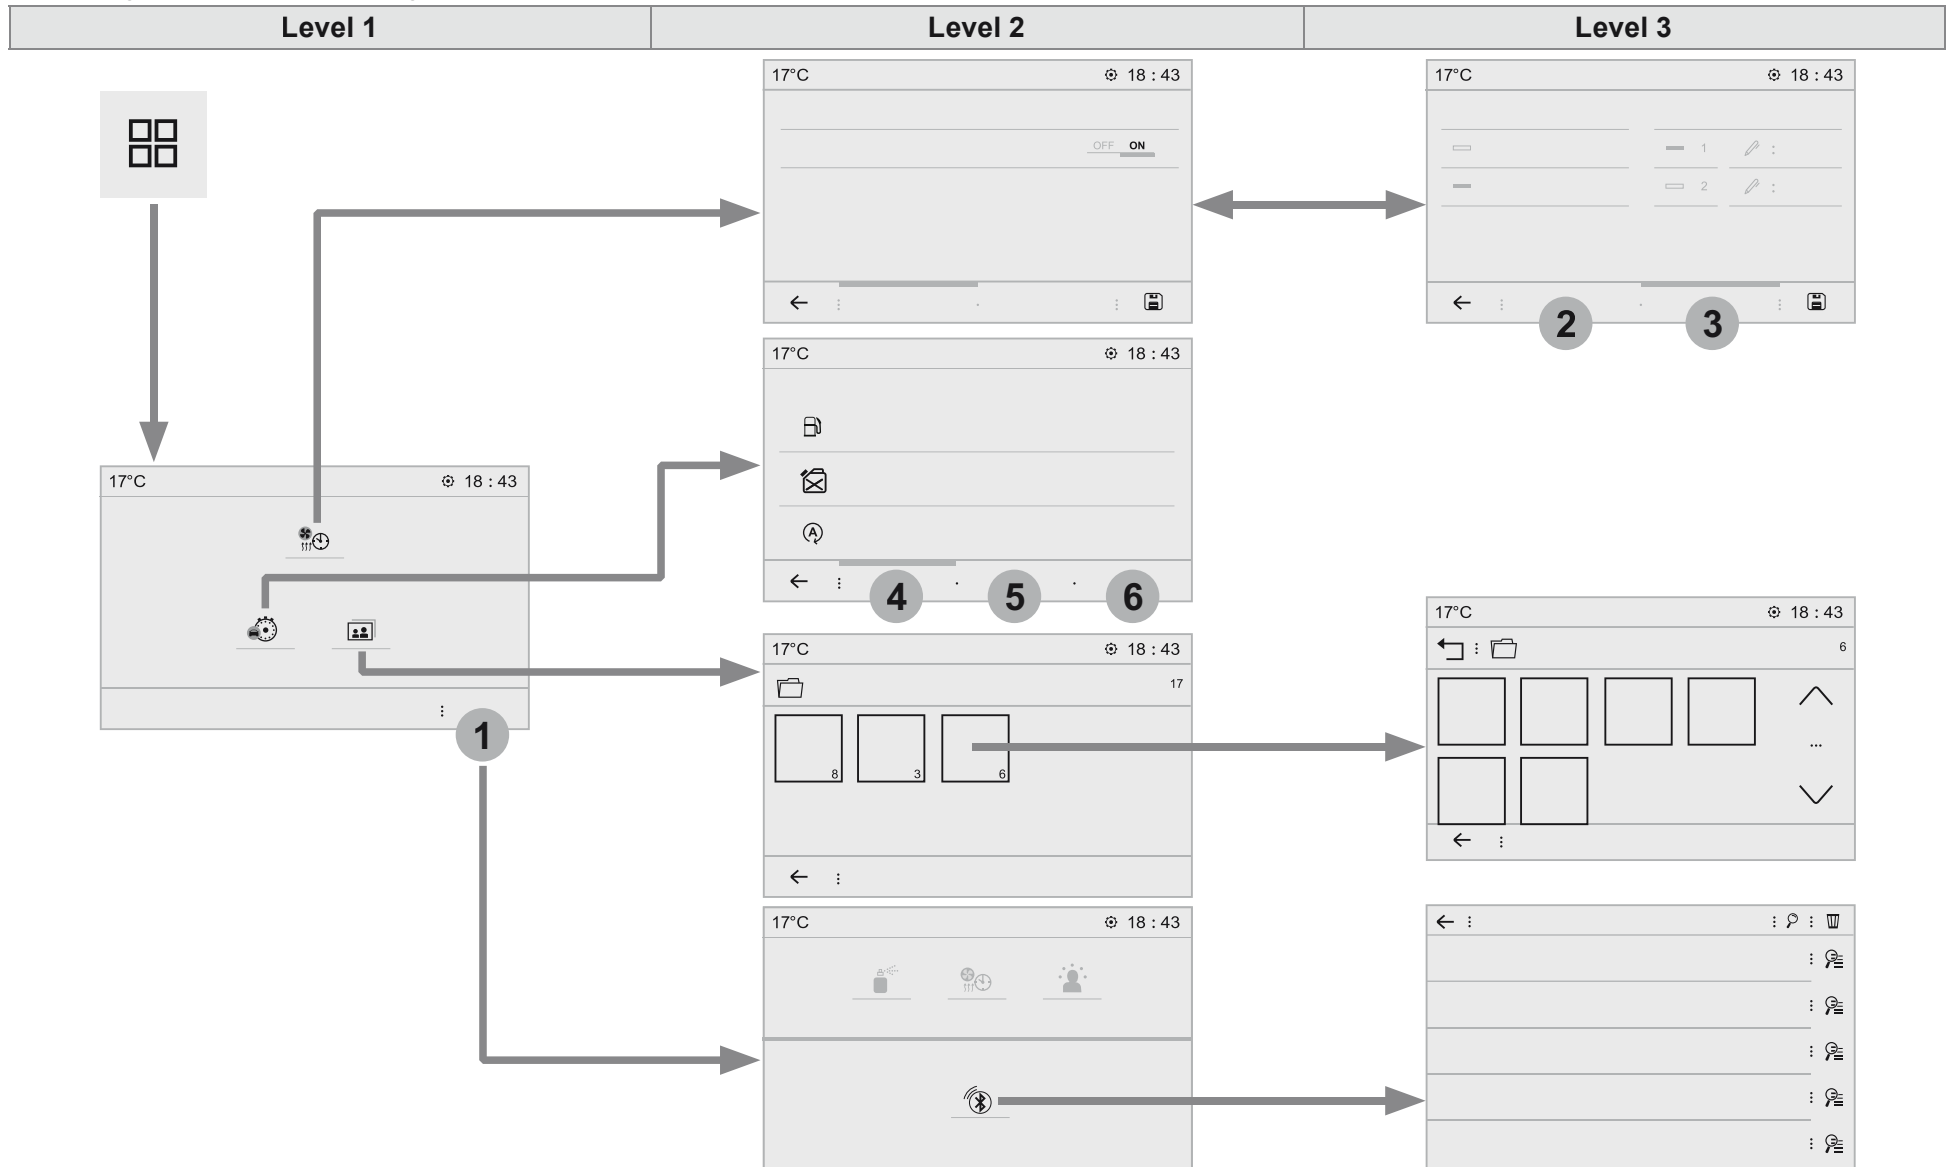
















Activate, deactivate or configure certain vehicle functions.

# Applications

According to version / according to equipment




Level 1		Level 2		Level 3		Comments
 	<b>Applications</b> ↓ <b>Temperature conditioning</b>	 <b>2 State</b>				Activate / deactivate the temperature conditioning.
		 <b>3 Settings</b>				Configure the pre-conditioning.
						Save the parameters.
						Confirm the settings.
 	<b>Applications</b> ↓ <b>Trip computer</b>	 <b>4 Instant</b>				System providing information about the current journey (range, consumption...).
		 <b>5 Trip 1</b>				
		 <b>6 Trip 2</b>				
						Go back to the Applications page.
 	<b>Applications</b> ↓ <b>Photos</b>	 <b>Photo gallery</b>	 <b>Photos</b>			Go to the photo gallery.
						Go back a level.
 	<b>Applications</b> ↓ <b>OPTIONS</b>	 <b>Bluetooth connection</b>	 <b>Search</b>			Start the search for a device to be connected.
			 <b>Delete</b>			Delete one or more devices.

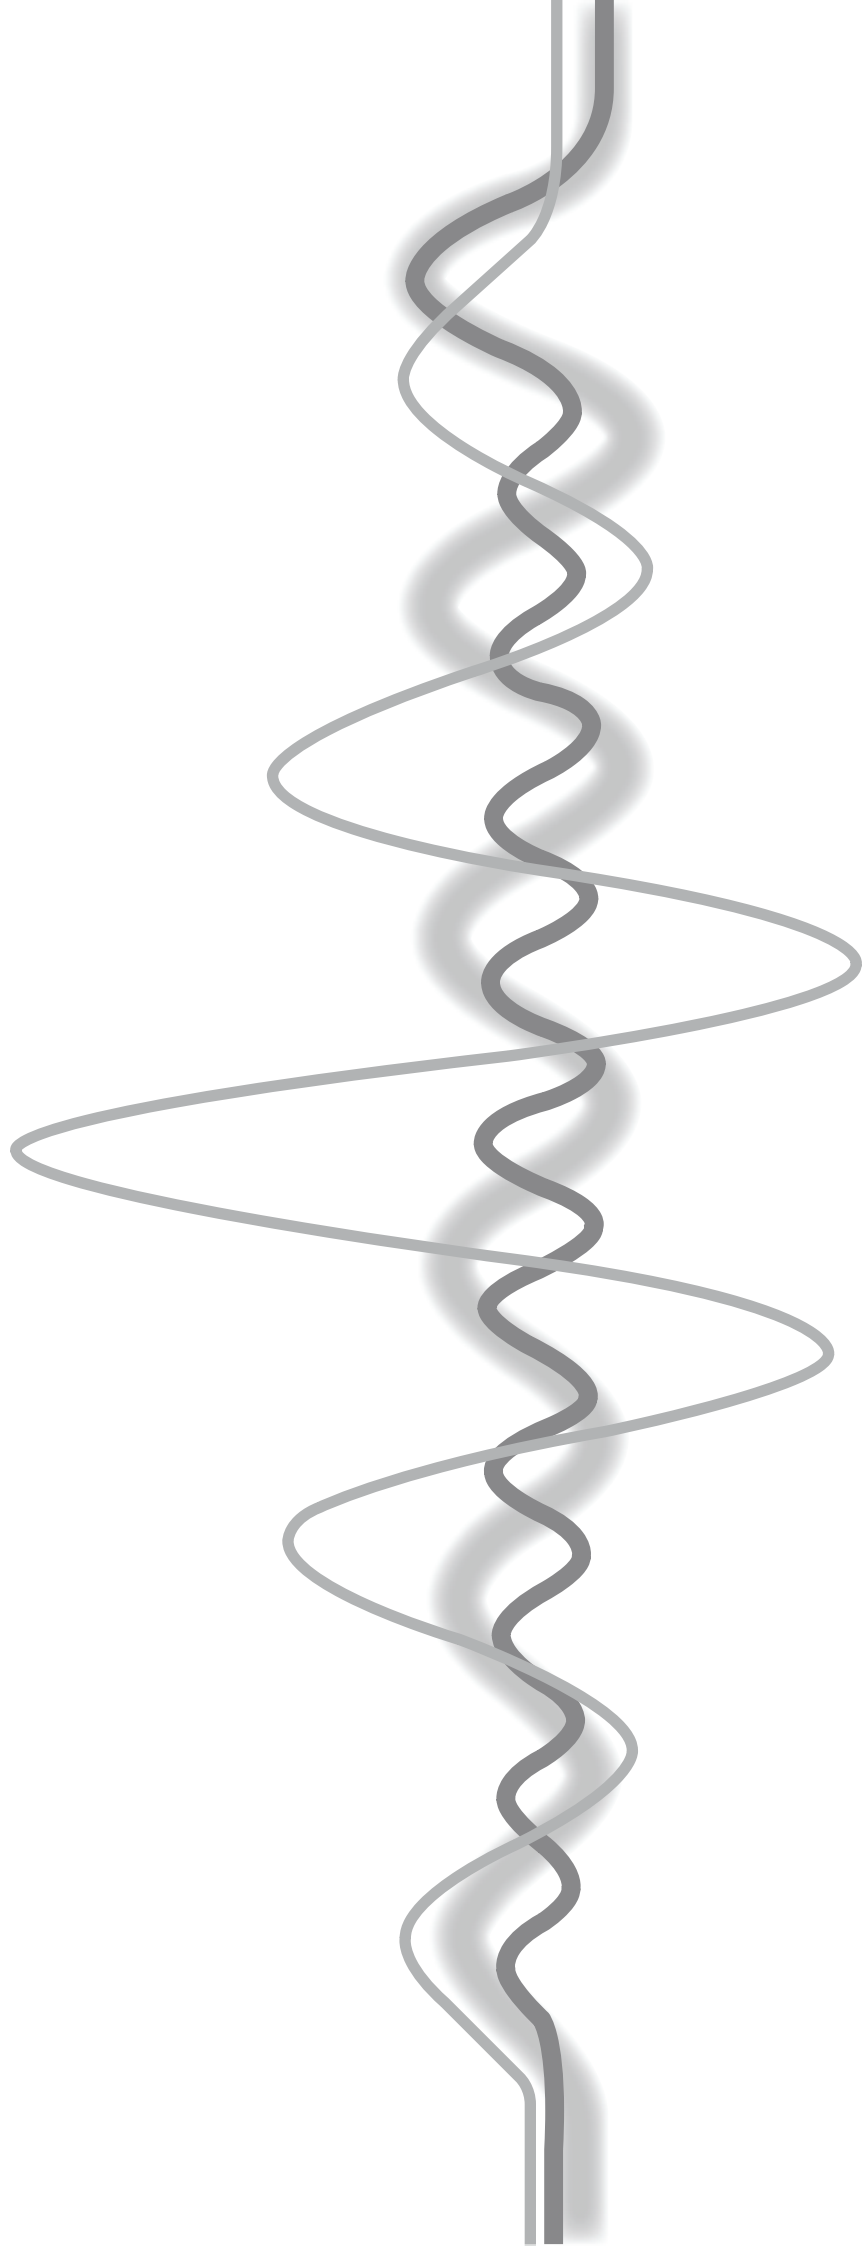

## Viewing photos

Insert a USB memory stick in the USB port.

 To protect the system, do not use a USB hub.

The system can read folders and image files in the formats: .tiff; .gif; .jpg/jpeg; .bmp; .png.



Press **Applications** to display the primary page.



Press "**Photos**".



Select a folder.



Select an image to view.




Press this button to display the details of the photo.





 




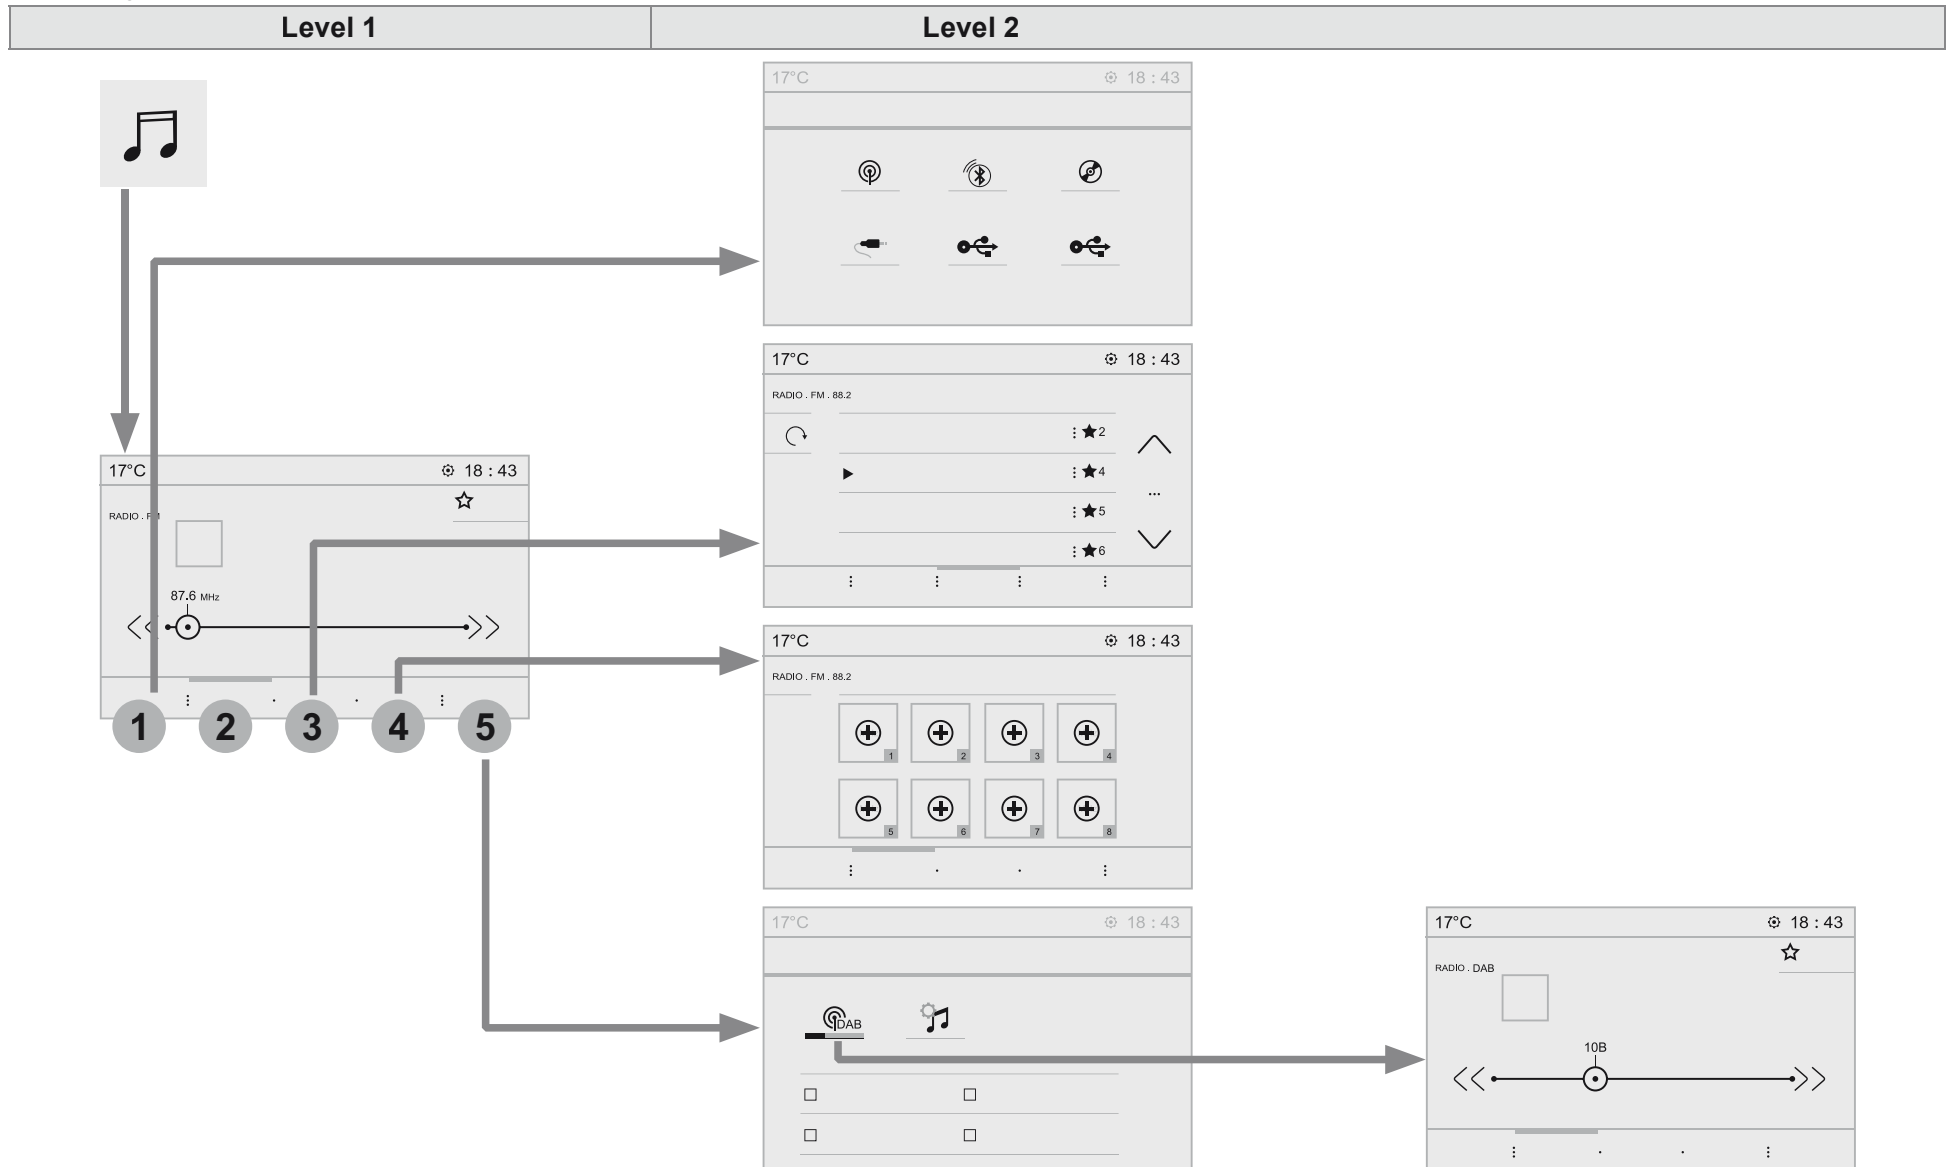










Press the back arrow to go back a level.

# Radio Media







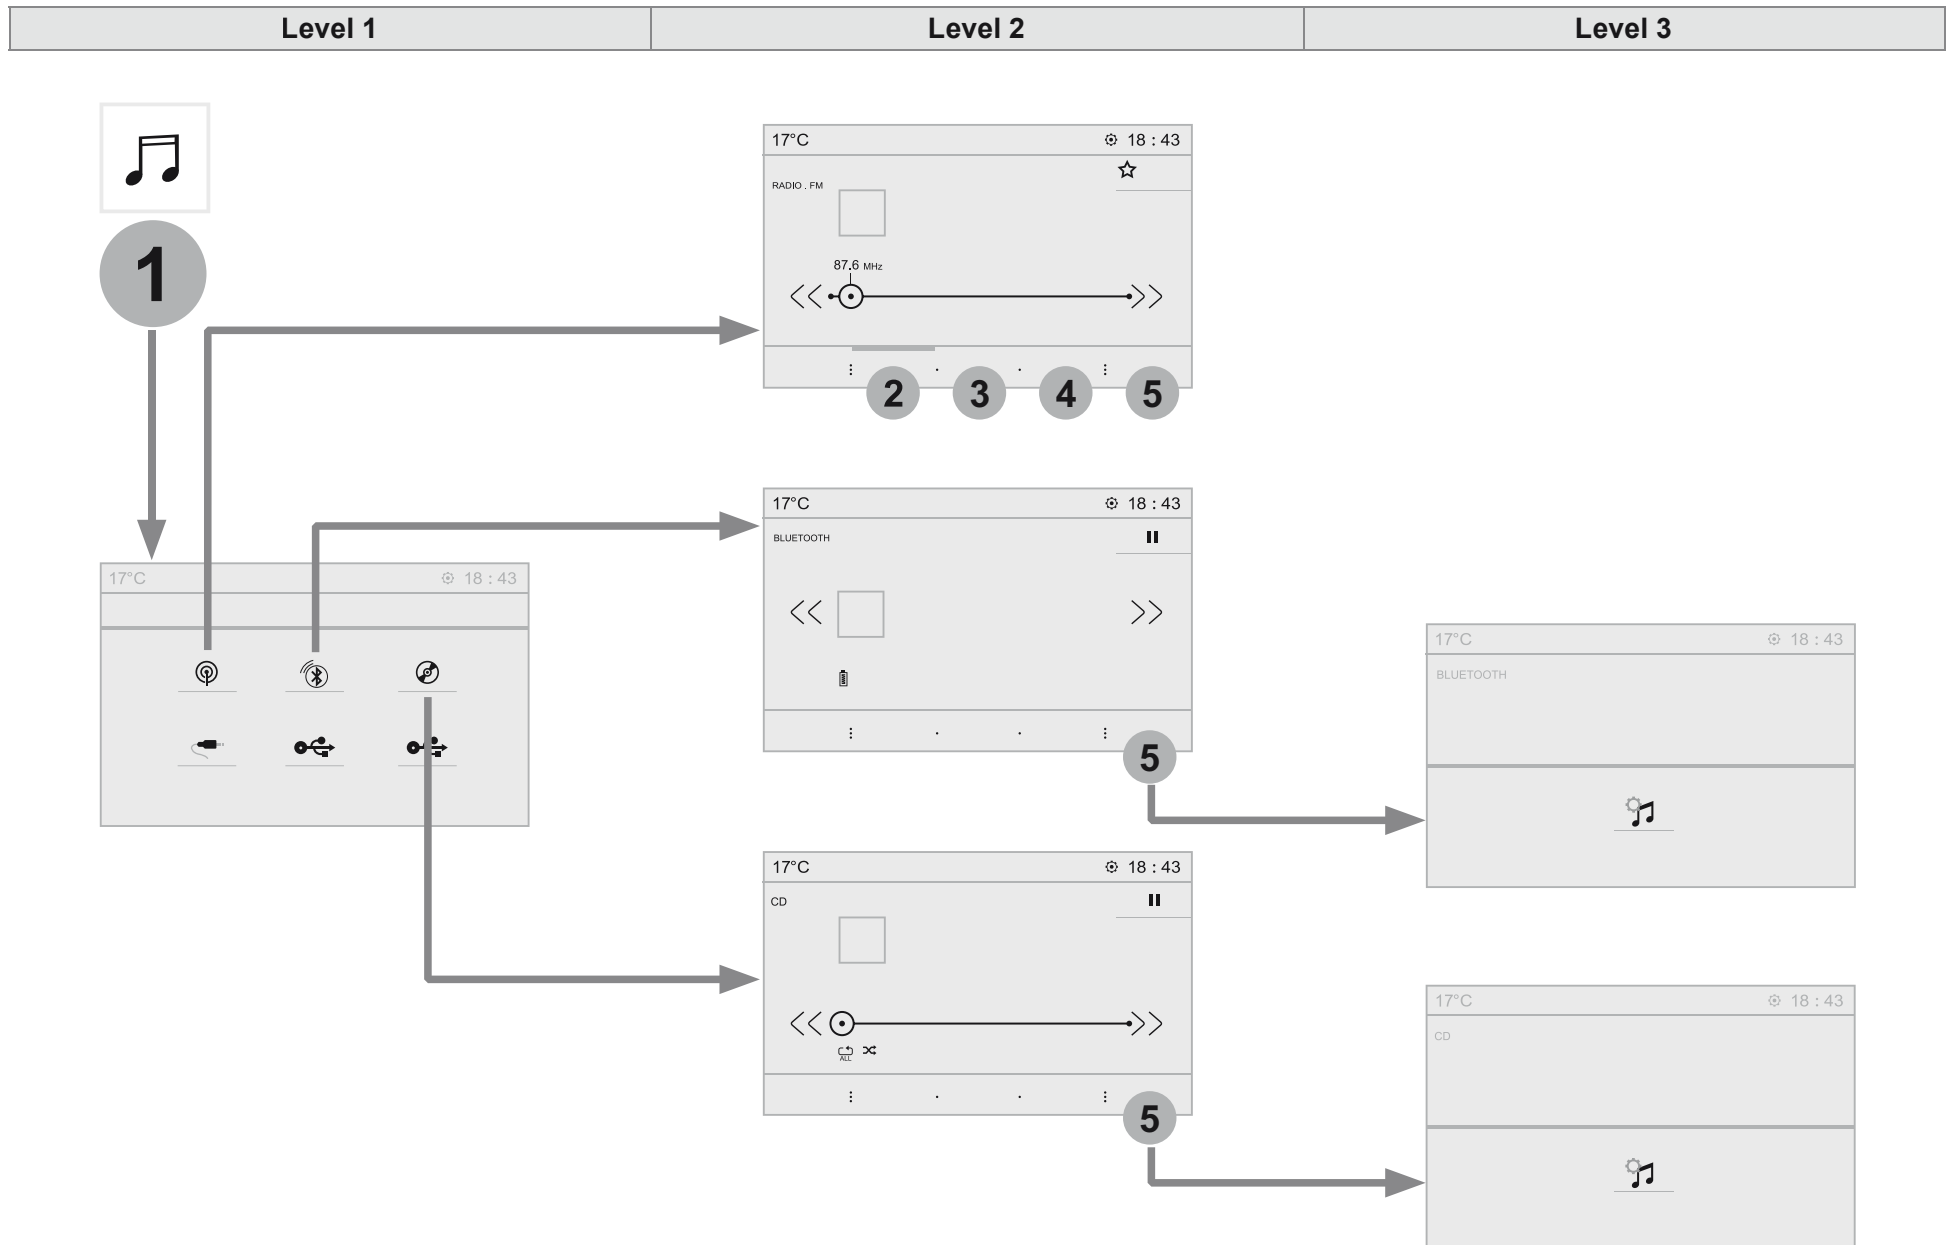



According to version









Level 1		Level 2		Comments
 <b>1</b>	Radio Media ↓ SOURCES	 Radio		Select change of source.
		 Bluetooth		
		 CD		
		 AUX		
		 USB iPod		
 <b>2</b>	Radio Media ↓ Frequency		FM / DAB / AM	Display the current radio station.
 <b>3</b>	Radio Media ↓ List			Update the list according to the stations received.
		 Preset		Make a short press to preset the station.
 <b>4</b>	Radio Media ↓ Preset			Select a preset station or preset a station.
 <b>5</b>	Radio Media ↓ OPTIONS	 AM band / DAB band / FM band		Press the Band button to change waveband.
		 Audio settings		Configure the audio settings.
		<input checked="" type="checkbox"/> News		Activate or deactivate the options.
		<input checked="" type="checkbox"/> TA		
		<input checked="" type="checkbox"/> RDS		
<input checked="" type="checkbox"/> FM-DAB Follow-up				
 MHz KHz	Radio Media ↓ 87.5 MHz			Enter a frequency of the FM and AM bands on the virtual keypad.



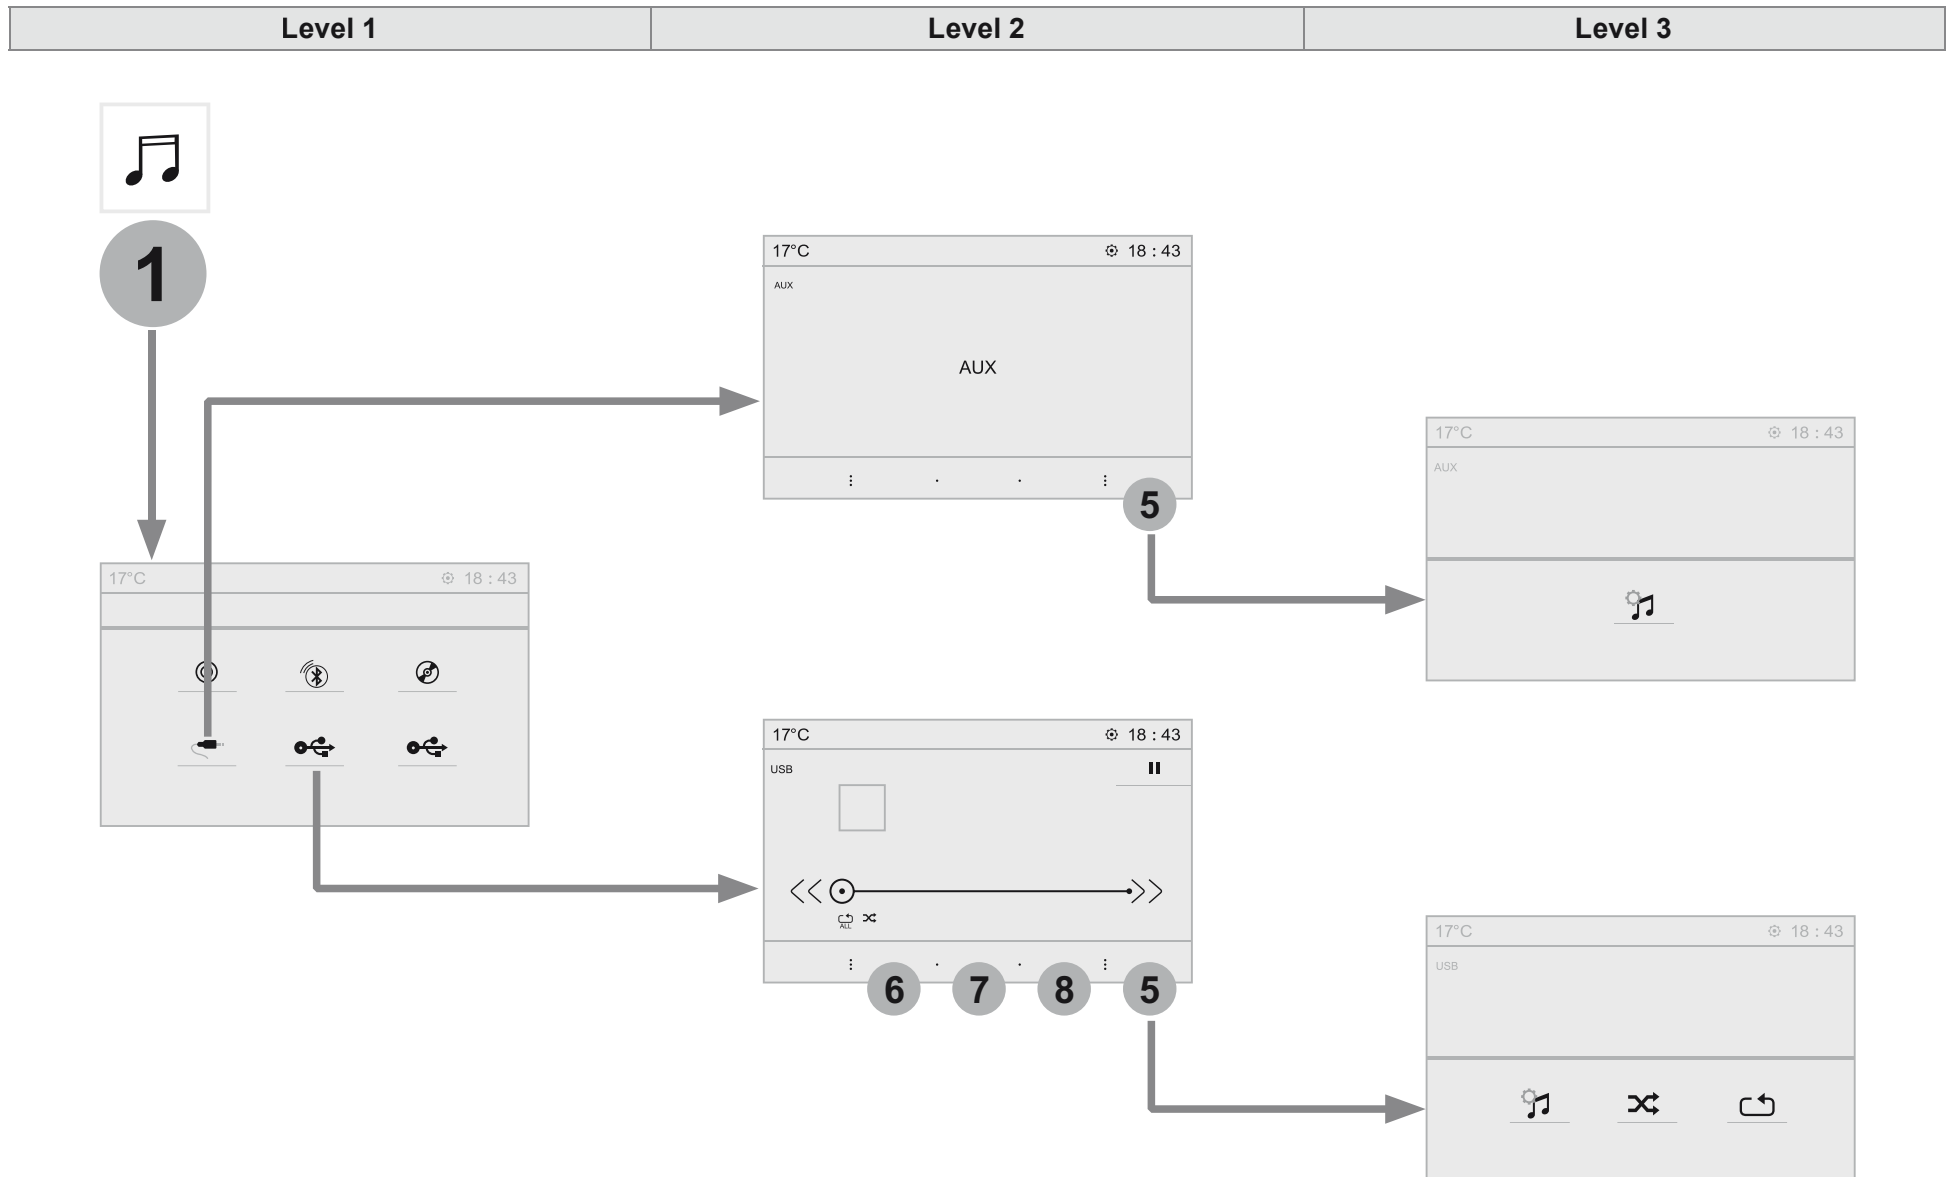


Level 1		Level 2		Level 3		Comments	
 <b>1</b> 	Radio Media ↓ SOURCES ↓ Radio	<b>2</b>	Frequency			Display the current radio station.	
		<b>3</b>	List			Display the list of stations received.	
		<b>4</b>	Preset			Select a preset station or preset a station.	
		<b>5</b>	OPTIONS		FM band / DAB band / AM band		Press the band button to change band.
					Audio settings		Configure the audio settings.
				<input checked="" type="checkbox"/>	News	Activate or deactivate the options.	
<input checked="" type="checkbox"/>	TA						
<input checked="" type="checkbox"/>	RDS						
<input checked="" type="checkbox"/>	FM-DAB Follow-up						
 <b>1</b> 	Radio Media ↓ SOURCES ↓ Bluetooth	<b>5</b>	OPTIONS		Audio settings	Configure the audio settings.	
 <b>1</b> 	Radio Media ↓ SOURCES ↓ CD					Display the details of the music being played.	
		<b>5</b>	OPTIONS		Audio settings	Configure the audio settings.	



Level 1		Level 2		Level 3		Comments
	Radio Media ↓ <b>SOURCES</b> ↓ AUX	<b>5</b>	<b>OPTIONS</b>		<b>Audio settings</b>	Configure the audio settings.
	Radio Media ↓ <b>SOURCES</b> ↓ USB	<b>6</b>	<b>Player</b>			Display the details of the music being played.
<b>1</b>		<b>7</b>	<b>Tracks list</b>			Display the current selection.
		<b>8</b>	<b>Library</b>			Display the music library.
		<b>5</b>	<b>OPTIONS</b>		<b>Audio settings</b>	Configure the audio settings.

## Radio
 
### Selecting a station




Press **Radio Media** to display the menu.




Press one of the buttons for an automatic search for radio stations.

 Or



Move the cursor for a manual search for frequencies up or down.

 Or



Press the frequency.



Enter the FM and AM waveband values using the virtual keypad.




Press **"OK"** to confirm.



Radio reception may be affected by the use of electrical equipment not approved by the Brand, such as a USB charger connected to the 12V socket. The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.

### Changing waveband

 


Press **Radio Media** to display the primary page.



Press the **"OPTIONS"** button to go to the secondary page.



 Press **"Band"** to change waveband.



Press in the grey zone to confirm.

### Preset a station

Select a radio station or frequency.



Make a short press on the star outline. If the star is solid, the radio station is already preset.

Or

Select a radio station or frequency.



Press **"Preset"**.



Make a long press on one of the buttons to preset the station.

## Activate/ Deactivate RDS



 
Press **Radio Media** to display the primary page.

5

Press the "**OPTIONS**" button to go to the secondary page.



Activate/deactivate "**RDS**".



Press in the grey zone to confirm.

**i** RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

## Display text information



The "Radio Text" function allows information transmitted by the radio station and related to the station or the song playing to be displayed.



 
Press **Radio Media** to display the primary page.

5

Press the "**OPTIONS**" button to go to the secondary page.



Activate / Deactivate "**NEWS**".



Press in the grey zone to confirm.

## Play TA messages



The TA (Traffic Announcement) function gives priority to TAalert messages. To operate, this function needs good reception of a radio station that carries this type of message. While traffic information is being broadcast, the current media is automatically interrupted so that the TA message can be heard. Normal play of the media previously playing is resumed at the end of the message.



 
Press **Radio Media** to display the primary page.

5

Press the "**OPTIONS**" button to go to the secondary page.




Activate / Deactivate "**TA**".



Press in the grey zone to confirm.

## Audio settings

 


Press **Radio Media** to display the primary page.




Press the "**OPTIONS**" button to go to the secondary page.



 Press "**Audio settings**".



 Select the "**Tone**" or "**Balance**" or "**Sound**" or "**Ringtones**" tab to configure the audio settings.



Press the back arrow to confirm.

**i** On the "**Tone**" tab, the **Ambience** audio settings and **Bass**, **Medium** and **Treble** are different and independent for each audio source.

On the "**Balance**" tab, the **All passengers**, **Driver** and **Front only** settings are common to all sources.

On the "**Sound**" tab, activate or deactivate "**Volume linked to speed**", "**Auxiliary input**" and "**Touch tones**".

**!** The sound distribution (or spatialisation with the Arkamys® system) is audio processing that allows the quality of the sound to be adapted according to the number of passengers in the vehicle.

**i** On-board audio: Arkamys® Sound Staging optimises the distribution of sound in the passenger compartment.

## DAB radio (Digital Audio Broadcasting)

### Terrestrial Digital Radio

**!** Digital radio provides higher quality reception.  
The different multiplexes offer a choice of radio stations arranged in alphabetical order.



 
Press **Radio Media** to display the primary page.

**5**

Press the **"OPTIONS"** button to go to the secondary page.



Press **"Band"** to select **"DAB band"**.



Press in the grey zone to confirm.

### FM-DAB Follow-up

**i** "DAB" does not cover 100% of the territory.  
When the digital radio signal is poor, the "FM-DAB Follow-up" allows you to continue listening to the same station, by automatically switching to the corresponding "FM" analogue station (if there is one).



 
Press **Radio Media** to display the primary page.

**5**

Press the **"OPTIONS"** button to go to the secondary page.



Activate / Deactivate **"FM-DAB Follow-up"**.




Press in the grey zone to confirm.

**i** If the "FM-DAB Follow-up" is activated, there is a difference of a few seconds when the system switches to "FM" analogue radio with sometimes a variation in volume.  
Once the digital signal is restored, the system automatically changes back to "DAB".

**!** If the "DAB" station being listened to is not available on "FM", or if the "FM-DAB Follow-up" is not activated, the sound will cut out while the digital signal is too weak.

## Media

### USB port

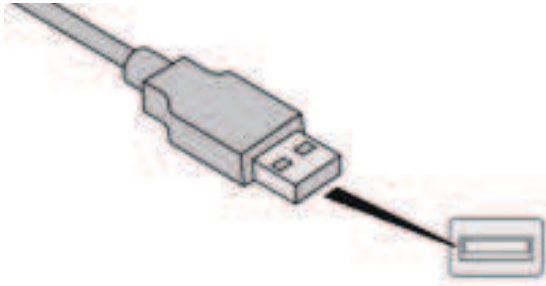

Insert the USB memory stick in the USB port or connect the USB device to the USB port using a suitable cable (not supplied).

**!** To protect the system, do not use a USB hub.

The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time.

The playlists are updated every time the ignition is switched off or connection of a USB memory stick. The lists are memorised: if they are not modified, the subsequent loading time will be shorter.

### Auxiliary socket (AUX)



 
This source is only available if "Auxiliary input" has been checked in the audio settings.

Connect the portable device (MP3 player...) to the auxiliary Jack socket using an audio cable (not supplied).

First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.

Display and management of the controls are via the portable device.

### Selecting the source



Press **Radio Media** to display the primary page.



Press the "**SOURCES**" button.

Choose the source.

### Bluetooth Streaming®

Streaming allows you to listen to music from your telephone.

The Bluetooth profile must be activated. First adjust the volume on your portable device (to a high level).

Then adjust the volume of your system.

If play does not start automatically, it may be necessary to start the audio playback from the smartphone.

Control is from the portable device or by using the system's touch buttons.

**!** Once connected in Streaming mode, the smartphone is considered to be a media source.



## Connecting Apple® players

Connect the Apple® player to the USB port using a suitable cable (not supplied). Play starts automatically.

Control is via the audio system.

**i** The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts), you can also use a classification structured in the form of a library.

The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

The version of software in the audio system may not be compatible with the generation of your Apple® player.

## Information and advice

**!** The system supports USB Mass Storage devices, BlackBerry® devices or Apple® players via USB ports. The adaptor cable is not supplied. Control of the peripheral device is with the audio system controls. Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied) or via Bluetooth streaming, depending on compatibility.

**!** To protect the system, do not use a USB hub.

The audio equipment will only play audio files with ".wav, .wma, .aac, .ogg and .mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps. It also supports VBR (Variable Bit Rate) mode. No other type of file (.mp4, ...) can be played. ".wma" files must be of the standard wma 9 type. The sampling rates supported are 11, 22, 44 and 48 KHz.

It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ù) to avoid any playing and displaying problems.


Use only USB memory sticks formatted FAT 32 (file allocation table).









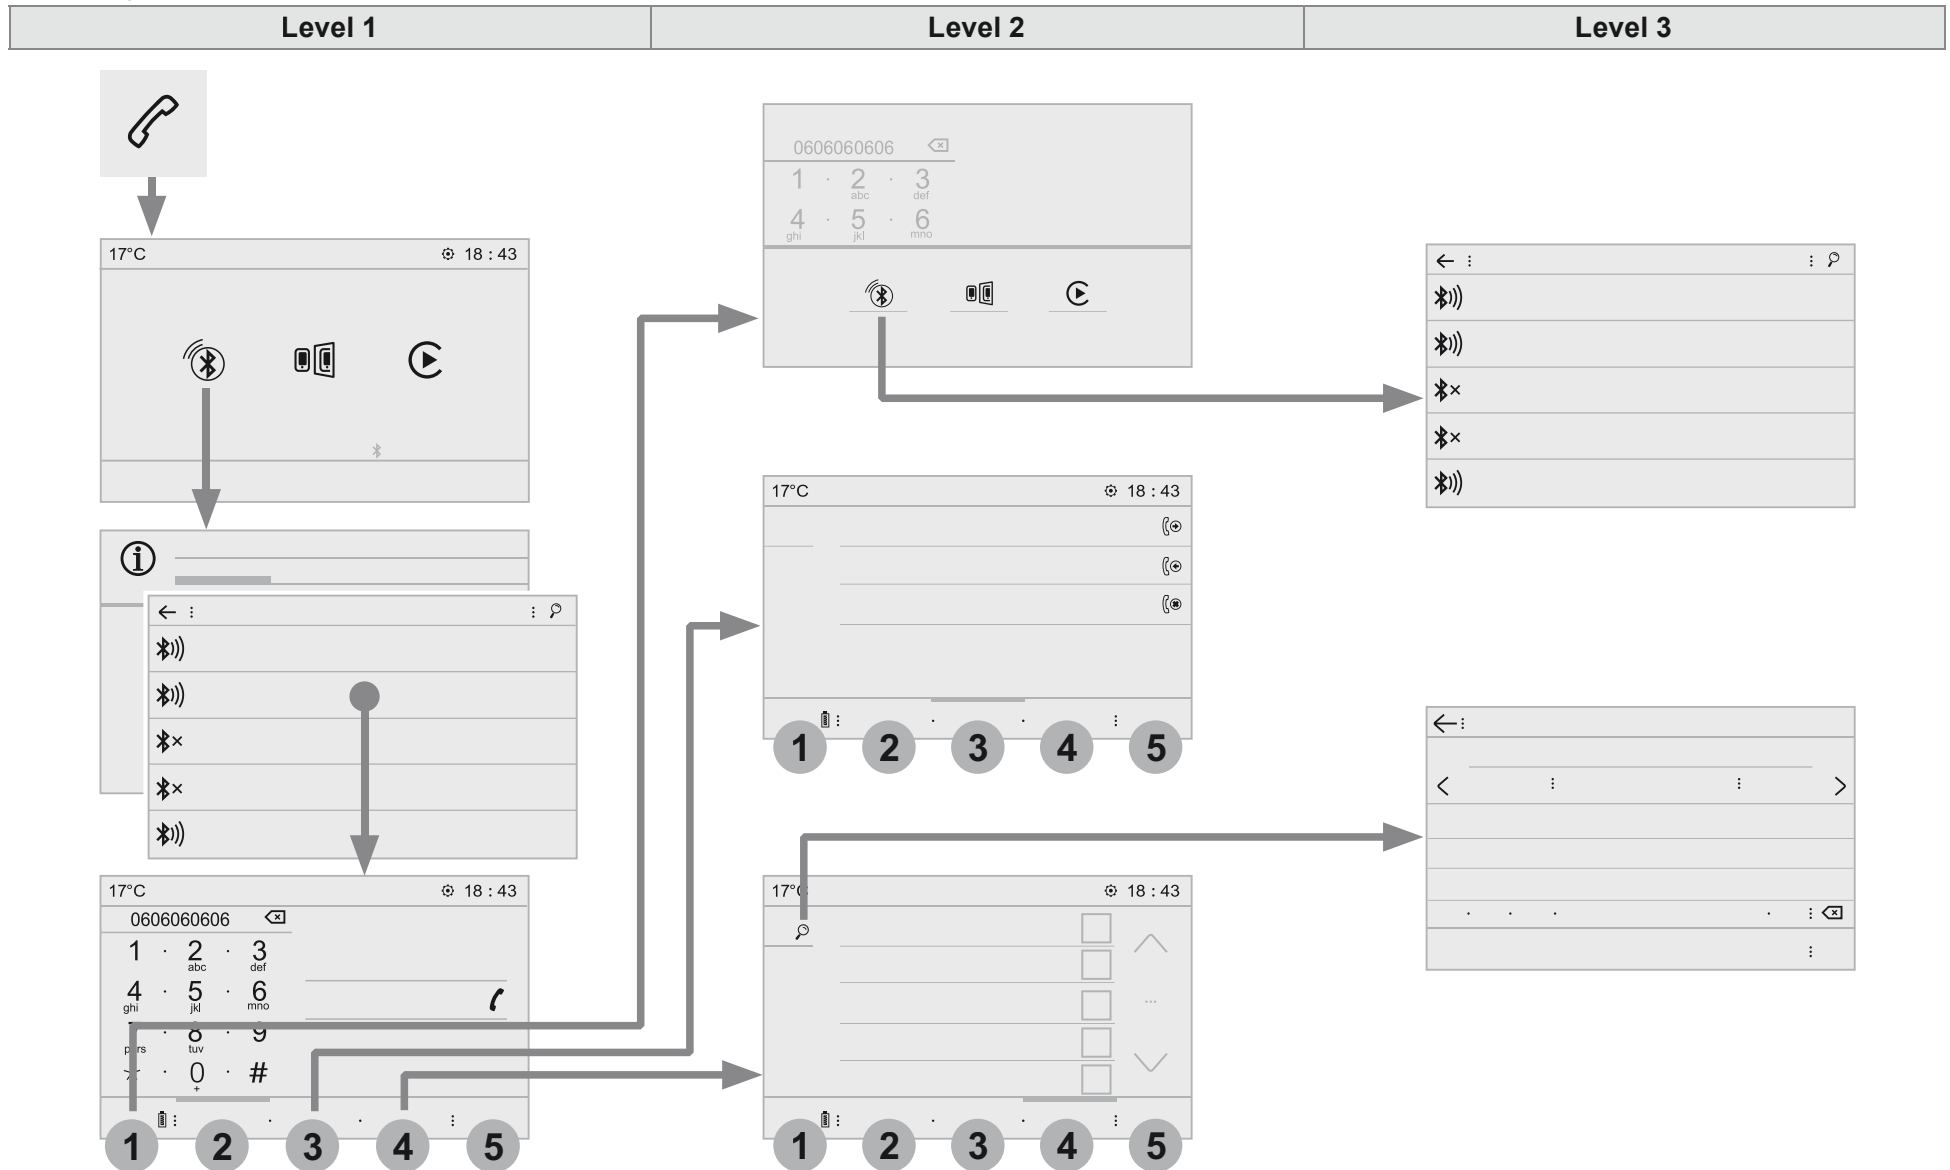











**i** It is recommended that the original USB cable for the portable device is used.




In order to be able to play a burned CDR or CDRW, select standards ISO 9660 level 1, 2 or Joliet if possible when burning the CD. If the disc is burned in another format, it may not be played correctly. It is recommended that the same burning standard is always used on an individual disc, with the lowest speed possible (4x maximum) for the best acoustic quality. In the particular case of a multi-session CD, the Joliet standard is recommended.







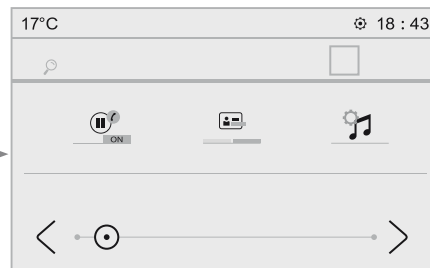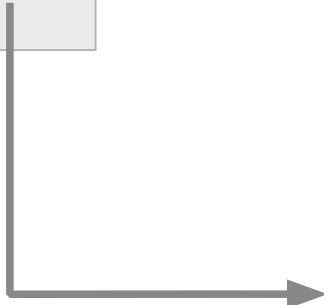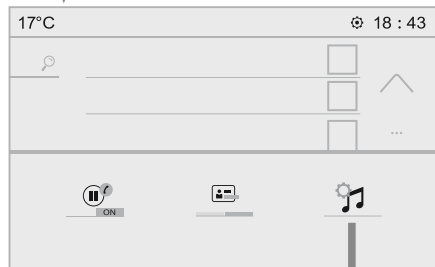


# Telephone

According to version




Level 1		Level 2		Level 3		Comments
  <b>1</b>	Telephone ↓ Bluetooth search ↓ PHONE		Bluetooth connection		Search	Start the search for a device to be connected.
					Delete	Delete one or more devices.
			MirrorLink			Open the MirrorLink function.
			CarPlay			Open the CarPlay function.
  <b>2</b>	Telephone ↓ Bluetooth search ↓ Keypad					Enter a telephone number.
  <b>3</b>	Telephone ↓ Bluetooth search ↓ Recent calls		All			View the calls according to the presentation selected. Select a contact to make the call.
			Outgoing			
			Missed			
			Incoming			
  <b>4</b>	Telephone ↓ Bluetooth search ↓ Contacts		Search		Confirm	Search for a contact in the contacts directory.
			Telephone			Go to the details of the contact sheet.



Level 1		Level 2		Comments
 <b>5</b> 	<p>Telephone</p> <p>↓</p> <p>OPTIONS</p> <p>↓</p> <p>On hold (auto)</p>		<p>ON - OFF</p>	<p>Activate or deactivate the automatic placing on hold of the current conversation.</p>
 <b>5</b> 	<p>Telephone</p> <p>↓</p> <p>OPTIONS</p> <p>↓</p> <p>Sort contacts by name</p> <p>Sort contacts by first name</p>			<p>Sort the contacts by Surname-first name or First name-surname.</p>
 <b>5</b> 	<p>Telephone</p> <p>↓</p> <p>OPTIONS</p> <p>↓</p> <p>Ring volume</p>			<p>Adjust the volume of the ringtone.</p>

# MirrorLink™ smartphone connection

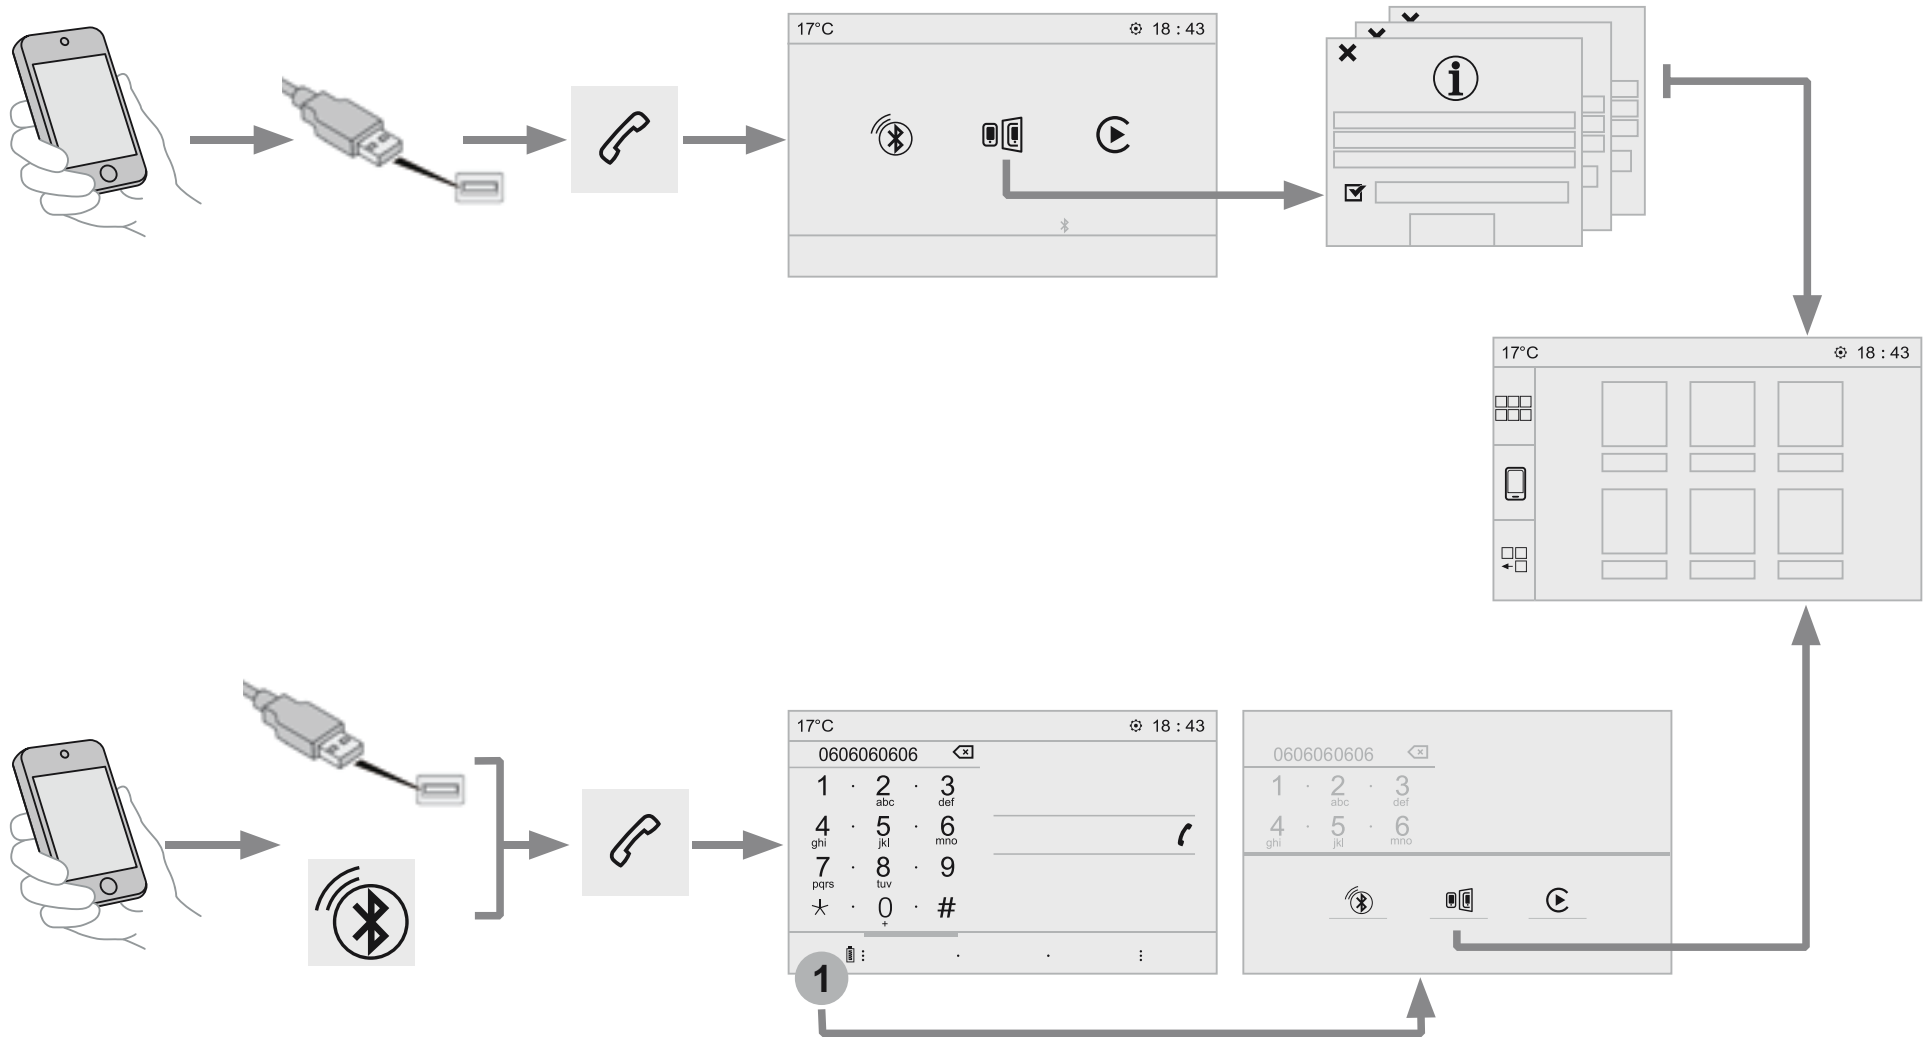

**!** As a safety measure and because it requires the sustained attention of the driver, using a smartphone when driving is prohibited. Operation must be with the **vehicle stationary**.

**i** The synchronisation of a smartphone allows applications on a smartphone that are adapted to the MirrorLink™ technology to be displayed in the vehicle's screen. The principles and standards are constantly evolving. For the communication process between the smartphone and the system to work correctly, the smartphone must be unlocked; **update the operating system of your smartphone as well as the date and time in the smartphone and the system**. For the list of eligible smartphones, connect to the Brand's internet website in your country.

**!** As a safety measure, applications can only be viewed with the vehicle stationary; display is interrupted once the vehicle is moving.

**i** The "MirrorLink™" function requires a compatible smartphone and applications.

### Telephone not connected by Bluetooth®



Connect the USB cable. The smartphone charges when connected by a USB cable.



From the system, press "**Telephone**" to display the primary page.



Press "**MirrorLink™**" to start the application in the system.

Depending on the smartphone, it may be necessary to activate the "**MirrorLink™**" function.

**OK**

During the procedure, several screen pages relating to certain functions are displayed. Accept to start and end the connection.



When connecting a smartphone to the system, it is recommended that "Bluetooth®" be started on the smartphone

### Telephone connected by Bluetooth®



From the system, press "**Telephone**" to display the primary page.



Press the "**PHONE**" button to display the secondary page.




Press "**MirrorLink™**" to start the application in the system.

Once connection is established, a page is displayed with the applications already downloaded to your smartphone and adapted to the MirrorLink™ technology.






Access to the different audio sources remains accessible in the margin of the MirrorLink™ display, using touch buttons in the upper bar. Access to the menus for the system is possible at any time using the dedicated buttons

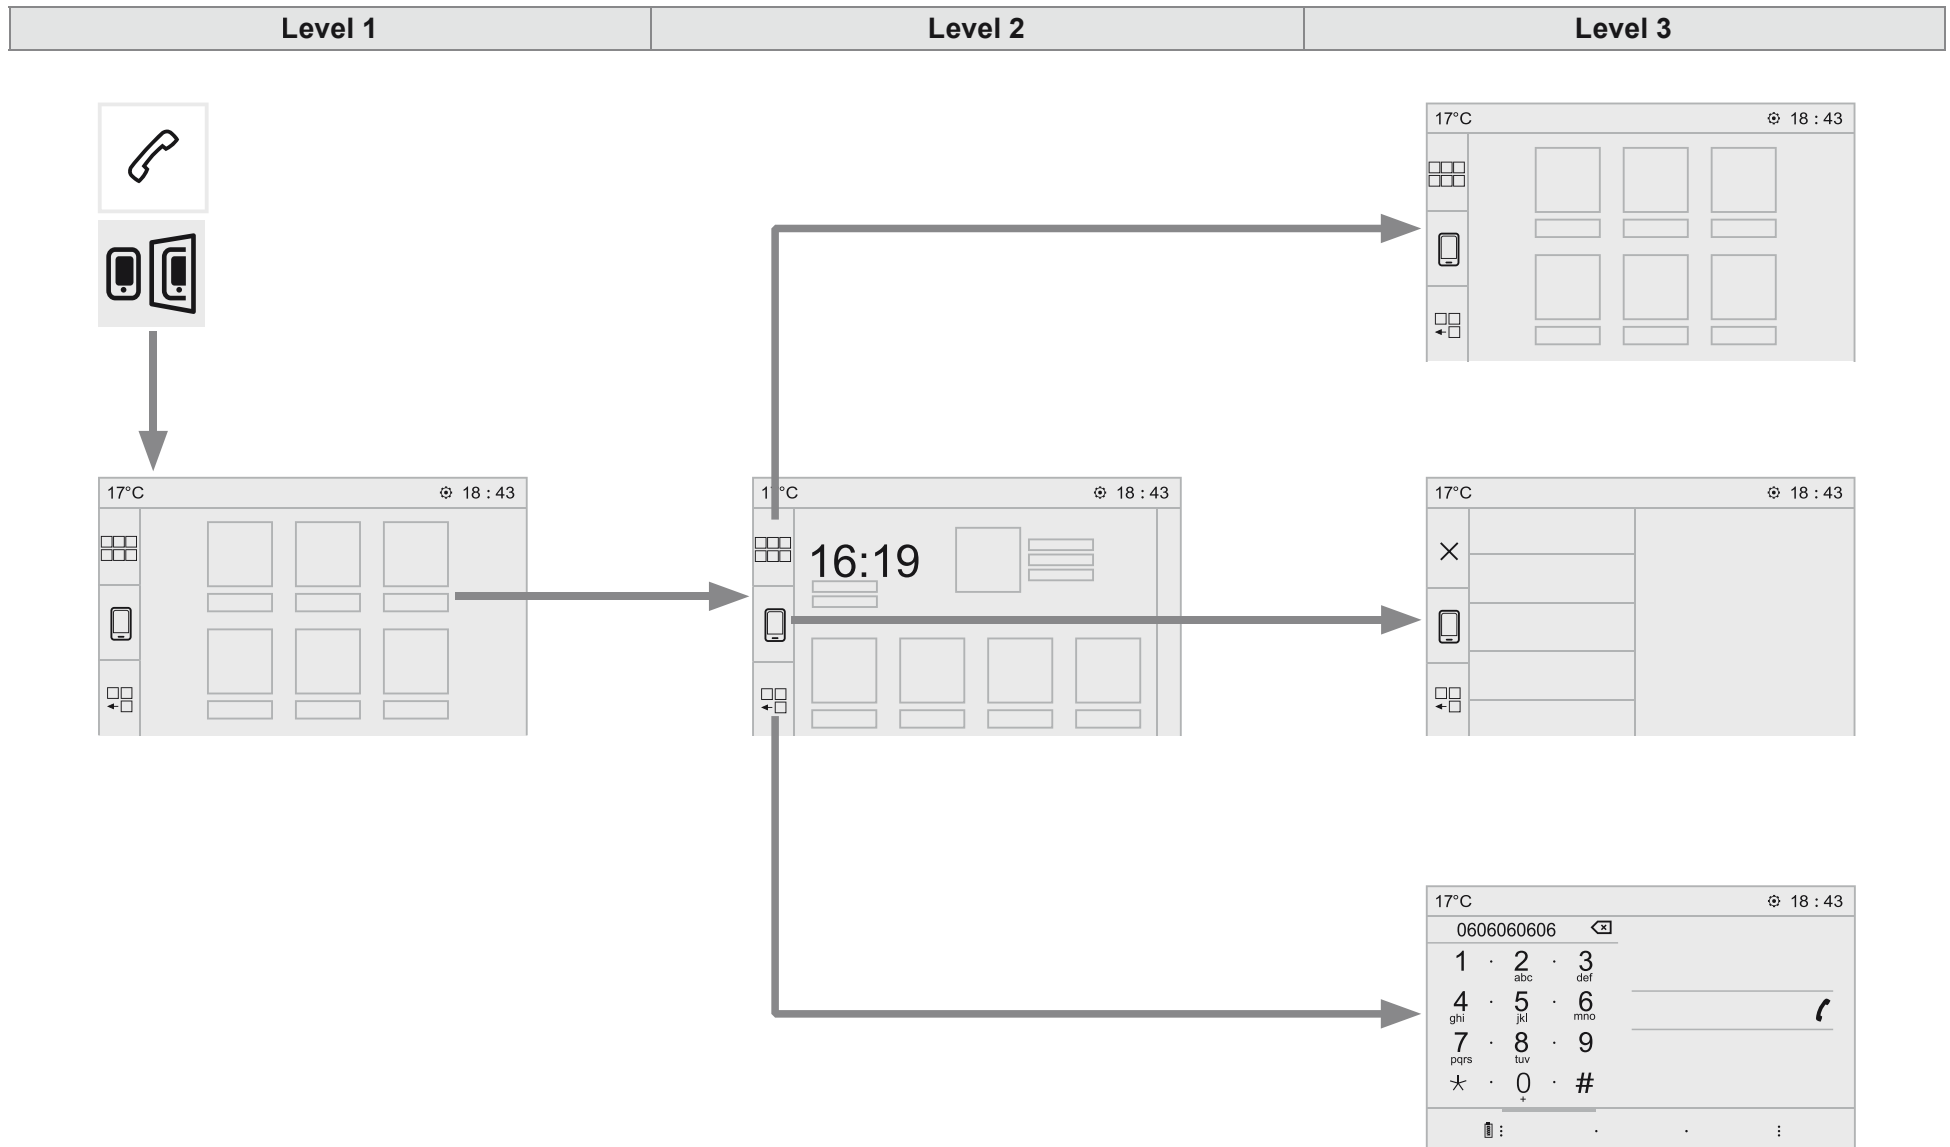**i**


There may be a wait for the availability of applications, depending on the quality of your network.





Level 1		Level 2		Level 3	Comments
 	<p><b>Telephone</b></p> <p>↓</p> <p><b>MirrorLink™</b></p>				Go to or return to the applications already downloaded to your smartphone and adapted to the MirrorLink™ technology.
					Go to a menu list depending on the application chosen. "Back": abandon the current operation, go up one level. "Home": go to or return to the "Car mode" page on your smartphone.
					Go to the primary page of the "Telephone" menu.

# CarPlay® smartphone connection

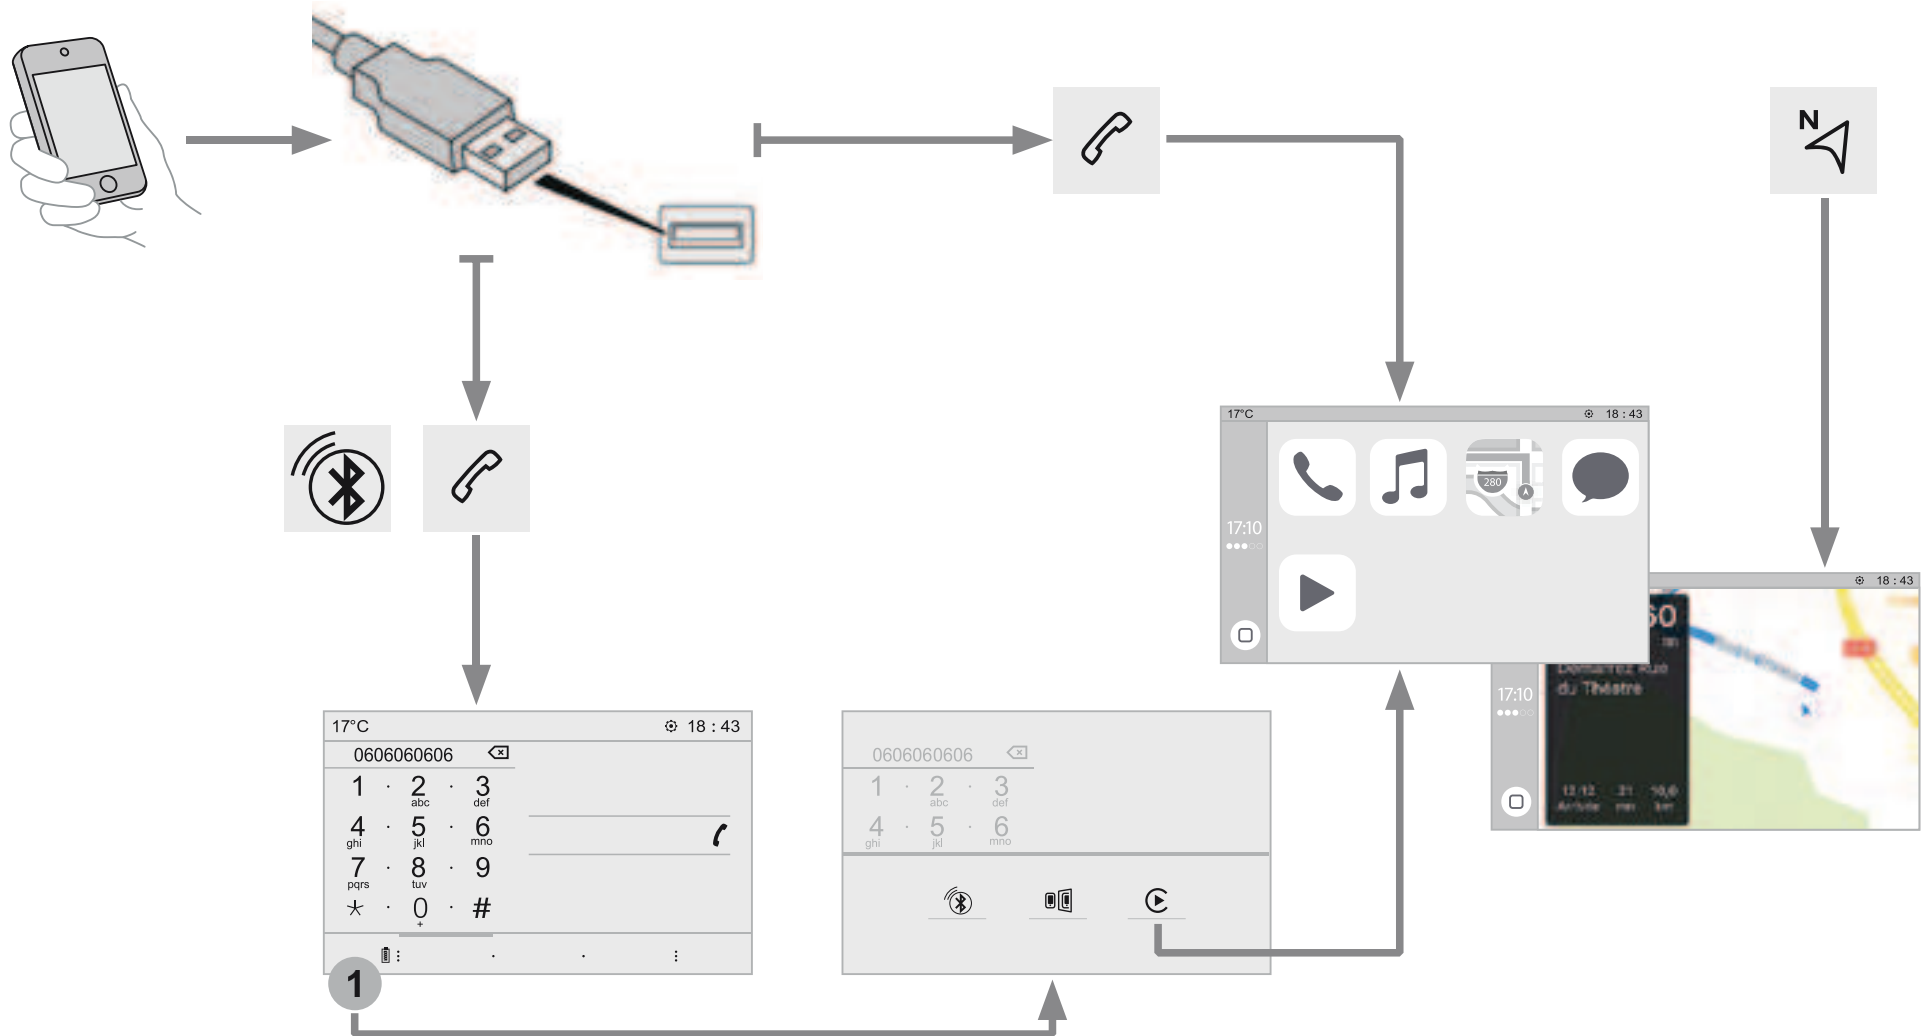


**!** As a safety measure and because it requires the sustained attention of the driver, using a smartphone when driving is prohibited. Operation must be with the **vehicle stationary**.

**i** The synchronisation of a smartphone allows applications on a smartphone that are adapted to the CarPlay® technology to be displayed in the vehicle's screen, having first activated the CarPlay® function in the smartphone. As the principles and standards are constantly changing, **it is recommended that you keep your smartphone's operating system updated**. For the list of eligible smartphones, go to the Brand's internet website in your country.



 Connect the USB cable. The smartphone charges when connected by a USB cable.



From the system, press **Telephone** to display the Carplay® interface.

Or



If the smartphone is already connected by Bluetooth®.



Connect the USB cable. The smartphone charges when connected by a USB cable.



From the system, press **Telephone** to display the primary page.



Press the "**PHONE**" button to go to the secondary page.



Press "**CarPlay**" to display the CarPlay® interface.

**i** On connecting the USB cable, the CarPlay® function deactivates the system's Bluetooth® mode.



You can go to the CarPlay® navigation at any time by pressing the system's **Navigation** button.

## Pairing a Bluetooth® telephone

**!** As a safety measure and because it requires sustained attention by the driver, the pairing of a Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be done with the **vehicle stationary** and the ignition on.

**i** Activate the Bluetooth function on the telephone and ensure that it is "visible to all" (telephone configuration).

### Procedure from the telephone



Select the name of the system in the list of devices detected.

In the system, accept the connection request from the telephone.

**!** To complete the pairing, whichever procedure used (from the telephone or from the system), ensure that the code is the same in the system and in the telephone.

### Procedure from the system



Press **Telephone** to display the primary page.



Press "**Bluetooth search**".  
The list of telephones detected is displayed.



Select the name of the chosen telephone in the list.

**i** If the pairing procedure fails, it is recommended that you deactivate and then reactivate the Bluetooth function in your telephone.

**i** Depending on the type of telephone, you may be asked to accept or not the transfer of your contacts and messages.

## Automatic reconnection

**i** On return to the vehicle, if the last telephone connected is present again, it is automatically recognised and within about 30 seconds of switching on the ignition, the connection is established without any action on your part (Bluetooth activated).

### To modify the connection profile:



Press **Telephone** to display the primary page.



Press the "**PHONE**" button to go to the secondary page.



 
Press "**Bluetooth connection**" to display the list of paired devices.



Press the "details" button of a paired device.

The system offers to connect the telephone with 3 profiles:

- "**Telephone**" (hands-free kit, telephone only),
- "**Streaming**" (wireless playing of the audio files on the telephone),
- "**Internet data**".



Select one or more profiles.



Press "**OK**" to confirm.



The ability of the system to connect with just one profile depends on the telephone. All three profiles may connect by default.



The services available depend on the network, the SIM card and the compatibility of the Bluetooth devices used. Check in your telephone's manual and with your service provider for the services available to you.



The profiles compatible with the system are HFP, OPP, PBAP, A2DP, AVRCP, MAP and PAN.

Go to the Brand's website for more information (compatibility, additional help, ...).

## Managing paired telephones

**i** This function allows the connection or disconnection of a peripheral device as well as the deletion of a pairing.



Press **Telephone** to display the primary page.



Press the "**PHONE**" button to go to the secondary page.



Press "**Bluetooth connection**" to display the list of paired peripheral devices.



Press on the name of the telephone chosen in the list to disconnect it. Press again to connect it.

## Deleting a telephone



Press the basket at the top right of the screen to display a basket alongside the telephone chosen.



Press the basket alongside the telephone chosen to delete it.

## Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.



Make a short press on the steering mounted **PHONE** button to accept an incoming call.

And



Make a long press



on the steering mounted **PHONE** button to reject the call.

Or



Press "**End call**".

## Making a call



Using the telephone is not recommended while driving. Park the vehicle. Make the call using the steering mounted controls.

## Calling a new number



Press **Telephone** to display the primary page.



Enter the phone number using the digital keypad.



Press "**Call**" to start the call.

## Calling a contact



Press **Telephone** to display the primary page.



Or make a long press



on the steering mounted **PHONE** button.



Press "**Contacts**".

Select the desired contact from the list offered.



Press "**Call**".

## Calling a recently used number



Press **Telephone** to display the primary page.

Or



Make a long press



on the steering mounted button.



Press "**Recent calls**".

Select the desired contact from the list offered.



It is always possible to make a call directly from the telephone; as a safety measure, first park the vehicle.

## Setting the ringtone



 
Press **Telephone** to display the primary page.



Press the "**OPTIONS**" button to go to the secondary page.




Press "**Ring volume**" to display the volume bar.





 




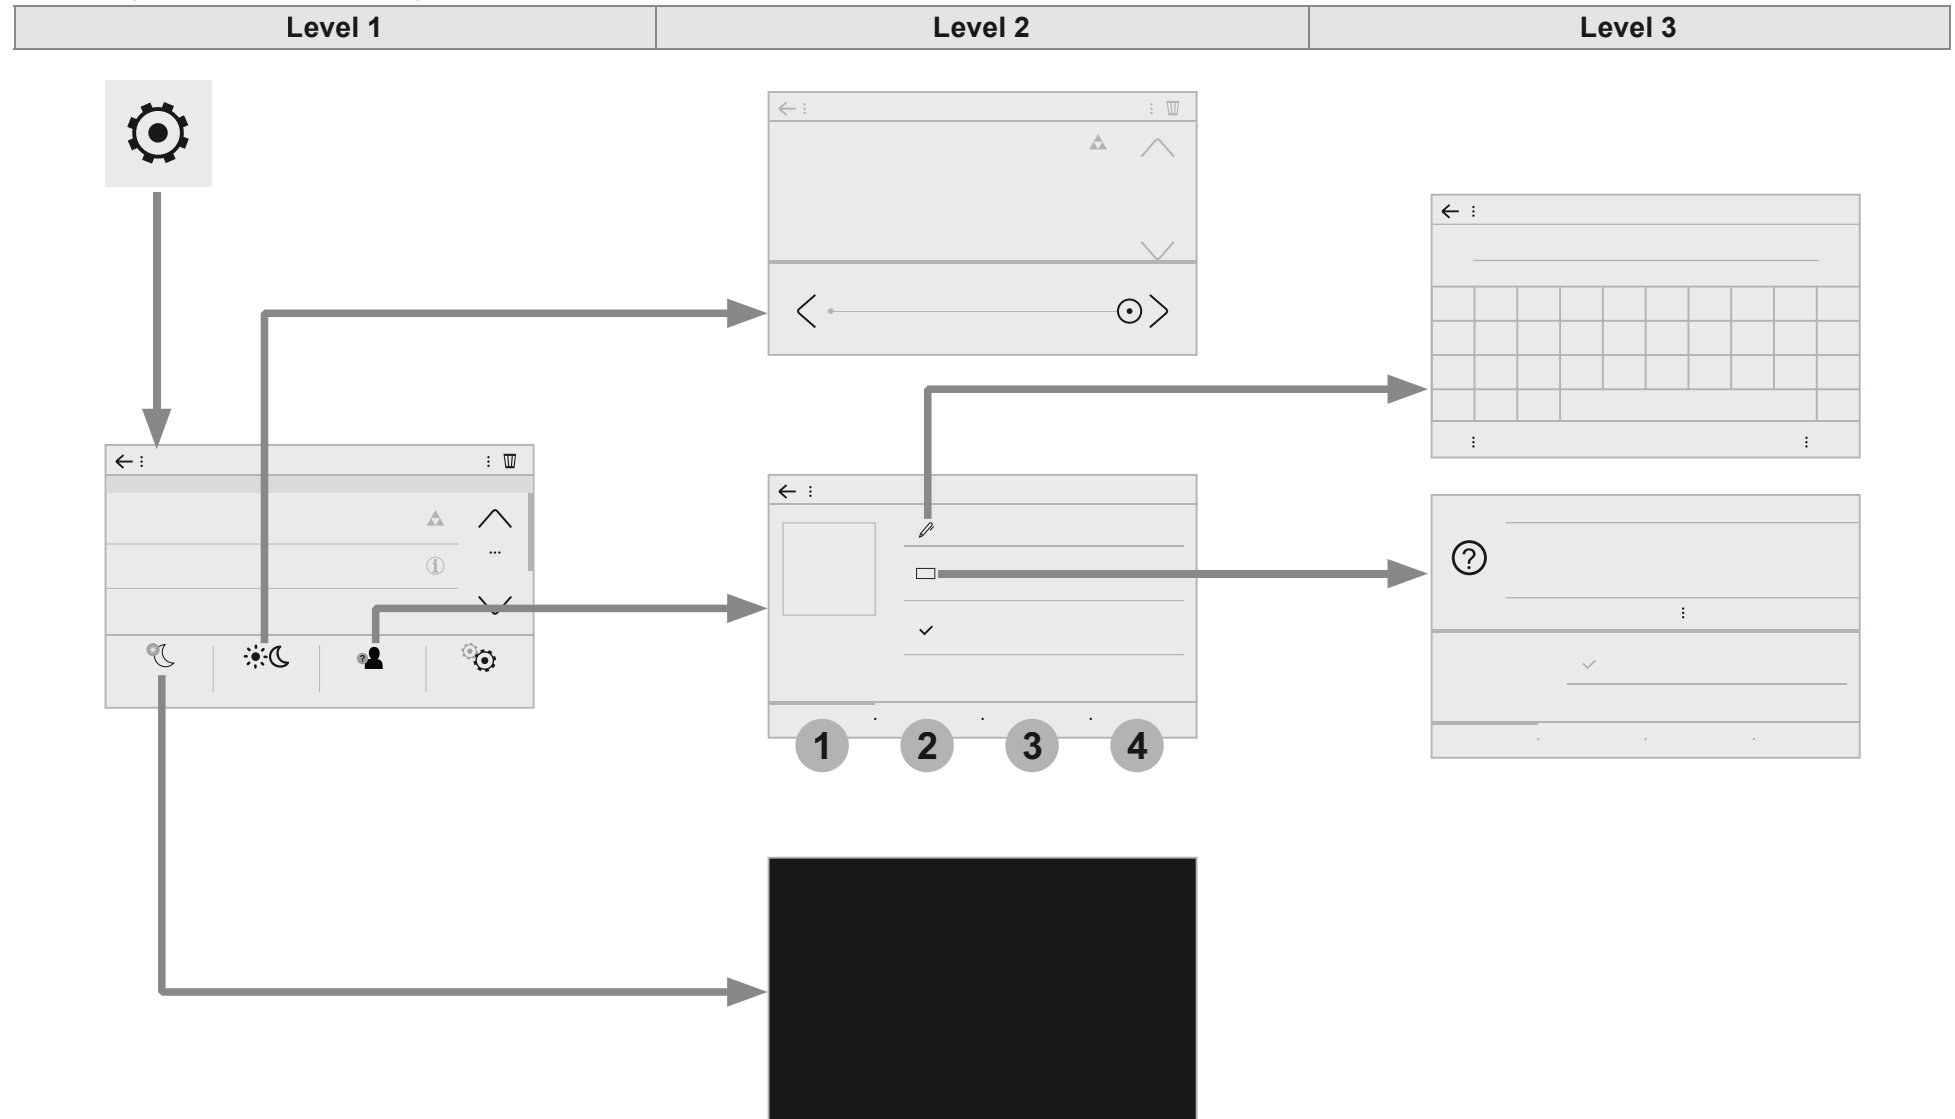










Press the arrows or move the cursor to set the ring volume.

# Settings

 
According to version / according to equipment









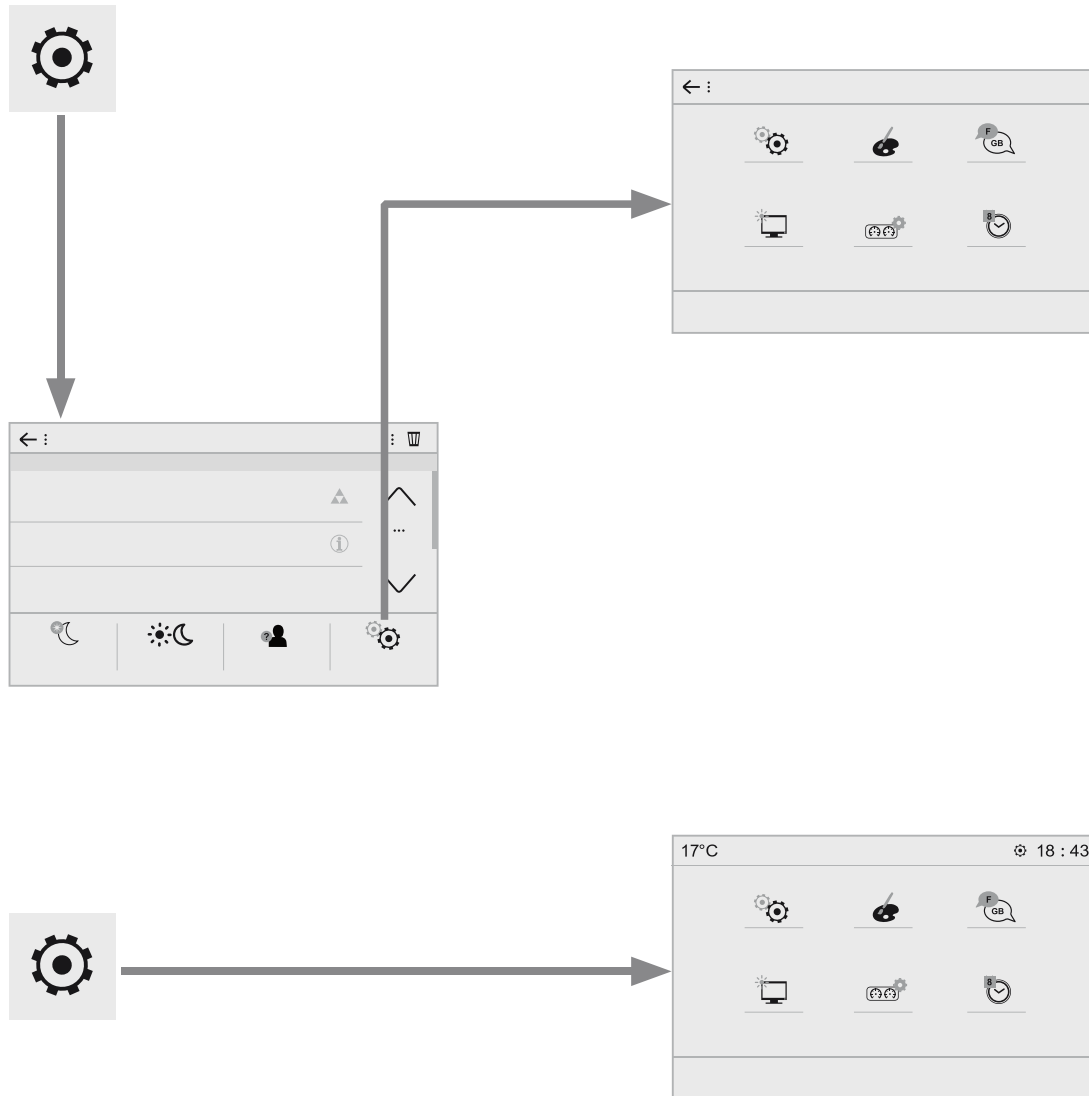









 




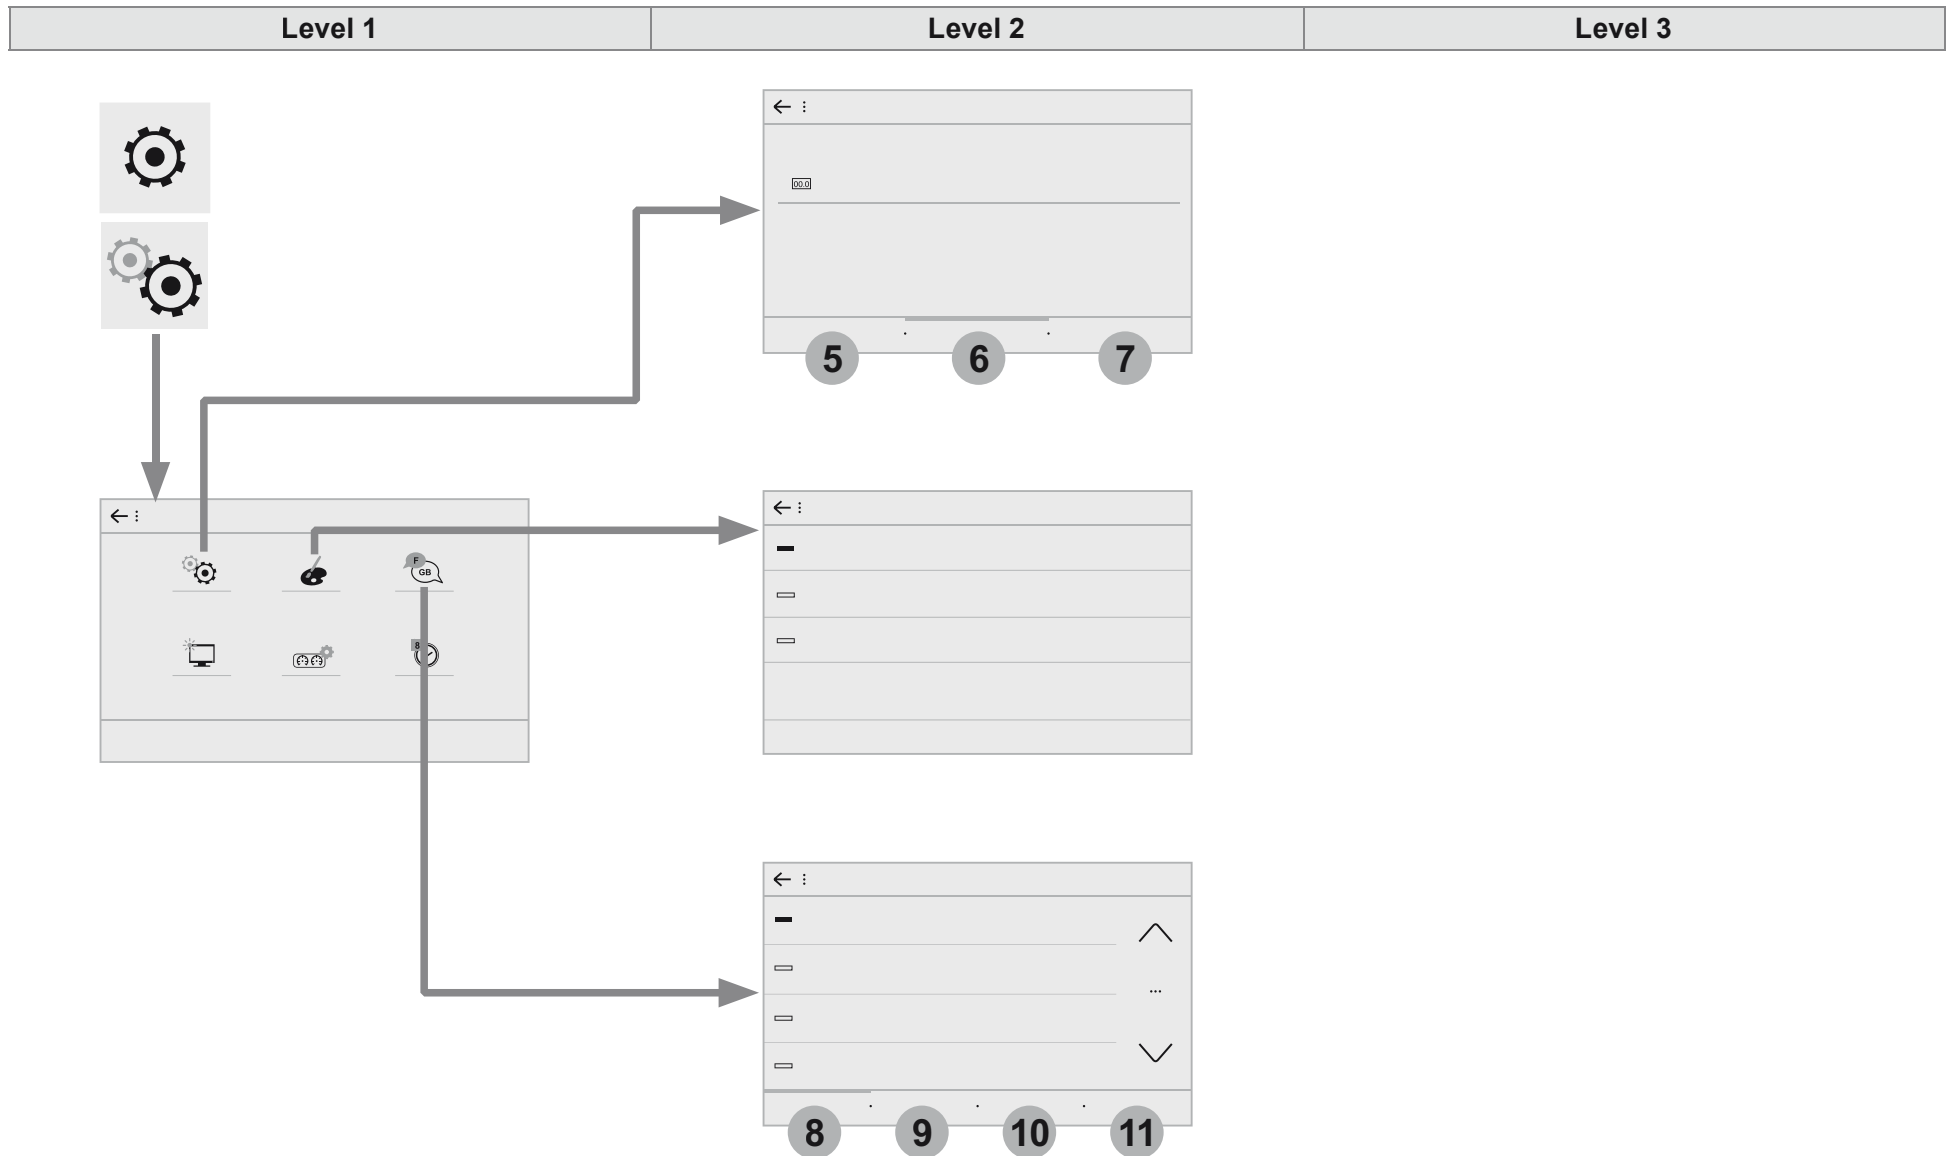












Level 1		Level 2		Level 3		Comments	
 	<b>Settings</b> ↓ <b>Brightness</b>		<b>Ambience</b>			Move the cursor to adjust the brightness of the screen and/or of the instrument panel.	
 	<b>Settings</b> ↓ <b>Profiles</b>		<b>Profile 1</b>			Select a profile.	
			<b>Profile 2</b>				
			<b>Profile 3</b>				
			<b>Common profile</b>				
			<b>Name:</b>		<b>Profile name modification</b>		Configure the profiles.
			<b>Reset the profile</b>		<b>Yes / No</b>		
			<b>Profile activated</b>				Activate/deactivate the profile selected.
							Save the settings.
 	<b>Settings</b> ↓ <b>Dark</b>					Function which switches off the lit display. Pressing the screen reactivates it.	


According to equipment









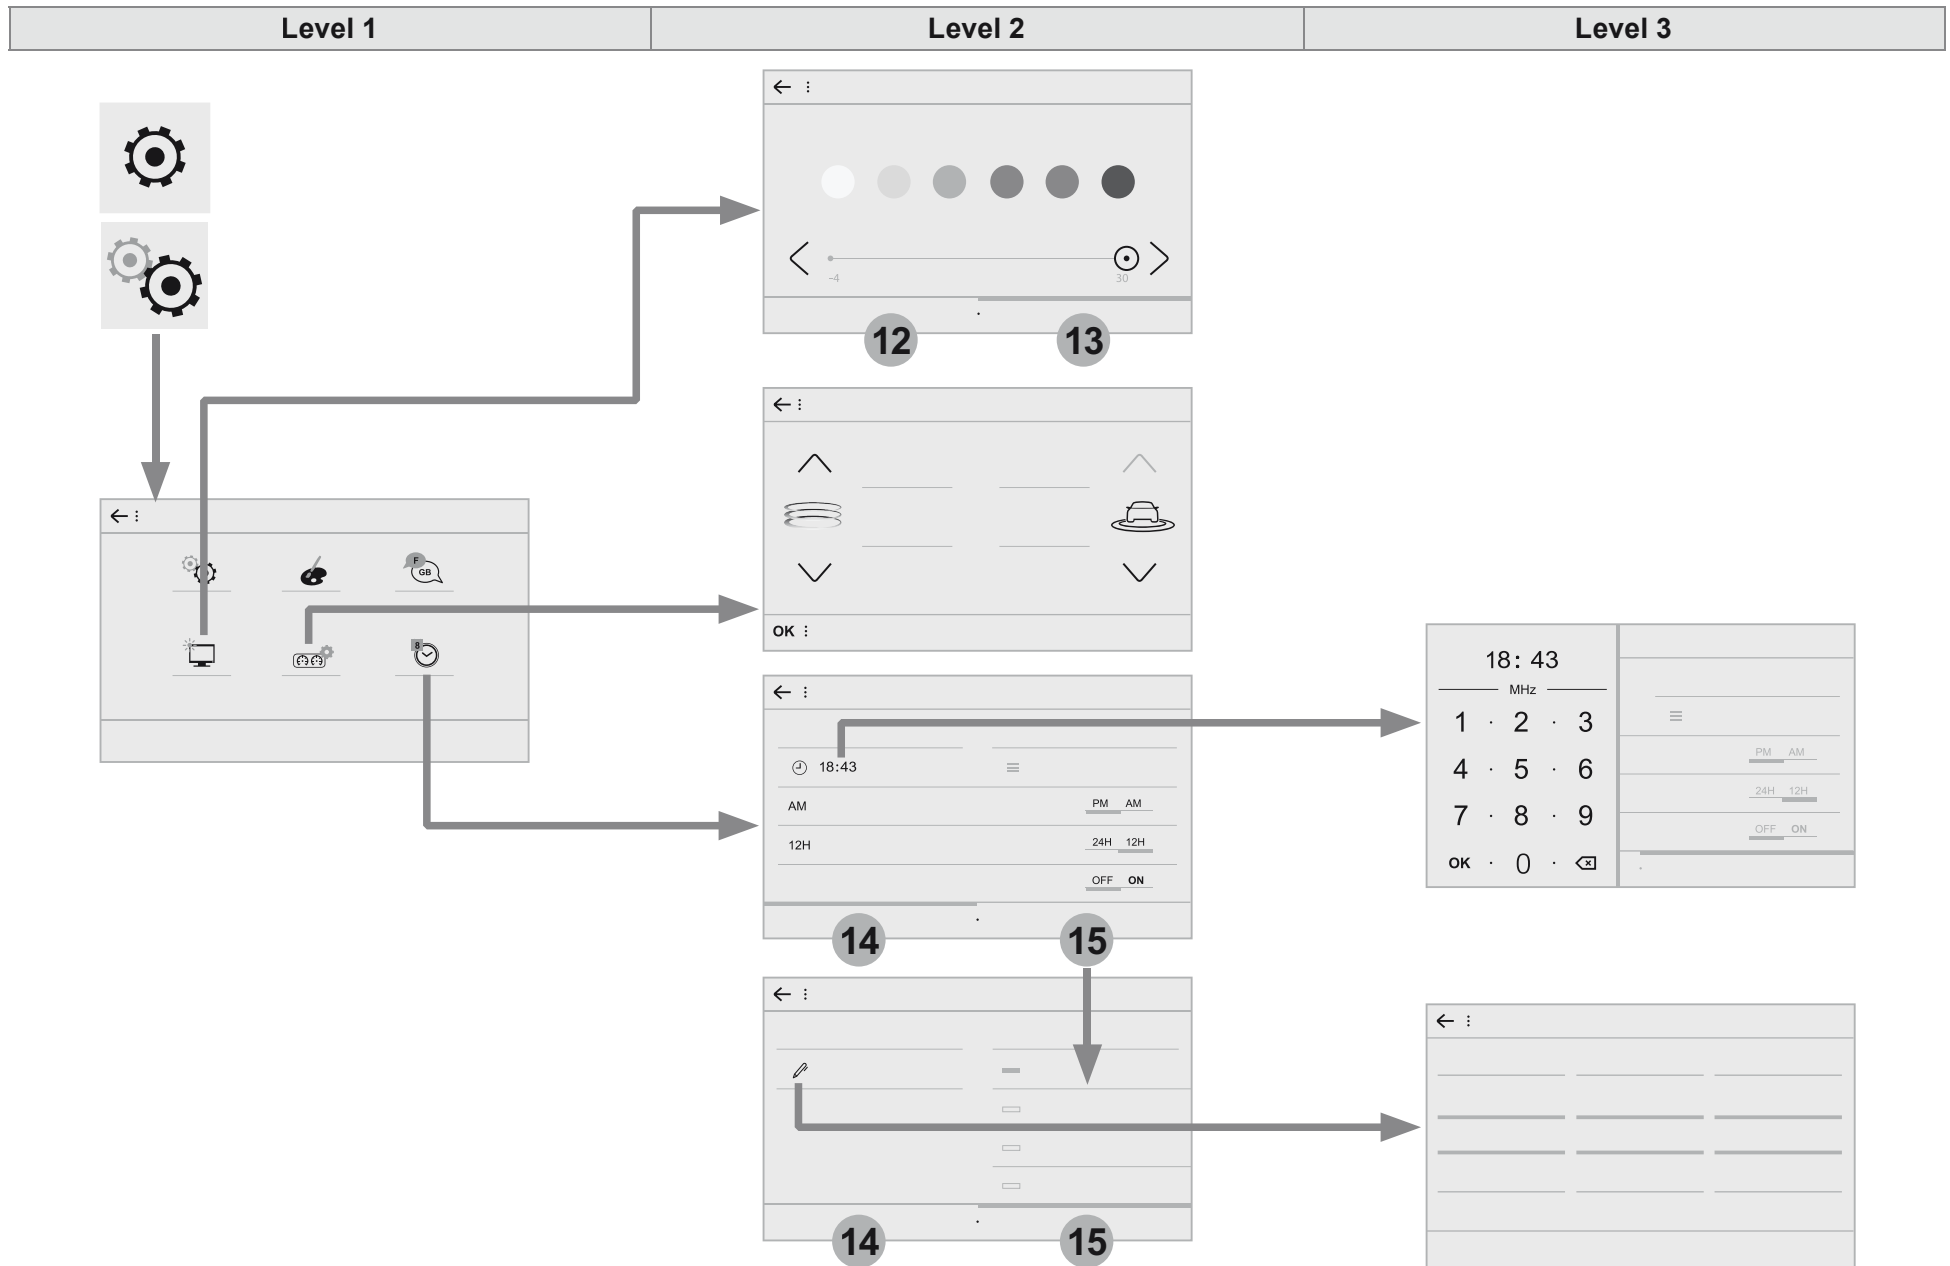









Level 1		Level 2		Comments
  <p style="text-align: center;"><b>Settings</b> ↓ <b>Configuration</b></p>		<b>System configuration</b>		Configure certain system parameters.
		<b>Ambience</b>		Select an ambience for the screen integrated in the system.
		<b>Language</b>		Select the display language for the the screen and/or the instrument panel.
		<b>Screen configuration</b>		Set the configuration of the screen and/or the instrument panel.
		<b>Customization</b>		Configure the instrument panel for a personalised display.
		<b>Date and time</b>		Set the date and time and select the display format.



Level 1		Level 2		Level 3		Comments		
  	<b>Settings</b> ↓ <b>Configuration</b> ↓ <b>System configuration</b>	5	Units		Distance and fuel consumption	Configure the display units for the distance, consumption and temperature.		
					Temperatures			
				6	Factory settings		Reset	Restore the original settings.
				7	System info		View	Consult the version of the different modules installed in the system.
								Save the parameters.
  	<b>Settings</b> ↓ <b>Configuration</b> ↓ <b>Ambience</b>					Select an ambience for the screen integrated in the system.		
								
								
							Confirm the selection and start the change of ambience.	
  	<b>Settings</b> ↓ <b>Configuration</b> ↓ <b>Language</b>	8	All			Select the display language for the screen and/or the instrument panel.		
		9	Europe					
		10	Asia					
		11	America					
							Save the parameter.	



Level 1		Level 2		Level 3		Comments
  	Settings ↓ Configuration ↓ Screen configuration	12	Brightness			Select the display brightness level.
		13	Animation	<input checked="" type="checkbox"/>	Automatic scrolling	Activate or deactivate the parameters.
				<input checked="" type="checkbox"/>	Animated transitions	
				←		
  	Settings ↓ Configuration ↓ Temperature conditioning		Customization			Choose and select the display information required.
		OK	Confirm			Confirm the selections.
  	Settings ↓ Configuration ↓ Date and time	14	Time		Time	Set the time.
					Time Zone	Set the time zone.
					AM	Select the display format.
					12h	
					GPS Synchronisation	Activate or deactivate the synchronisation with the satellites.
				←		Save the settings.
		15	Date		Date	Set the date and select the display format.
					Setting the date	
←				Save the settings.		

## Profile settings

**!** As a safety measure and because it requires the sustained attention of the driver, changes to settings must only be done with the **vehicle stationary**.



Press **Settings** to display the primary page.



Press "**Profiles**".



Select "**Profile 1**" or "**Profile 2**" or "**Profile 3**" or "**Common profile**".



Press this button to enter a name for the profile using the virtual keypad

OK

 
Press "**OK**" to save.



Press the back arrow to confirm.



Press this button to activate the profile.



Press the back arrow again to confirm.



Press this button to initialise the profile selected.


## Adjust the brightness



 
Press **Settings** to display the primary page.



Press **Brightness**.



 Move the cursor to adjust the brightness of the screen and/or of the instrument panel (according to version).



Press in the grey zone to confirm.



## Modifying system settings



Press **Settings** to display the primary page.



Press "**Configuration**" to go to the secondary page.



Press "**System configuration**".



Press "**Units**" to change the units for distance, fuel consumption and temperature.



 
Press "**Factory settings**" to return to the initial settings.



Returning the system to factory settings activates the English language by default (according to version).



Press "**System info**" to display the versions of the different modules installed in the system.




Press the back arrow to confirm.



Press **Settings** to display the primary page.



 Press "**Configuration**" to go to the secondary page.



Press "**Screen configuration**".



 
Press "**Brightness**".




Move the cursor to set the brightness of the screen and/or instrument panel (according to version).




Press "**Animation**".



 Activate or deactivate: "**Automatic scrolling**".



Select "**Animated transitions**".

 

Press the back arrow to confirm.

## Select the language



 
Press **Settings** to display the primary page.



Press "**Configuration**" to go to the secondary page.



Select "**Language**" to change the language.



Press the back arrow to confirm.

## Setting the time



Press **Settings** to display the primary page.



Press "**Configuration**" to go to the secondary page.



Press "**Date and time**".



Select "**Time**".



 
Press this button to adjust the time using the virtual keypad.




Press "**OK**" to save the time.




Press this button to define the time zone.



 Select the display format for the time (12h / 24h).



 Activate or deactivate synchronisation with satellites (UTC).



Press the back arrow to save the settings.

**i** The system does not automatically manage the change between winter and summer time (depending on the country of sale).

## Setting the date



Press **Settings** to display the primary page.



Press "**Configuration**" to go to the secondary page.



 
Press "**Date and time**".



Select "**Date**".



Press this button to define the date.



Press the back arrow to save the date.



Select the display format of the date.



Press the back arrow again to confirm.

**i** Adjustment of the time and date is only available if "GPS Synchronisation:" is deactivated. The change between winter and summer time is done by changing the time zone.

# Frequently asked questions

The following table groups together the answers to the most frequently asked questions concerning your audio system.

## Radio

QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the upper band to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a franchised dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	Press the round arrow on the "List" tab of the "Radio" page.
The name of the radio station changes.	Some radio stations send other information in place of their name (the title of the song for example). The system interprets this information as the name of the station.	

## Media

QUESTION	ANSWER	SOLUTION
Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).	Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).	Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	

## Telephone

QUESTION	ANSWER	SOLUTION
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	Check that your telephone's Bluetooth function is switched on. Check in the telephone settings that it is "visible to all".
	The Bluetooth telephone is not compatible with the system.	You can check the compatibility of your telephone at the Brand's website (services).
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down, ...).
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.

## Settings

QUESTION	ANSWER	SOLUTION
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the settings for treble and bass and vice-versa.	Modify the treble and bass or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings and vice-versa.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing a distribution setting, the balance setting is deselected.		
There is a difference in sound quality between the different audio sources.	For optimum sound quality, the audio settings can be adapted to the different sound sources, which may result in audible differences when changing source.	Check that the audio settings are adapted to the sources listened to. Adjust the audio functions to the middle position.
With the engine off, the system switches off after a few minutes of use.	When the engine is switched off, the system's operating time depends on the state of charge of the battery. The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.