 
 




## Wireless Communication and Meter Pairing 7

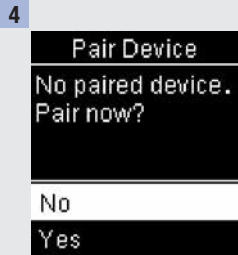

**Pair Device** appears. Press **▼** to highlight **Yes**. Press **OK**.

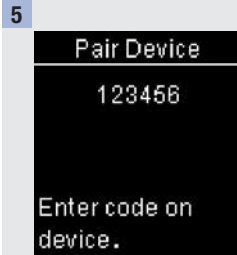

  The meter displays its code.

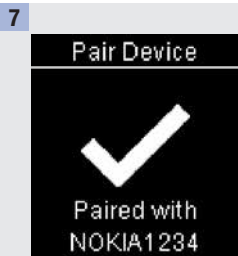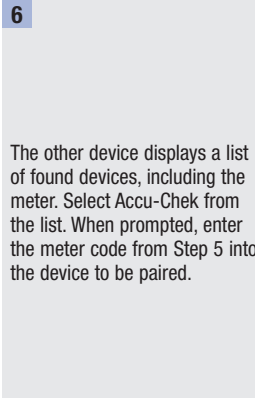

When pairing is complete, a checkmark and the name of the paired device appear. Press **OK** to return to **Wireless**.


**DRAFT**
 
## 7 Wireless Communication and Meter Pairing

### Flight Mode (Main Menu > Settings > Wireless > Flight Mode)

Select whether wireless communication is available or not. When **Flight Mode** is on, the airplane icon appears in the title bar and wireless communication is not available.


**1**

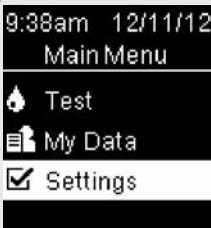

9:38am 12/11/12  
Main Menu  
Test  
My Data  
Settings

Turn the meter on by briefly pressing **OK**. From **Main Menu**, press **▼** to highlight **Settings**. Press **OK**.

**2**



Settings  
Target Range  
Last Result  
Language  
Wireless

Press **▼** to highlight **Wireless**. Press **OK**.

 
**3**



Wireless  
Flight Mode  
Default Device  
Auto-Send  
Sync Time

**Flight Mode** is highlighted. Press **OK**.

**4**

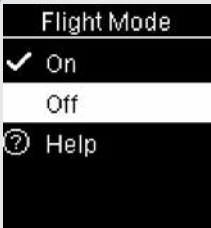

Flight Mode  
On  
Off  
Help


Press **▲** or **▼** to highlight **On** or **Off**. Press **OK** to move **✓** to the option. Press **OK** to set the option and return to **Wireless**.

**DRAFT**
 
## Default Device (Main Menu > Settings > Wireless > Default Device)

If more than 1 device is paired, select the default paired device for the **Auto-Send** and **Sync Time** features.

**1**

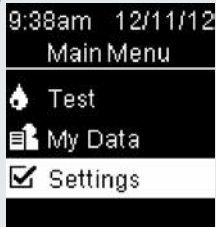

9:38am 12/11/12  
Main Menu  
Test  
My Data  
Settings

Turn the meter on by briefly pressing **OK**. From **Main Menu**, press **▼** to highlight **Settings**. Press **OK**.


**2**



 Settings  
Target Range  
Last Result  
Language  
Wireless

Press **▼** to highlight **Wireless**. Press **OK**.


**3**

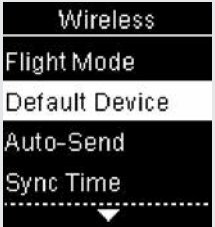

Wireless  
Flight Mode  
Default Device  
Auto-Send  
Sync Time

Press **▲** or **▼** to highlight **Default Device**. Press **OK**. A list of paired devices appears.

**4**

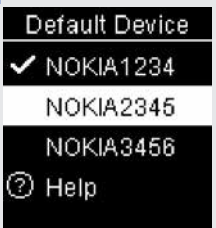 

Default Device  
✓ NOKIA1234  
NOKIA2345  
NOKIA3456  
Help

Press **▲** or **▼** to highlight the device you want as the default device. Press **OK** to set the option and return to **Wireless**.


**DRAFT**
 
## 7 Wireless Communication and Meter Pairing

### Auto-Send (Main Menu > Settings > Wireless > Auto-Send)

Select whether data is automatically sent to the default paired device after each test.


**1**

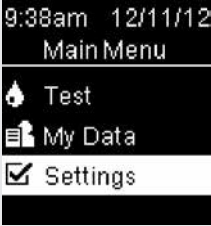

9:38am 12/11/12  
Main Menu  
Test  
My Data  
Settings

Turn the meter on by briefly pressing **OK**. From **Main Menu**, press **▼** to highlight **Settings**. Press **OK**.


**2**



 Settings  
Target Range  
Last Result  
Language  
Wireless

Press **▼** to highlight **Wireless**. Press **OK**.


**3**

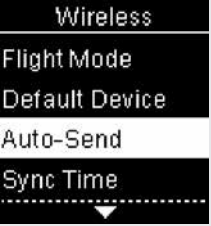

Wireless  
Flight Mode  
Default Device  
Auto-Send  
Sync Time

Press **▲** or **▼** to highlight **Auto-Send**.

**4**

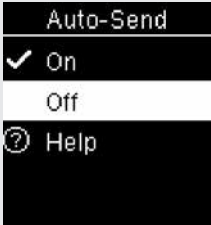 

Auto-Send  
On  
Off  
Help


Press **▲** or **▼** to highlight **On** or **Off**. Press **OK** to move **✓** to the option. Press **OK** to set the option and return to **Wireless**.

**DRAFT**
 
## Sync Time (Main Menu > Settings > Wireless > Sync Time)

Select whether to synchronize the time and date to the default paired device.

**1**

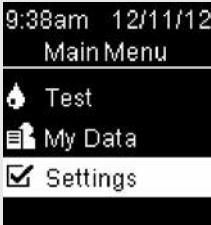

9:38am 12/11/12  
Main Menu  
Test  
My Data  
Settings

Turn the meter on by briefly pressing **OK**. From **Main Menu**, press **▼** to highlight **Settings**. Press **OK**.


**2**



 Settings  
Target Range  
Last Result  
Language  
Wireless

Press **▼** to highlight **Wireless**. Press **OK**.


**3**

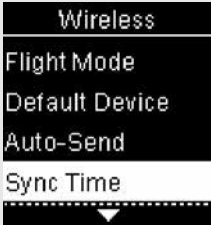

Wireless  
Flight Mode  
Default Device  
Auto-Send  
Sync Time

Press **▲** or **▼** to highlight **Sync Time**. Press **OK**.

**4**

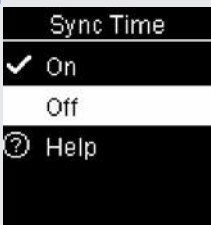 

Sync Time  
On  
Off  
Help

Press **▲** or **▼** to highlight **On** or **Off**. Press **OK** to move **✓** to the option. Press **OK** to set the option and return to **Wireless**.

**DRAFT**

## 7 Wireless Communication and Meter Pairing

### Pairing Additional Devices (Main Menu > Settings > Wireless > Pairing > Pair Device)

 
This procedure is to add another paired device (assumes there is already 1 paired device).

You can pair 5 devices.

If you have 5 paired devices, you must delete a pairing before you can add another device.

The device you choose remains as the default until you change it.

**1**

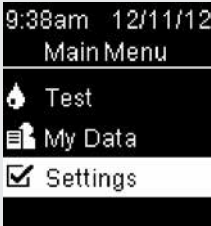

9:38am 12/11/12  
Main Menu  
Test  
My Data  
Settings

Turn the meter on by briefly pressing **OK**. From **Main Menu**, press **▼** to highlight **Settings**. Press **OK**.


**2**



Settings  
Target Range  
Last Result  
Language  
Wireless

Press **▼** to highlight **Wireless**. Press **OK**.

**3**



Wireless  
Default Device  
Auto-Send  
Sync Time  
Pairing

 
Press **▶** or **▼** to highlight **Pairing**.

**DRAFT**

4



Press **▲** or **▼** to highlight **Pair Device**. Press **OK**.  
 If there are less than 5 paired devices, **Pair Device** appears. Go to Step 5.

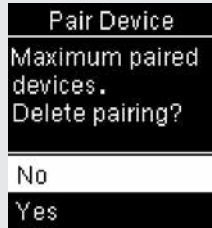

If there are already 5 paired devices, **Pair Device** appears. You must delete a paired device before you can proceed to Step 5. Select **Yes**. Press **▲** or **▼** to highlight the device to delete. Press **OK**. Proceed to Step 5.



5

Prepare the other device for pairing. Refer to the other device's instructions for information about pairing.

6



The meter displays its code.

7

The other device displays a list of found devices, including the meter. Select Accu-Chek from the list. When prompted, enter the meter code from Step 6 into the device to be paired.

**DRAFT**

 
## 7 Wireless Communication and Meter Pairing

8



When pairing is complete, ✓ and the name of the paired device appear. Press **OK**.

9

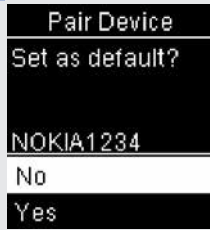

If there is more than 1 paired device, you will be asked if you want the new device to be the default device.

Press **▲** or **▼** to highlight **No** or **Yes**. Press **OK** to set the option and return to **Pairing**. Press **ESC** to return to **Wireless**.

**DRAFT**



 
## Delete Pairing (Main Menu > Settings > Wireless > Pairing > Delete Pairing)

This procedure is to delete a paired device (assumes there is at least 1 paired device).

You can pair 5 devices. If you have 5 paired devices, you must delete a pairing before you pair to another device.

The device you choose remains as the default until you change it.


**1**

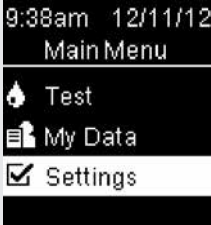

9:38am 12/11/12  
Main Menu  
Test  
My Data  
Settings

Turn the meter on by briefly pressing **OK**. From **Main Menu**, press **▼** to highlight **Settings**. Press **OK**.

**2**



Settings  
Target Range  
Last Result  
Language  
Wireless

Press **▼** to highlight **Wireless**. Press **OK**.

**3**



Wireless  
Default Device  
Auto-Send  
Sync Time  
Pairing

Press **▲** or **▼** to highlight **Pairing**. Press **OK**.

## 7 Wireless Communication and Meter Pairing

4



Press **▲** or **▼** to highlight **Delete Pairing**. Press **OK**.

5



Press **▲** or **▼** to highlight the device to delete. Press **OK** to set the option.

**DRAFT**

6

**Delete Pairing**

Press OK to  
choose new  
default device.

If the selected device is not the default device, the pairing is deleted. ✓ and the name of the deleted device appear.

**Delete Pairing**

Deleted:  
NOKIA1234



New default:  
DROID456

If the selected device is the default device, you are asked to select a new default device. If there is only 1 device remaining, it becomes the default device. The list of paired devices appears.

Highlight the new default device and press **OK**. ✓ and the name of the deleted device appear, along with the new default device.

**DRAFT**

## **7** Wireless Communication and Meter Pairing

**DRAFT**