

Roku™



User Guide

 
NETFLIX

ready for
instant streaming

Copyright

Copyright © 2008 by Roku, Inc. All rights reserved. Roku and the Roku logo are trademarks of Roku, Inc. Other brand and product names are trademarks or registered trademarks of their respective holders.



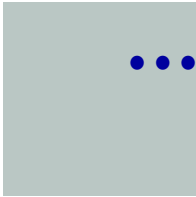

Contents

- Chapter 1 Welcome 1**
 - What's in the box? 1
 - Overview 2
 - Netflix Player inputs 2
 - Remote control 3
 - Inserting the batteries in the remote control 4

- Chapter 2 Connecting Your Netflix Player 5**
 - Connecting your Player to your TV 5
 - Video connections 7
 - Audio connections 9
 - Connecting your Player to your home network 11
 - Connecting your Player to a power source 12

- Chapter 3 Setting Up Your Netflix Player 13**
 - Accessing your Player 13
 - Selecting your network type 14
 - Activating your Player 18

Chapter 4	Using Your Netflix Player	21
	Filling your instant Queue	21
	Selecting a movie to watch on your TV	24
	Playing a movie	26
Chapter 5	Adjusting Settings on Your Netflix Player	27
	Changing your network settings	27
	Changing your display setting	29
	Setting the volume for sound effects	31
	Changing your screensaver settings	33
	Viewing and updating your Player info	35
	Performing a factory reset	38
Chapter 6	Additional Information	41
	Manually entering your network's name (SSID)	41
	Using the Reset button	43
	Understanding Player performance	44
Notices		45
	Macrovision Statement	45
	FCC Statement	45
	Netflix Player by Roku License Agreement and Warranty Statement	46
	Important Safety Instructions	49



Chapter 1

Welcome



Congratulations on your purchase of The Netflix Player by Roku™. In just a few minutes you'll be ready to select movies from the Netflix website and watch them instantly on your TV.

What's in the box?

 
Your Netflix Player package should include all of these items:




Overview

Before you set up your Netflix Player, get familiar with the inputs on the Player and the buttons on the remote control.

Netflix Player inputs

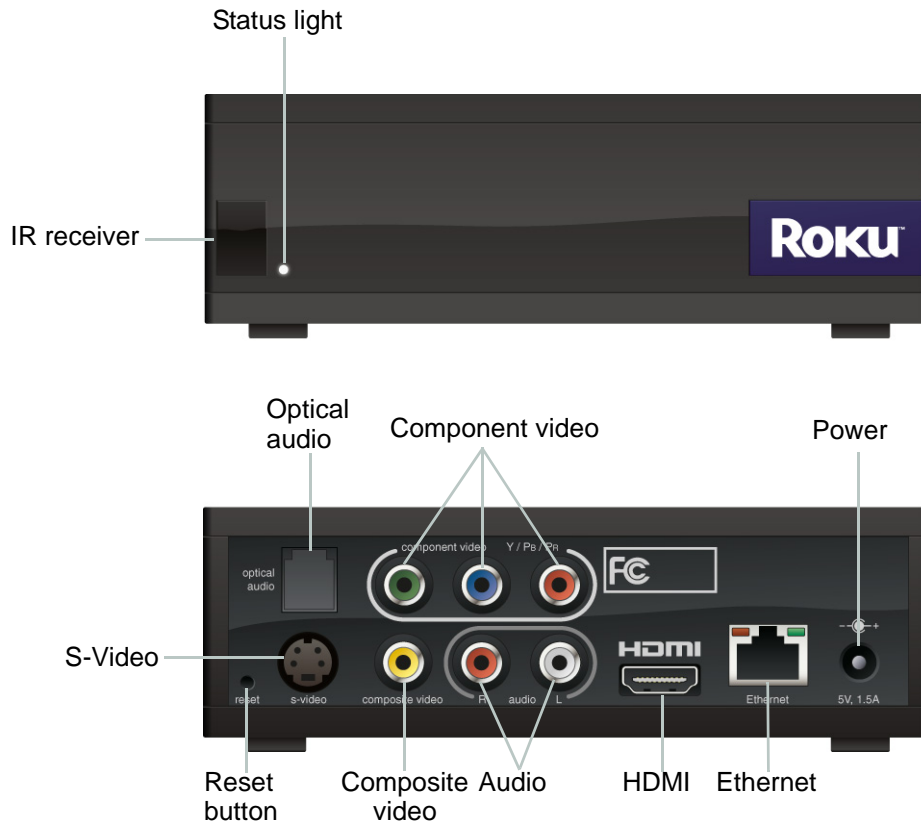

Remote control

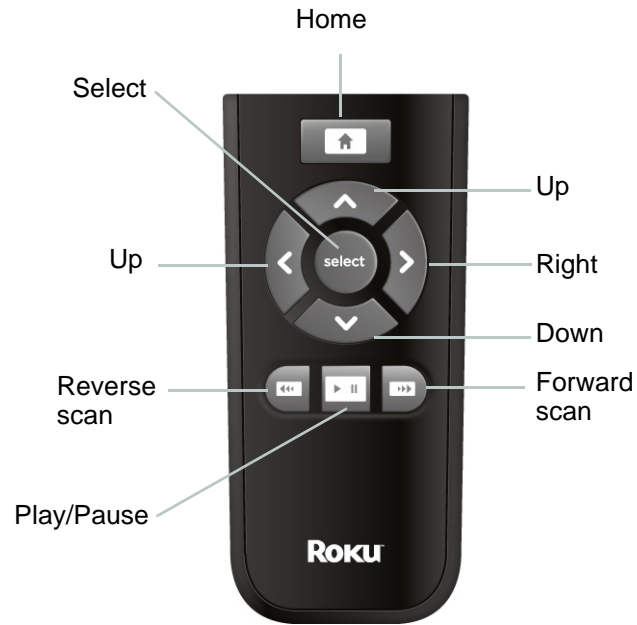 

Inserting the batteries in the remote control

- 1 Do one of the following:
 - If your remote has a battery door release button on the back, press the button and then slide the top panel upward to open the remote.
 - If your remote doesn't have a battery door release button, just slide the top panel upward to open the remote.
- 2 Insert 2 AAA batteries (included) into the battery compartment.
- 3 Align the top edge of the battery door with the notches near the top of the remote, and then slide the battery door onto the back of the remote control until it clicks into place.



Chapter 2

Connecting Your Netflix Player



To use your Netflix Player, you need to connect it to your TV, your network, and a power source.

Connecting your Player to your TV

There are several ways to connect your Player to your TV. The method you choose depends on the inputs supported by your TV and the cables you have available.

Your Player includes a combination cable that has both composite video and stereo audio connectors. If you purchased the optional cable package, you also received an optical audio cable, a component video cable, and an HDMI cable. (S-Video cables are sold separately and can be purchased at most stores that sell audio/video equipment.)

The type of connection you set up between your Player and your TV, combined with the speed of your Internet connection, determine the quality of your audio/video experience when you watch movies through your Player.

The following chart ranks the audio and video resolution for each setup option, assuming that the resolution is not compromised by your Internet connection:

Video		Audio	
Composite	*	Stereo	***
S-Video	**	Optical	****
Component	***	HDMI	****
HDMI	****		

NOTE: *Even if you use a high-resolution setup, audio/video quality may be compromised based on the speed of your broadband Internet connection.*

Video connections

NOTE: Connecting your TV directly to the audio/video output of your Set-Top Box will assure a more vivid picture and enhance your viewing enjoyment.

Connecting a composite video cable

- 1 Insert the yellow connector on the standard A/V cable into the yellow composite video jack on your Player.
- 2 Insert the yellow connector on the other end of the standard A/V cable into the yellow composite video jack on your TV or A/V receiver.



Connecting an S-Video cable

- 1 Insert one end of the S-Video cable into the S-Video jack on your Player.
- 2 Insert the other end of the S-Video cable into the S-Video jack on your TV or A/V receiver.



Connecting a component video cable

 
- 1 Insert one end of the green, blue, and red video cable into the jacks with the matching colors on your Player.
- 2 Insert the other end of the green, blue, and red cable into the corresponding component video jacks on your TV or A/V receiver.



Connecting an HDMI cable

- 1 Insert one end of the HDMI cable into the HDMI jack on your Player.
- 2 Insert the other end of the HDMI cable into the HDMI jack on your TV or A/V receiver.

NOTE: *If you use an HDMI cable, you don't need separate audio and video cables, unless you're routing the sound to an audio receiver.*

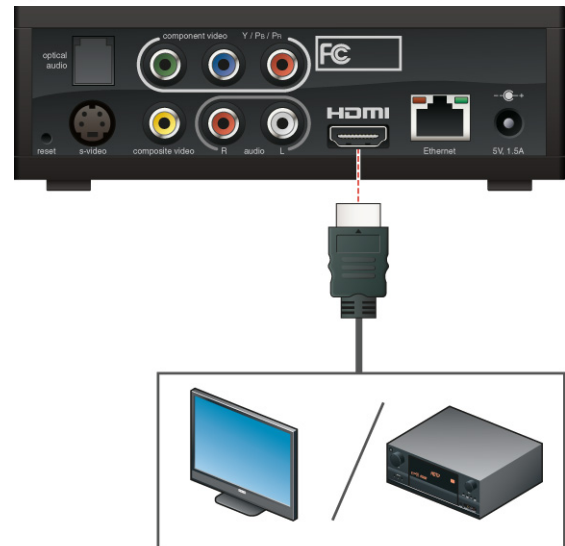

Audio connections

For standard stereo sound (2-channels, left/right), use the red and white connectors on the composite cable. For surround sound (5.1 audio), use either an HDMI or optical audio cable, if available.

Connecting a stereo cable

- 1 Insert the red and white connectors on the standard A/V cable into the red (Right) and white (Left) audio jacks on your Player.
- 2 Insert the other end of the stereo cable into the red (Right) and white (Left) audio jacks on your TV or A/V receiver.



Connecting an optical audio cable

 
- 1 If present, remove the protective caps from the optical audio cable connectors.
- 2 Insert one end of the optical audio cable into the optical audio jack on your Player.
- 3 Insert the other end of the optical audio cable into the optical audio jack on your TV or A/V receiver.



Connecting an HDMI cable

- 1 Insert one end of the HDMI cable into the HDMI jack on your Player.
- 2 Insert the other end of the HDMI cable into the HDMI jack on your TV or A/V receiver.

NOTE: *If you use an HDMI cable, you don't need separate audio and video cables.*

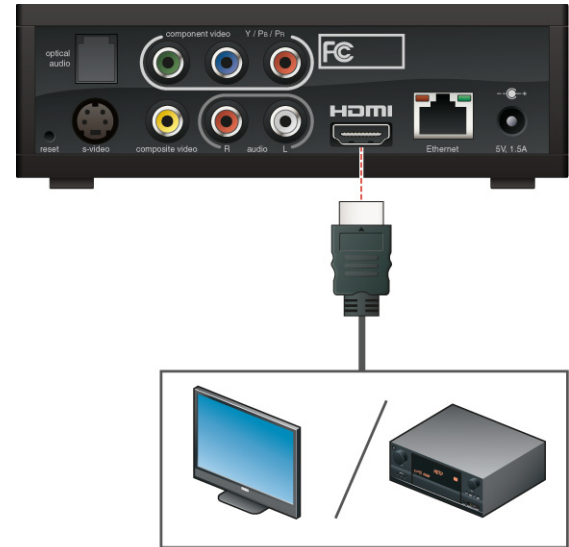

Connecting your Player to your home network

To view movies through your Netflix Player, you must connect your Player to your home network using either a wireless or wired connection. Your home network must have broadband Internet access, so that your Player can access the Internet when it is connected to your home network. A minimum connection speed of 1.5Mbps is required. However, we recommend using a connection that is 4.0Mbps or faster.

If you're using a wired connection, follow these steps to connect your Player to your network. If you're using a wireless connection, skip ahead to the next section, [“Connecting your Player to a power source”](#).

- 1 Connect one end of a CAT5 ethernet cable to the ethernet jack on your Player. (You can purchase an ethernet cables at most stores that sell computer equipment or electronic supplies.)
- 2 Connect the other end of the ethernet cable to your Internet router.

NOTE: *If you're using a wireless connection, you don't need to connect an ethernet cable, so you can skip this step.*



Connecting your Player to a power source

Like most home entertainment products, your Player requires electricity to run.

- 1 Connect the AC adapter to the back of your Player.
- 2 Insert the power plug into a power outlet.




Chapter 3

 
Setting Up Your Netflix Player

After you connect your Player, as described in the previous chapter, you're ready to access your Player and complete Guided Setup to set up your wireless network connection (if applicable), choose a display format for your TV, and activate your Player.

Accessing your Player

After you plug your Player into a power outlet, it is on all the time. There is no power button to turn on and off. You simply access your Player through your TV.

- 1 Turn on your TV, and if necessary, select the input on your TV that displays the Player. When the Player is properly connected, you see the Roku logo followed by the Welcome screen.
- 2 When the Welcome screen appears, point your remote at your Player, and press **select** .

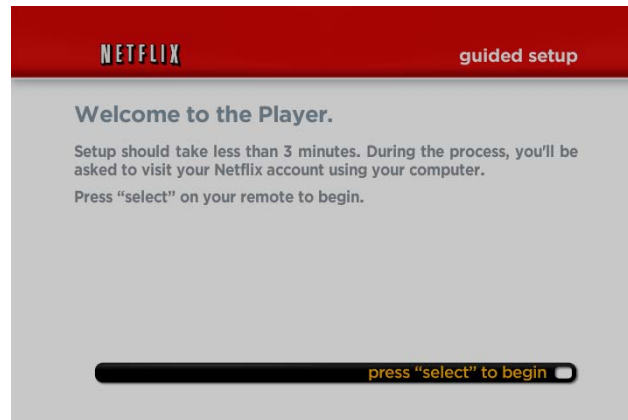




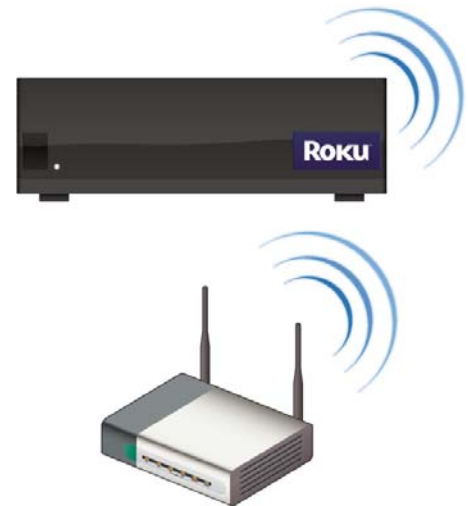 
Selecting your network type

If you're setting up a wireless connection, make sure you have the following information handy:

- Wireless network name (also known as the SSID)
- Security key or passphrase (if your network is secured)
- Security method (supported types are: WEP, WPA, and WPA2)

1 Do one of the following depending on your network type:

- **Wired:** Make sure **wired** is highlighted, press **select** , and then skip ahead to ["Activating your Player"](#) to continue.
- **Wireless:** Make sure your Player is within range of your wireless router. Press **down**  on the remote to highlight **wireless**, and then press **select** . Complete the rest of the steps in this section.



 
2 Do one of the following:

- If your Player detects your home network, press **left** or **right** on the remote to highlight your home network, and then press **select**.



NOTE: *The waves radiating from the center of the icon indicate the strength of the wireless network connection. A weak network connection may impact the quality of the video you receive with your Player.*

- If your Player doesn't detect your network and your network broadcasts its name (also known as the SSID), press **left** or **right** on the remote to highlight **not shown**, and then press **select**. Make sure your Player is within range of your wireless router, highlight **scan again**, and then press **select**.

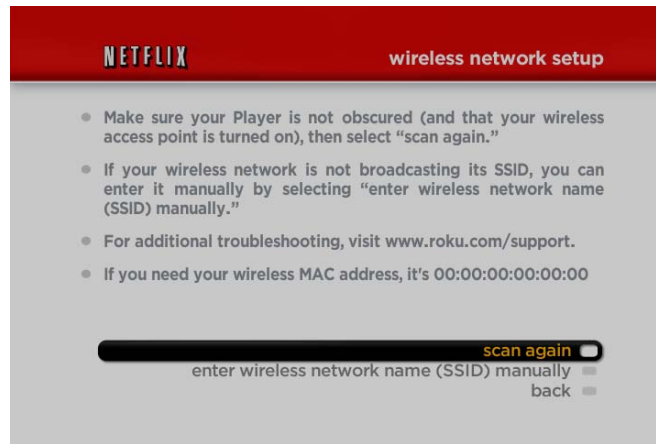


- If your network doesn't broadcast its name (it has a hidden SSID), press **left** or **right** on the remote to highlight **not shown**, and then press **select**. Highlight **enter wireless network name (SSID) manually**, press **select**, and then see [“Manually entering your network’s name \(SSID\)”](#) for additional instructions.



Activating your Player


Activating your Player establishes a connection between your Player and your Netflix account. You must activate your Player before you can use it watch movies.

 - 1 Wait for the activation screen to appear on your TV screen. You're now ready to complete activation on the Netflix website.

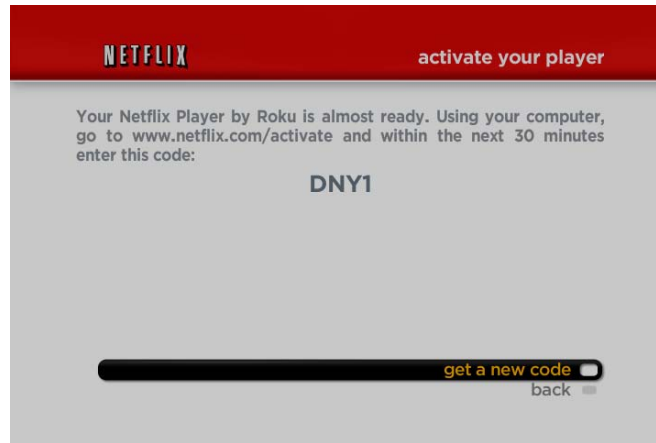


- 2 On your computer, go to: www.netflix.com/activate.
- 3 If necessary, enter your **Sign in Name** and **Password** to log into your account.

 - 4 Enter the activation code that appears on your TV screen.

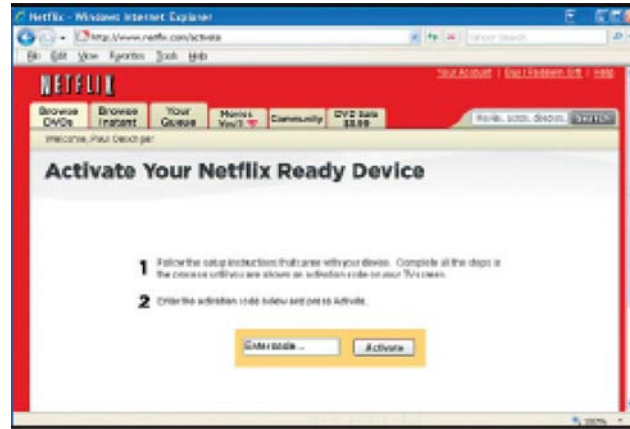

 - 5 When the Congratulations screen appears on your TV, you're ready to add movies to your instant Queue. See ["Filling your instant Queue"](#) for instructions.

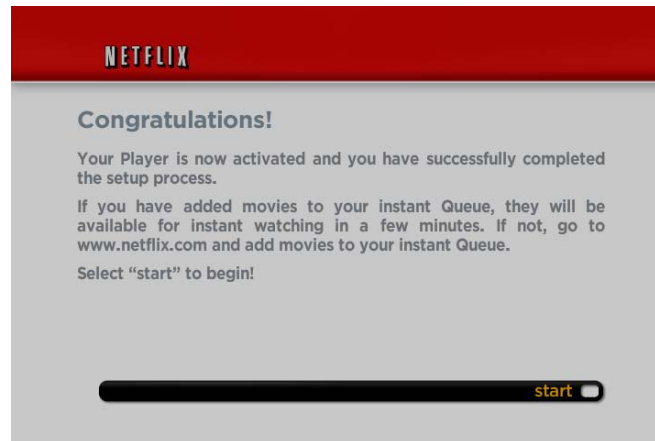



- 3 Click the **Watch Instantly** tab.

 


- 4 When you find a movie or show you want to watch, point your cursor at the **Add/Play** button to reveal additional options, and then click **Add to Instant Queue**.




- 5 Repeat step 4 to add more movies and shows to your instant Queue.

- 6 (Optional) Arrange your instant Queue by clicking the **Your Queue** tab, and then clicking the **Instant** subtab.
- To rearrange your instant Queue, drag and drop the titles in the order you want them, or change the numbers to the left of the titles and then click **Update Instant Queue** to apply your changes.
 - To remove a title from your instant Queue, click the **Remove** check box to the right of the title and then click **Update Instant Queue** to apply your changes.

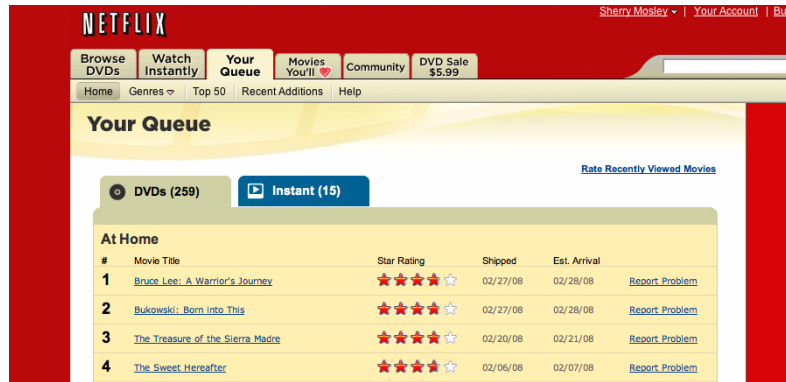







Selecting a movie to watch on your TV

After you set up your Player and add movies and shows, you can browse and watch them on your TV.

 - 1 Turn on your TV, and if necessary, select the input on your TV that displays the Player.
- 2 On the Player remote, press **home**  to view your instant Queue.










- 3 Press **left**  or **right**  to scroll through your instant Queue.
- 4 Highlight a movie and then do either of the following:
 - Press **play**  to begin viewing the selected title.
 - Press **select**  to view details for the selected title, and then press **up**  or **down**  to choose any of the following menu items:

Play Starts playing the selected title.

Resume Playing Plays a previously paused title from the point where you paused it. This option is available only if you begin watching a title and then pause it.

 
Play From Beginning Plays the selected title from the beginning.

Choose a Different Episode (TV series only) Enables you to select a specific show of a TV series. Press **left**  or **right**  to highlight the show you want to view, and then press **select**  to choose it.

Rate Enables you to rate a movie or show. The more stars, the higher the rating. Press **select**  to access the rating feature, and then press **left**  or **right**  to increase or decrease the rating. Press **select**  again to confirm the selected rating.

Remove Deletes the selected movie from your instant Queue.



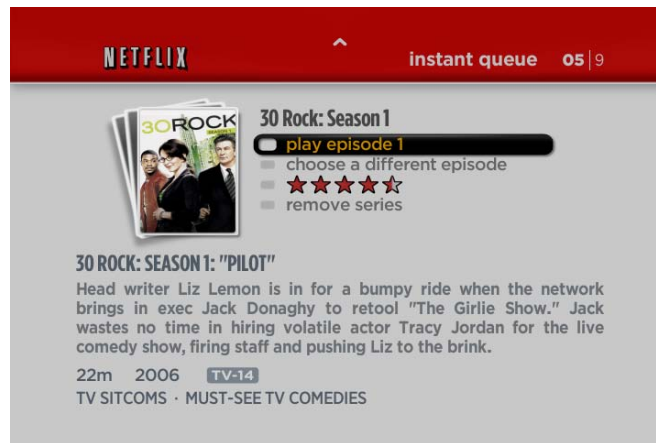













Remove Series (TV series only) Deletes the selected TV series from your instant Queue.



5 Press **home**  to return to your instant Queue.

Playing a movie

While watching a movie or show via your Player, you have full control over your viewing experience. You can use the buttons on the remote to pause and resume viewing and to scan forward and backward, just like when you watch a DVD. While playing a movie, the buttons on the remote do the following:

Button	Action
play 	Starts playing the movie. To pause a movie while it's playing or to resume playing a paused movie, press the button again.
up 	Stops the movie.
down 	Pauses playing the movie and displays details for the movie. To close the movie details screen and return to the previous state, press down  again.
select 	Pauses playing the movie and enters frame scanning mode.
right 	Pauses playing the movie and enters frame scanning mode. To scan forward one frame at a time, press the button again.
left 	Pauses playing the movie and enters frame scanning mode. To scan backward one frame at a time, press the button again.
forward scan 	Pauses playing the movie and scans forward through the movie. To scan faster, press the button again. To play the highlighted scene, press select  or play  . To resume playing from the point you paused the movie, press up  .
reverse scan 	Pauses playing the movie and scans backward through the movie. To scan faster, press the button again. To play the highlighted scene, press select  or play  . To resume playing from the point you paused the movie, press up  .
home 	Stops the movie and displays your instant Queue.



Chapter 5

Adjusting Settings on Your Netflix Player

Settings enable you to access your network, display, sound, and screensaver settings. You can also view information about your Player and reset your Player to the original factory settings.

Changing your network settings

If you install a new network router or change to a different Internet Service Provider (ISP), you need to update your network settings.

- 1 Press **home**  to go to the Home screen, and then press **up**  to activate the menu bar.

 


- 2 Highlight **settings**, and then press **select**  to display the Settings screen.


- 3 Highlight **network settings**, and then press **select** .



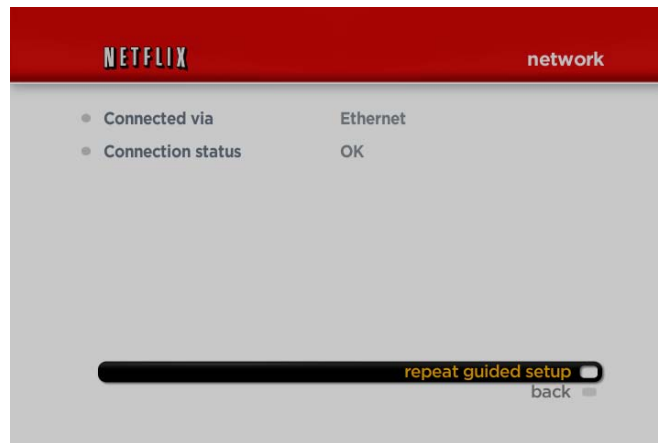


- 4 Highlight **repeat guided setup** and then press **select** .



- 5 Follow the onscreen instructions to enter your new network settings. See [“Selecting your network type”](#) for details.

- 3 Highlight **display type**, and then press **select** .

 





- 4 Press **left**  or **right**  on the remote to highlight **standard** or **widescreen**, and then press **select** .





NOTE: For widescreen TVs, select **16 : 9 widescreen** mode (also known as "full" or "stretch" mode).

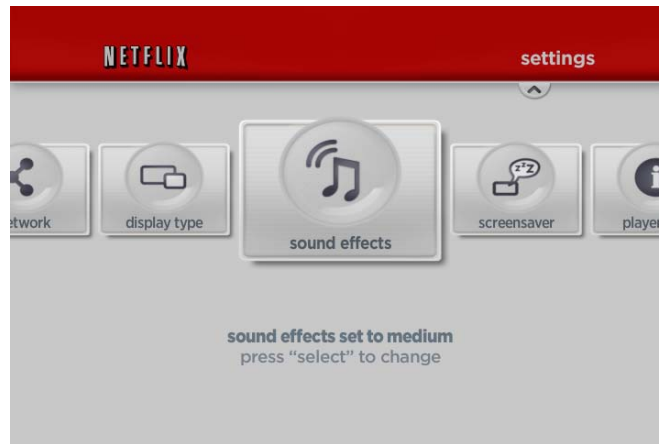 - 3 Highlight **sound effects**, and then press **select** .



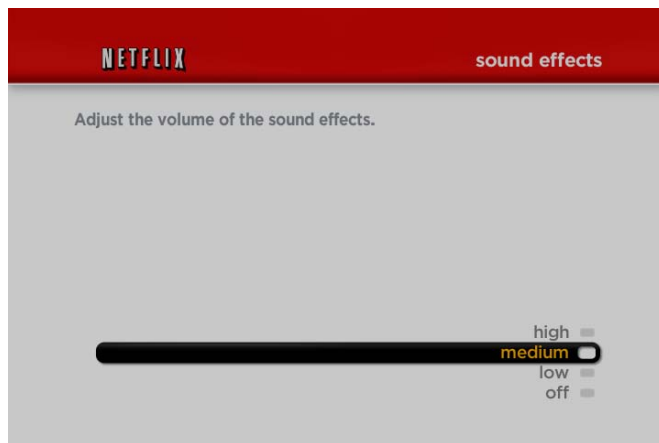


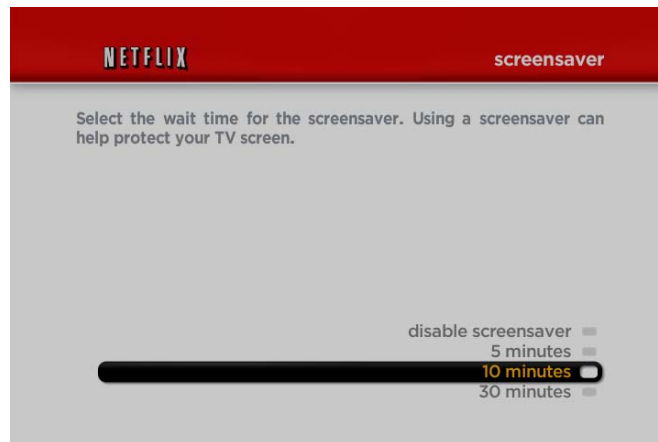 
- 4 Press **up**  or **down**  to highlight the volume level you want to use, and then press **select** .



- 3 Highlight **screensaver**, and then press **select** .





- 4 Press **up**  or **down**  to highlight the option you want to use, and then press **select** .




Viewing and updating your Player info

 
You can view information about your Player, such as the hardware and software version and the serial number, as well as your current network settings. You can also check for software updates to keep your Player up-to-date.

- 1 Press **home**  to go to the Home screen, and then press **up**  to activate the menu bar.





- 2 Highlight **settings**, and then press **select**  to display the Settings screen.


- 3 Highlight **player info**, and then press **select** .

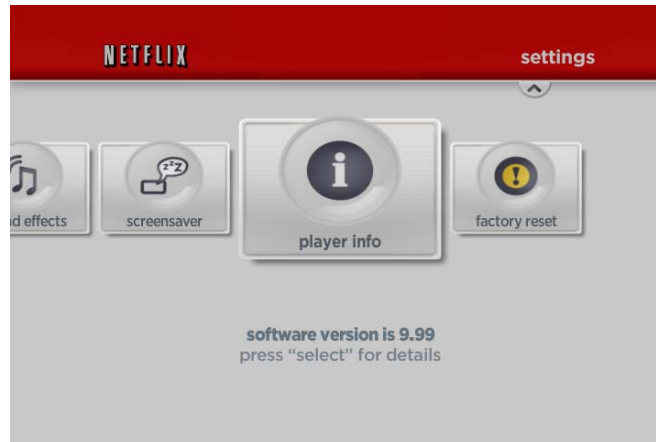

 - 4 Highlight **check for update** and then press **select** .

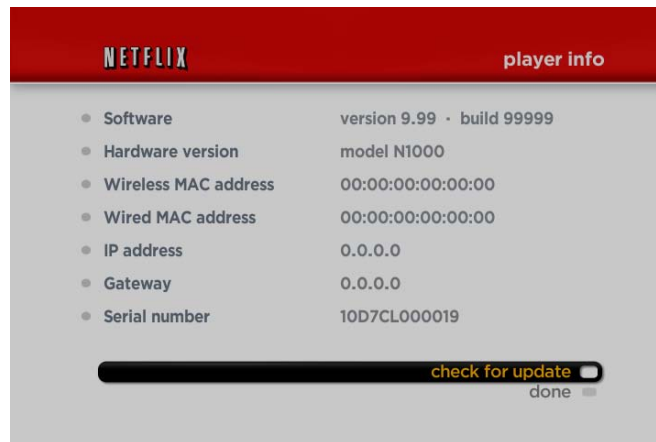

 - 5 Highlight **yes** and then press **select**  to begin the update.

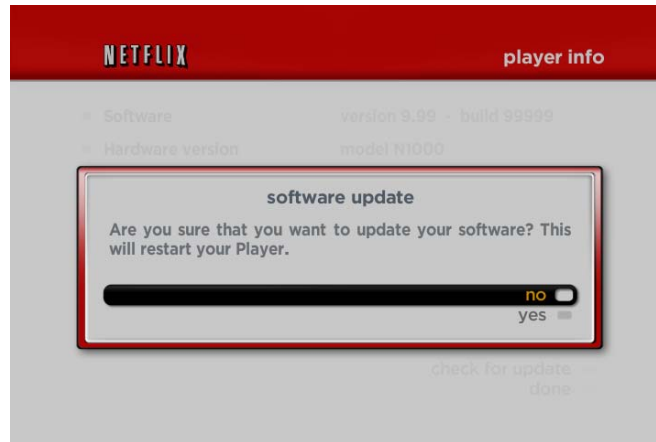



- 6 When you're Player finishes updating, it restarts and displays the Home screen.

Performing a factory reset


Performing a factory reset erases all of your settings and account information and restores your Player's original factory settings. If you plan on selling your Player, we recommend that you perform a factory reset before delivering the Player to the new owner.

WARNING: *Performing a factory reset deactivates your Player and erases all of your settings. If you want to keep your settings and keep your Player activated, do a restart instead (see ["Using the Reset button"](#) for details).*

- 1 Press **home**  to go to the Home screen, and then press **up**  to activate the menu bar.



- 2 Highlight **settings**, and then press **select**  to display the Settings screen.

- 5 When prompted, highlight **yes** to confirm that you want to reset your Player, and then press **select** .



Chapter 6

Additional Information




This section contains more information about select topics in this guide.

 
Manually entering your network's name (SSID)


If your network is setup as a hidden network that doesn't broadcast its name, you can enter the name manually.

- 1 From the Choose Wireless Network screen in Guided Setup or the Network Settings screen, highlight **not shown** and press **select** .



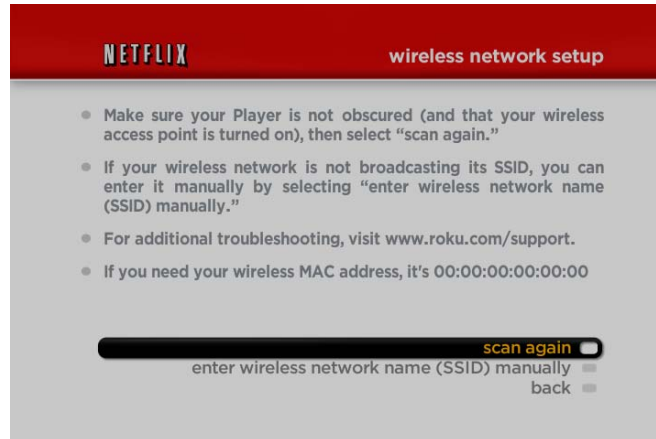

- 2 Highlight **enter wireless network name (SSID) manually**, and then press **select** .



- 3 Use the remote to highlight the first character of the network name, and then press **select**  to enter it in the box at the top of the screen. Repeat this process to enter the rest of the characters in the network name.



- 4 After you enter the network name, press **down**  to highlight **done**, and then press **select** .

Using the Reset button

You can use the Reset button to restart your Player or to perform a factory reset and restore the original factory settings.

WARNING: *Performing a factory reset deactivates your Player and erases all of your settings. If you want to keep your settings and keep your Player activated, do a restart instead.*

- To restart your Player, press the **Reset** button.
- To do a factory reset, press and hold the **Reset** button for **15 seconds**.



Understanding Player performance

The quality of the video and audio you receive via your Player is dependent on a combination of several factors:

- **Your audio/video connections.** The type of audio and video connections you use to connect your Player and your TV may impact sound and picture quality. In general, HDMI and optical audio are superior to stereo audio. Similarly, HDMI and component video are superior to S-Video. Additionally, HDMI, component video, and S-Video are all better than composite video. Use your best available option when connecting the audio and video cables to your Player.
- **Your broadband speed.** Your Internet Service Provider (ISP) determines your broadband speed. We recommend a minimum connection speed of 1.5 Mbps. For the best quality picture, a connection speed of 4.0 Mbps is required. Sometimes your broadband speed varies based on your ISP's network conditions. Contact your ISP if you have problems maintaining a fast connection that is reliable, or if you want to increase your connection speed. Many ISPs offer a variety of broadband speed options.
- **Your home network.** In many homes, the Internet connection is shared with other devices such as computers, gaming consoles, network hard drives, and so on. If any of these network devices are transferring large amounts of data across your network (such as a file transfer, online gaming, or other instances of streaming video), your sound and picture quality may be compromised.

Notices



Macrovision Statement

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

U.S. Patent Nos. 5,583,936; 6,836,549; 5,315,448; 6,381,747; 6,501,842; and 7,050,698.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This product has been tested and complies with the specifications for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which is found by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment or devices
- Connect the equipment to an outlet other than the receiver's
- Consult a dealer or an experienced radio/TV technician for assistance

Pursuant to Part 15.21 of the FCC Rules, any changes or modifications to this equipment not expressly approved by the manufacturer may cause harmful interference and void your authority to operate this equipment.

Netflix Player by Roku License Agreement and Warranty Statement

IMPORTANT: READ THIS AGREEMENT CAREFULLY AND REVIEW THIS PRODUCT MANUAL AND SAFETY INFORMATION BEFORE POWERING UP YOUR ROKU PRODUCT FOR THE FIRST TIME.

This license Agreement and Warranty Statement is the legal agreement (“Agreement”) between you (“you”) and Roku, Inc. (“Roku”) governing your use of the Netflix® Player by Roku (“Roku Product”), the software installed on the Roku Product (“Software”) and related documentation. By powering up your Roku Product for the very first time or by otherwise using the Roku Product, or by keeping (and not returning) the Roku Product past the date thirty (30) days after the original purchase date, you are indicating that you have read and understood, and agree to be bound by, the terms of this Agreement. If you do not agree to the terms and conditions of this Agreement, you are not granted any rights whatsoever in the Software contained within the Roku Product.

If you are not willing to be bound by these terms and conditions, you should not use the Roku Product and should immediately return it. In that case, Roku will refund the purchase price you have paid to Roku for the Roku Product; provided, that you must return the Roku Product in accordance with Roku’s return policies described herein or otherwise provided on Roku’s website at <http://www.roku.com>.

This Agreement may be amended by Roku, in its sole discretion, from time to time. See <http://www.roku.com> for details.

License. Subject to the terms of this Agreement, Roku grants you a nonexclusive, nontransferable license to run the Software only on and as incorporated in the Roku Product. This is a license and not a sale. You shall not (i) copy or distribute, sublicense, lease, rent or otherwise transfer the Software to any third party except with and incorporated in the Roku Product, and then not for value; (ii) modify, adapt, alter, translate, or create derivative works of the Software; (iii) decompile, disassemble, reverse engineer or other derive source code, or attempt to derive source code, from the Software; or (iv) have any of the foregoing done for you by a third party. The Software and all intellectual property rights therein, are the exclusive property of Roku or its suppliers. All rights in and to the Software not expressly granted to you in this Agreement are reserved by Roku.

Separately Licensed Code. Certain components of the software included with the Roku Product are subject to separate license terms, including “free” or “open source” software (“Separately Licensed Code”). Some of the Separately Licensed Code is licensed under the terms and conditions of the “free” or “open source” license and is not subject to the License above or the Limited Warranty below. As required by the terms of the relevant Separately Licensed Code licenses, Roku makes the “free” and “open source” code provided under such licenses, and Roku’s modifications to such code, available on Roku’s website, at no charge. The following third party software is also included.

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>).

Portions of the software are © 2006 The FreeType Project (www.freetype.org). All rights reserved

This software is based in part on the work of the Independent JPEG Group.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

Please visit <http://www.roku.com> for detailed information on our use of third party software.



Important: When emailing for an RMA number, please provide the following information with your request: (a) model number, (b) serial number, (c) problem description, (d) software version (located in the System Configuration menu), (e) date of purchase, (f) place of purchase (dealer or online place of purchase), (g) return shipping address (P.O. boxes are not accepted), and (h) proof of purchase. Note: Proof of purchase will need to be included in the return shipment in order to ensure warranty coverage. In addition, we may attempt to further troubleshoot the problem prior to issuing an RMA number. Please be prepared to provide additional information upon request.

Scope of and Limitation on Warranty. The warranty on this Roku Product is limited to the repair or replacement of defective units as described above. This warranty does not cover customer training or education, installation, set up adjustments or signal reception problems. This warranty does not cover damage due to acts of God, accident, misuse, abuse, negligence, commercial use or modification of, or to any part of, your Roku Product. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply or attempted repair by anyone other than a facility authorized by Roku to service your Roku Product. This warranty does not cover consumables (such as fuses and batteries). This warranty is valid only in the country of purchase from an authorized Roku distributor or dealer. This warranty is invalid if the factory-applied serial number and/or “Warranty Void if Removed” sticker has been altered or removed from the Roku Product.

Warranty Disclaimer. The limited warranty and remedies stated above are exclusive and in lieu of all others, oral or written, express, implied or statutory. Any and all other warranties, including implied warranties of merchantability, fitness for a particular purpose, title, noninfringement of third party rights, quiet enjoyment and accuracy are expressly excluded. Roku’s warranty does not apply to any Separately Licensed Code. These warranties only apply to Roku Products purchased from an authorized Roku dealer. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the limitations in the software and hardware warranties above may not apply to you. These limited warranties give you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

Limitation of Liability. In no event will Roku be liable for any consequential, special, exemplary, incidental and indirect damages, or for loss of revenue or profits or data or for the cost of substitute goods, whether in contract or tort (including negligence), arising out of, or in connection with this Agreement. In no event will Roku’s or its suppliers’ total cumulative liability relating to this agreement exceed the purchase price of the Roku Product. Some jurisdictions do not allow the exclusion of implied warranties or limitation of liability for certain incidental or consequential damages, so the exclusions set forth above may not apply to you.

Miscellaneous. This Agreement is the final, complete and exclusive agreement between the parties relating to the Roku Product and supersedes all prior or contemporaneous proposals, representations, understandings, or agreements relating thereto, whether oral or written. No waiver or modification of the Agreement will be valid unless signed by each party. Your right to use the Software will immediately terminate upon any breach of this Agreement. The waiver of a breach of any term hereof will in no way be construed as a waiver of any other term or breach hereof. If any provision of this Agreement is held by a court of competent jurisdiction to be unenforceable, the remaining provisions of this Agreement will remain in full force and effect. This Agreement shall be governed by the laws of the State of California without giving effect to any conflict of laws principles that may provide the application of the law of another jurisdiction. Any action or proceeding arising from or relating to this Agreement may be brought in a federal court in the Northern District of California or in state court in Santa Clara County, California, and each party irrevocably submits to the jurisdiction and venue of any such court in any such action or proceeding. The United Nations



Convention on Contracts for the International Sale of Goods shall not apply to this Agreement. Should you have any question about this Agreement, or if you desire to contact Roku, please contact us by mail at Roku Inc., 12980 Saratoga Ave., Saratoga, CA 95070.

Copyright © 2008 by Roku, Inc. All rights reserved. Roku and the Roku logo are trademarks of Roku, Inc. Other brand and product names are trademarks or registered trademarks of their respective holders.

Important Safety Instructions

- 1 Read Instructions.** All the safety and operating instructions should be read before the product is operated.
- 2 Retain Instructions.** The safety and operating instructions should be retained for future reference.
- 3 Heed Warnings.** All warnings on the product and in the operating instructions should be adhered to.
- 4 Follow Instructions.** All operating and use instructions should be followed.
- 5 Cleaning.** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 6 Water and Moisture.** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus. Do not use this product near water for example, near a bathtub, wash bowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool; and the like.
- 7 Accessories.** Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer, or sold with the product. A product and cart combination should be moved with care. Quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
- 8 Power Sources.** This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
- 9 Grounding or Polarization.** This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 10 Power Cord Protection.** Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles and the point where they exit from the product.
- 11 Overloading.** Do not overload wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 12 Object and Liquid Entry.** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

- 13 Servicing.** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 14 Damage Requiring Service.** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- When the power-supply cord or plug is damaged,
 - If liquid has been spilled or objects have fallen into the product,
 - If the product has been exposed to rain or water,
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
 - If the product has been dropped or damaged in any way, and
 - When the product exhibits a distinct change in performance, this indicates a need for service.
- 15 Heat.** The product should be situated away from heat sources such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.

