

PLAYFUL BASE

LANTERN SPEAKER BOTTLE.

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: PBL5

IMPORTANT SAFETY INSTRUCTIONS



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FCC STATEMENT:

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

1. Read these instructions

All the safety and operating instructions should be read before the product is operated.

2. Keep these instructions

The safety and operating instructions should be retained for future reference.

3. Heed all warning

All warnings on the product and in the operating instructions should be adhered to.

4. Follow all instructions

All operating and use instructions should be followed.

5. Do not use this apparatus near water

Do not use the product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.

6. Clean only with dry cloth

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/accessories specified by the manufacturer.

Before using the unit, be sure to read all operating

- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**



Portable Cart Warning

- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.**

- 14. Refer all servicing to qualified service personnel.**

Service is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.

- 15. Power Source**

The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

- 16. Overloading**

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

- 17. Object and liquid entry**

Never push objects of any kind into the product through as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

- 18. Service**

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

- 19. Replacement parts**

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire or electric shock or other hazards.

- 20. Safety check**

Upon completion of any service or repairs to this product ask the service technician to perform safety checks to determine that the product is in proper operating condition.

- 21. Damage requiring service**

Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
 - If liquid has been spilled or objects have fallen into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions.
- Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
 - When the product exhibits a distinct change in performance – this indicates a need for service.

Note:

Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into the unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.


THE MAIN FEATURES

- Bluetooth Version 4.2 ,more stable,high quality sound transimtion.
- IP65 waterproof design
- Built-in chargeble battery
- The materials of bottle: edible PC + edible silicon;BPA free, non bisphenol A and pass the Japan food sanitation law test.
- Water bottle volumn:350ml,meeting the needs of all kinds of consumers.
- Be used as flashlight or night light.

PRODUCT SPECIFICATION

- Bluetooth Version : V4. 2
- Distance of Bluetooth : covered over 10 meters
- Playing time : 4~6 hours
- Frequency Response : 80hz~20khz
- Speaker Power Output : 3W
- Built-in Lithium battery : 3. 7V 2000mAh
- Charging Battery : DC 5V/1A
- Charging time : 3~4 hours
- Volumn of the bottle : 350ml
- Materials of bottle : edible PC
- flashlight range : 50~100M
- LED Lumen : about 120LM
- IP grade : IP65
- Usage temperature : -20~40°C
- Product size : 215*70*70mm

FUNCTIONAL SPECIFICATION

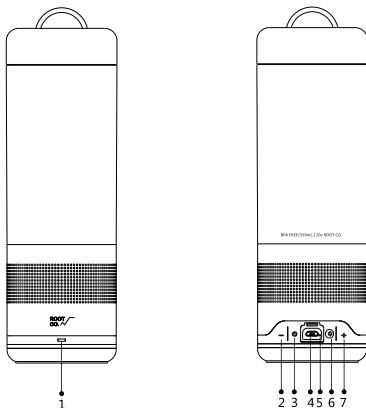

1. LED light instruction (search the Bluetooth white LED,0.5 sec flashing once, connection completed, stays bright. 1.5secs flashing once low battery warning;4 secs Flashing once automatic standby.Charging battery blue LED lights on. Blue LED is out full charging completed.)
2. Volume - (immediately press Vol - to adjust sound volumn;long time press :skip to next song)
3. Switch On-off key (long press 3 secs on/off switching; light press play/pause;; double click: bluetooth disconnected)
4. Micro USB charging (DC5V/1A)
5. Reset button
6. Flashlight switch on/off (light press turn on/turn off)
7. Volume + (light press volumn enlarge; long press skip to next song)

Notice :

1. You can automatically connect the device several times. The speaker can search the previous device for matching and connecting when it boots up.
2. If there is no connection or no music playing after 5 mins, the speaker will automatically transfer to Standby. The white LED flash 4 sec a time. If the speaker is Standby for more than 10 mins, it will turn off.
3. If the speaker shut down , use Reset button to restart.
4. When low battery, white LED 1.5sec flashing a time, please charge your speaker immediately.

ACCESSORIES

- 1*Unit
- 1*User Manual
- 1*USB charging Cable
- 1*lampshade
- 1*package bag