

## FCC WARNINGS

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## WARNINGS AND PRECAUTIONS

- Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be disposed of in normal household waste, and they should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.
- To avoid hearing damage, make sure that the volume on your music player is turned down before connecting your speakers. After placing speakers in / on your ears, gradually turn up the volume until you reach a comfortable listening level.



**WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer. For more information go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)


## Features

- Supports Bluetooth
- Built-in microphone
- DC battery power: built-in rechargeable lithium ion battery
- Battery life: approx. 3 hours

## Includes

- Micro-USB port for battery recharge
- Removable electronics for easy cleaning

## Controls

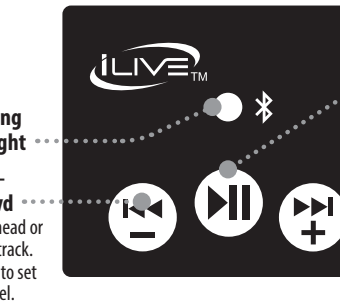

**Power/Pairing Indicator Light**

**Volume +/-**  
**Skip Rev/Fwd**

Press and hold for 7 sec. to turn the unit on and begin pairing.  
Press and hold to turn the unit On or Off.  
Press to play or pause an audio track.  
Press and hold to set the volume level.

**Power/Pair/Play/Pause/Answer**  
Press and hold for 7 sec. to turn the unit on and begin pairing.  
Press and hold to turn the unit On or Off.  
Press to play or pause an audio track.  
Press to answer an incoming call.

## Charging the Battery

- Requires a Micro-USB to USB cable (included). Charge fully before use.
- Using a **Micro-USB to USB** cable (included), connect to the USB port of a powered on computer or USB power adaptor (not included) to charge the unit. *Be sure the computer is not in sleep mode.*



## LED Indicators

STATUS	INDICATOR
Power On	Flashing blue light
Low Battery	Flashing red light
Charging	Solid red light
Charging Complete	No light
Pairing	Flashing red and blue lights

## Pairing a Bluetooth Device

- Simultaneously power on the unit and begin the pairing process by pressing and holding the **Power/Pair button** for approximately **7 seconds**. The indicator will flash red and blue. *When pairing, remain within 3 feet of the unit.*
- Using the controls on your Bluetooth device, select the **IAKB45** in your Bluetooth settings to pair. If your device requests a password, enter the default password 0 0 0 0 . Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.
- When successfully paired, the **Pairing Indicator will turn solid** and an audible chime will sound through the speakers. *After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat the above steps.*

## Playing Audio Wirelessly

1. Use the connected Bluetooth device to select and start playing audio.
2. Once audio is heard playing through the unit, you can use the controls on the connected Bluetooth Device or the unit to play, pause, and skip audio tracks.

## Speaker Removal - Smooth Knit version

Sewn into the interior of the Smooth Knit beanie is a pocket which holds the speakers and controller in place. This pocket can be accessed through an opening along the inside seam of the beanie. To remove the electronic components, gently work them out by hand through this opening. A combination of squeezing/pushing the speaker and controller from the outside, and pulling the wires through the opening on the inside, is the best removal method.

Install is the reverse of the removal. Be sure to fit the controller and speaker snugly into their places on the sides of the beanie, and pull the wires all the way through and into the pocket.

## Speaker Removal - Cable Knit version

Sewn into the outer fold of the Cable Knit beanie is a pocket which holds the speakers and controller in place. This pocket can be accessed through an opening along the top of the fold. To remove the electronic components, gently work them out by hand through this opening.

Install is the reverse of the removal. Be sure to fit the controller and speaker snugly into their places on the sides of the beanie, and push the wires all the way down and into the outer fold.

## Washing Instructions

**Important:** Do not wash this product with the electronic components still inside! They must be removed or damage and injury may result. See previous sections on speaker removal.

**Machine washing is not recommended for this product.**  
Hand wash only. Do not tumble dry in a dryer. Do not dry clean.

1. Remove the electronic components before getting wet.
2. Wash below 85° F (30° C) and do not use bleach.
3. Reshape while damp. Lay flat to dry.
4. If using an appliance to dry, use an iron on a low setting.

## Contact Information

**Website:** [www.iLiveElectronics.com](http://www.iLiveElectronics.com)  
**Email Support:** [prodinfo@dpiinc.com](mailto:prodinfo@dpiinc.com)  
**Email Parts:** [partsinfo@dpiinc.com](mailto:partsinfo@dpiinc.com)  
**Phone Support:** 1-888-999-4215

## Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to:  
**[www.iLiveElectronics.com](http://www.iLiveElectronics.com)**

## International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at:  
**[www.iLiveElectronics.com](http://www.iLiveElectronics.com)**  
Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en:  
**[www.iLiveElectronics.com](http://www.iLiveElectronics.com)**  
Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur:  
**[www.iLiveElectronics.com](http://www.iLiveElectronics.com)**



*Cable Knit*



*Smooth Knit*

## **Wireless Music Beanie**

User's Guide for IAKB45 - Cable and Smooth Knit Versions