



ZoneFlex R310 Access Point Quick Setup Guide

This *Quick Setup Guide* provides step-by-step instructions on how to set up your Ruckus Wireless ZoneFlex R310 access point. After completing the steps in this guide, you will be able to place the access point at your site and provide network access to wireless clients. The rest of this document refers to the ZoneFlex R310 access point as an AP.

Note:

The minimum software revision for the AP is base image 100.x or later, SmartZone 3.2 or later, or ZoneFlex 10.0 or later.

The rest of this document collectively refers to the SCG SZ, vSZ, ZD, and other controllers as Ruckus Wireless controllers.

BEFORE YOU BEGIN


Before deploying your Ruckus Wireless device, please check the Ruckus Wireless Web site for the latest software and release documentation.

- Release Notes and User Documents are available at <http://support.ruckuswireless.com/documents>
- Software Upgrades are available at <http://support.ruckuswireless.com/software>
- Open Source information is available at http://support.ruckuswireless.com/open_source

THIS GUIDE IN OTHER LANGUAGES

- 请从以下网站获得该指南的简体中文版 <https://support.ruckuswireless.com>
- Vous trouverez la version française de ce guide à l'adresse suivante <https://support.ruckuswireless.com>
- このガイドの日本語版は <https://support.ruckuswireless.com> をご覧ください
- 이 가이드의 한국어 버전은 웹 사이트 (<https://support.ruckuswireless.com>) 에서 확인하시기 바랍니다
- Veja a versão em português (Brasil) deste guia em <https://support.ruckuswireless.com>
- Puede ver la versión en español (América Latina) de esta guía en <https://support.ruckuswireless.com>

Figure 1. ZoneFlex R310 AP

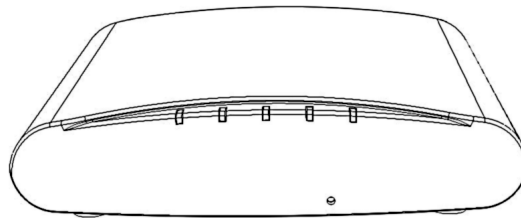

PACKAGE CONTENTS

- One ZoneFlex R310 access point
- Two mounting screws and plastic wall anchors
- One T8 5mm M2.5 Torx locking security screw
- One unit removal pin
- Regulatory flyer
- Product warranty statement
- Declaration of conformity, if required
- *Ruckus Wireless AP Getting Started Guide*
- This *Quick Setup Guide*

CONFIGURING THE AP

- [Step 1: Collecting the AP MAC Address](#)
- [Step 2: Collecting Setup Requirements, Hardware, and Tools](#)
- [Step 3: Connecting Your Computer to the AP](#)
- [Step 4: Preparing Your Computer for AP Setup](#)
- [Step 5: Logging Into the AP Web Interface](#)
- [Step 6: Customizing the Wireless Settings](#)
- [Step 7: Placing the AP at the Site](#)
- [Step 8: Verifying the Installation](#)

Step 1: Collecting the AP MAC Address

- Write down the MAC address (12 alphanumeric digits) from the outside of the AP.

Important!

If the AP is to be managed by a Ruckus Wireless controller, then follow the controller user documents to connect the AP to your local network and configure it for initial operation. In that case, you may not need to complete the following steps.


Step 2: Collecting Setup Requirements, Hardware, and Tools

- A computer with Ethernet adapter running Windows 7 or equivalent, with Firefox or equivalent web browser.
- One Cat 5e (or better) Ethernet cable.
- T8 Torx screwdriver.
- An AC-to-12VDC power adapter (sold separately)
--OR--
an 802.3af-compliant Power over Ethernet (PoE) switch or PoE injector.

Step 3: Connecting Your Computer to the AP

- A** After removing the AP from its package, place it next to your computer.
- B** Using an Ethernet cable, connect your computer's network port to the **POE IN** port on the AP.
- C** Connect the AC power adapter (sold separately) to the **12VDC** AP port, and plug the AC power adapter into a convenient and protected AC power source.
- Alternatively, connect the **POE IN** port to a PoE injector or PoE switch for both power and network connectivity.

Figure 2. AP rear panel

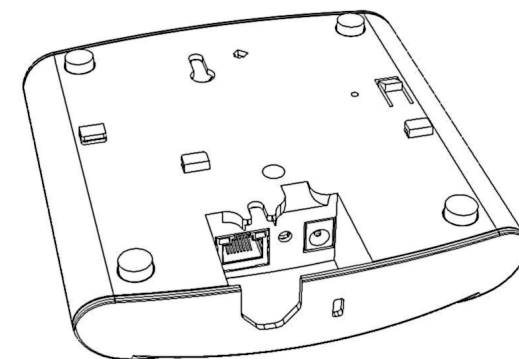

- D** After bootup, verify that the **PWR** LED on the AP is a steady green.

Step 4: Preparing Your Computer for AP Setup

Note:

The following procedures assume that Windows 7 is the operating system. Procedures for other operating systems are similar.

- A** On your Windows 7 computer, configure your network adapter from the *Local Area Connection* settings as follows:
- **Start > Control Panel > Network and Sharing Center > Change Adapter Settings**

- B** Edit the TCP/IPv4 address settings as follows:
- **Local Area Connection > Properties > Internet Protocol Version 4 (TCP/IPv4) > Properties**

The *Internet Protocol Version 4 (TCP/IPv4) Properties* dialog box appears.

Important!

Write down all of the currently active settings so you can restore your computer to its current configuration when this procedure is completed.

- C** Select *Use the following IP address* (if it is not already selected) and then make the following entries:
- *IP address*: **192.168.0.22** (or any available address in the 192.168.0.x network, except 192.168.0.1, which is the default used by the ZoneFlex R310 AP)
 - *Subnet mask*: **255.255.255.0**
 - Leave the *DNS server* and *Default gateway* fields empty.
- D** Click **OK** to save your changes. Your changes are put into effect immediately.

Step 5: Logging Into the AP Web Interface

As specified in [Step 4: Preparing Your Computer for AP Setup](#), the computer should be connected to your AP through the Ethernet port and powered on, ready for setup.

- A** On your computer, open a Web browser window.
- B** In the browser, enter **https://192.168.0.1** to connect to the AP.
- C** Press **<Enter>** to initiate the connection. When a security alert dialog box appears, click **OK/Yes** to proceed.
- D** When the *Ruckus Wireless Admin* login page appears, enter the following:
- *Username*: **super**
 - *Password*: **sp-admin**
- E** Click **Login**.

Step 6: Customizing the Wireless Settings

- A** On the AP Web interface menu, click **Configuration > Wireless > 5G** or **Configuration > Wireless > 2.4G**. The *Configure > Wireless > Common* options appear.
- B** Verify that the following options are active:
- *Channel*: SmartSelect
 - *Channel Width*: 20 MHz, 40 MHz, or 80 MHz (default).

- *Country Code*: Select the country in which the AP will be operating.

Note:

If you purchased the AP in the United States, then this value is fixed to United States at the factory and is not user configurable. If you purchased the AP outside the United States, then verify that the value is set to your country or region. Selecting the correct country code ensures that the AP uses only the radio channels allowed in your country or region.

- C** Click **Update Settings** if you made any changes.
- D** Click any of the eight **Wireless #** (Wireless LAN Number) tabs at the top of the page.
- E** In *Wireless Availability*, click **Enabled**.
- F** Delete the text in the *SSID* field, and then type a name for your network that will help your users identify the AP in their wireless network connection application.
- G** Click **Update Settings** to save your changes.
- H** If required, repeat Steps D-G for any other **Wireless #** (Wireless LAN Number) interface that you want to enable.
- I** Click **Logout** to exit the Web interface.
- J** Disconnect the AP from the computer and from the current power source, and then restore your computer to its original network configuration.

Step 7: Placing the AP at the Site

- A** Move the AP to its permanent location (accessible to both AC or PoE power and network connection).
- B** Use a Cat 5e (or better) Ethernet cable to connect your network (or PoE injector or switch) to the **POE IN** port on the AP.
- OR--
- If you are not using an 802.3af-compliant PoE switch or PoE injector, then connect the AC power adapter to the AP, and then to a convenient power source.
- C** Verify that the **POE IN** port LED is lit.

Step 8: Verifying the Installation

- A** Using any wireless-enabled computer or mobile device, search for and select the wireless network you previously configured.
- B** If you can connect, open a browser and link to any public Web site. Congratulations! Your wireless network is active and ready for use. If you need to configure advanced wireless settings, such as enabling security, refer to the *Ruckus Wireless Indoor AP User Guide*.

INSTALLING THE AP

The AP can be mounted on a flat surface, on a drop-ceiling T-bar, or on a pole or flat surface. Refer to the following sections:


- [Mounting on a Flat Surface](#)
- [Removing the AP from Flat-Surface Mounting Screws](#)
- [Mounting the AP on a Drop-Ceiling T-Bar](#)
- [Removing the AP from a Drop-Ceiling T-Bar](#)
- [Mounting the AP on a Flat Surface or Pole Using the Optional Secure Mounting Bracket](#)
- [Removing the AP from the Optional Secure Mounting Bracket](#)

Mounting on a Flat Surface

The factory-supplied mounting screws and plastic wall anchors allow you to attach the AP to a wall or ceiling.

- A** Use the Mounting Template on the last page of this guide to mark the locations for two drill holes on the mounting surface.
- B** Use a 4.75mm (3/16") drill bit to drill holes approximately 25mm (1") deep into the mounting surface.
- C** Insert the factory-supplied anchors (A in [Figure 3](#)) and mounting screws (B) into the mounting surface, leaving approximately 6 mm (1/4") of the screw heads protruding from the surface.

Figure 3. Mounting the AP on a flat surface

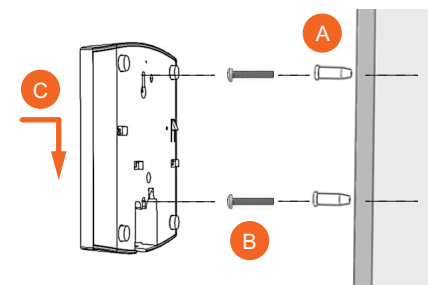


- D** Place the AP onto the mounting screws so that the screw heads enter the keyholes on the AP enclosure (C), and gently press down on the AP until the locking tab in the upper AP keyhole locks the AP onto the top mounting screw.

Removing the AP from Flat-Surface Mounting Screws

- A** To remove the AP from the factory-supplied mounting screws, gently press the unit removal pin (A in [Figure 4](#)) into the access hole on the end of the AP to release the bracket locking tab in the upper keyhole.

Figure 4. Removing the AP from the screw heads

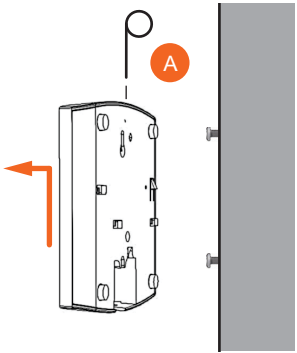

- B** Push the AP up and pull it away from the mounting screw heads.

Mounting the AP on a Drop-Ceiling T-Bar

- A** Orient the AP so that the T-bar is positioned between the T-bar clips as shown in [Figure 5](#), then rotate the AP until the third T-bar clip catches the T-bar and the latch locks the T-bar in place ([Figure 6](#)).

Figure 5. Initial position


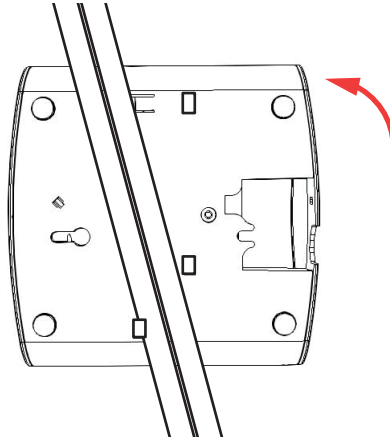


Figure 6. Final position

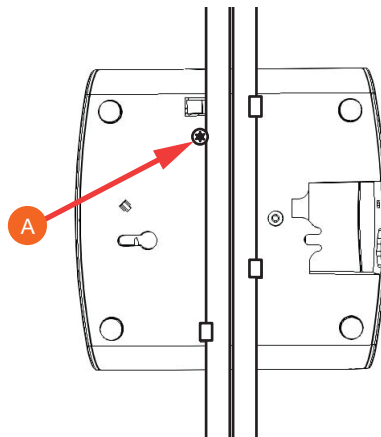

- B** (OPTIONAL, for added security.) Using a Torx T8 screwdriver, insert the locking screw (A) into the hole near the latch to lock the AP in place.

Removing the AP from a Drop-Ceiling T-Bar

- To remove the AP, first remove the security screw, then depress the latch while rotating the AP so that the T-bar clips disengage the T-bar.

Mounting the AP on a Flat Surface or Pole Using the Optional Secure Mounting Bracket

The customer-ordered Ruckus Wireless secure mounting bracket kit (ordering part number 902-0120-0000) includes a metal mounting bracket and provides greater security when attaching the AP to flat surfaces (walls and ceilings) and to poles.

- If you are mounting the AP on a flat surface, then you will also need an electric drill with a 4.75mm (3/16") drill bit, and the four No. 6 zinc plated screws and plastic wall anchors included with the kit.
- If you are mounting the AP on a truss or pole, then you will also need the two customer-supplied stainless steel pipe clamps.

Continue with the following:


- A** If you are mounting the AP on a flat surface, then use the secure mounting bracket as a template to mark the locations for four drill holes on the mounting surface. There are four screw holes available on the secure mounting bracket.

Fasten the bracket to the flat surface using four mounting screws and plastic wall anchors and continue with [Step C](#).

- B** If you are mounting the AP on a pipe or pole, then feed the two customer-supplied stainless steel clamps through the slots on the secure mounting bracket. Use common hand tools to tighten the clamps around the pipe or pole.

After the bracket is attached, continue with [Step C](#).

Figure 7. Attaching the AP to the secure mounting bracket

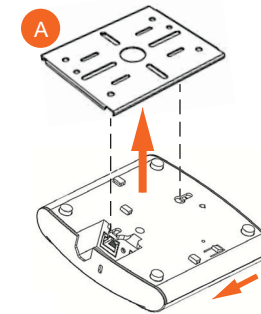


- C** Insert the two studs on the secure mounting bracket (A) into the keyholes on the bottom of the AP.
- D** Slide the AP toward the Ethernet port until the locking tab in the upper AP keyhole locks the AP onto the top mounting bracket stud.

Removing the AP from the Optional Secure Mounting Bracket

- A** Gently press the unit removal pin (A in [Figure 8](#)) into the access hole on the end of the AP to release the bracket locking tab in the upper keyhole.

Figure 8. Removing the AP from the secure mounting bracket

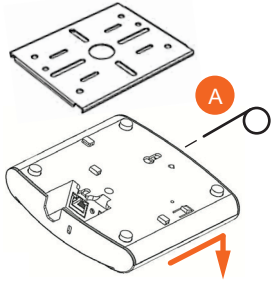


- B** Slide the AP toward the unit removal pin and remove the AP from the bracket.

TROUBLESHOOTING

- **CAUTION:** If required, you can reset the AP to its factory default settings by using a straightened paper clip to press and hold the reset button located between the **POE IN** and **12VDC** ports, for six or more seconds. **DO NOT DO THIS UNLESS SO INSTRUCTED.** (Doing this resets the AP IP address to 192.168.0.1.)
- **NOTE:** After a reset, you can access the internal AP web interface using <https://192.168.0.1>. Your device must use any other unused address from 192.168.0.2 through 192.168.0.254, with subnet mask 255.255.255.0. The username is **super**, and the password is **sp-admin**. Refer to the *Ruckus Wireless Indoor AP User Guide* for information on configuring and operating the AP. This document is available at <https://support.ruckuswireless.com>

Mounting Template:

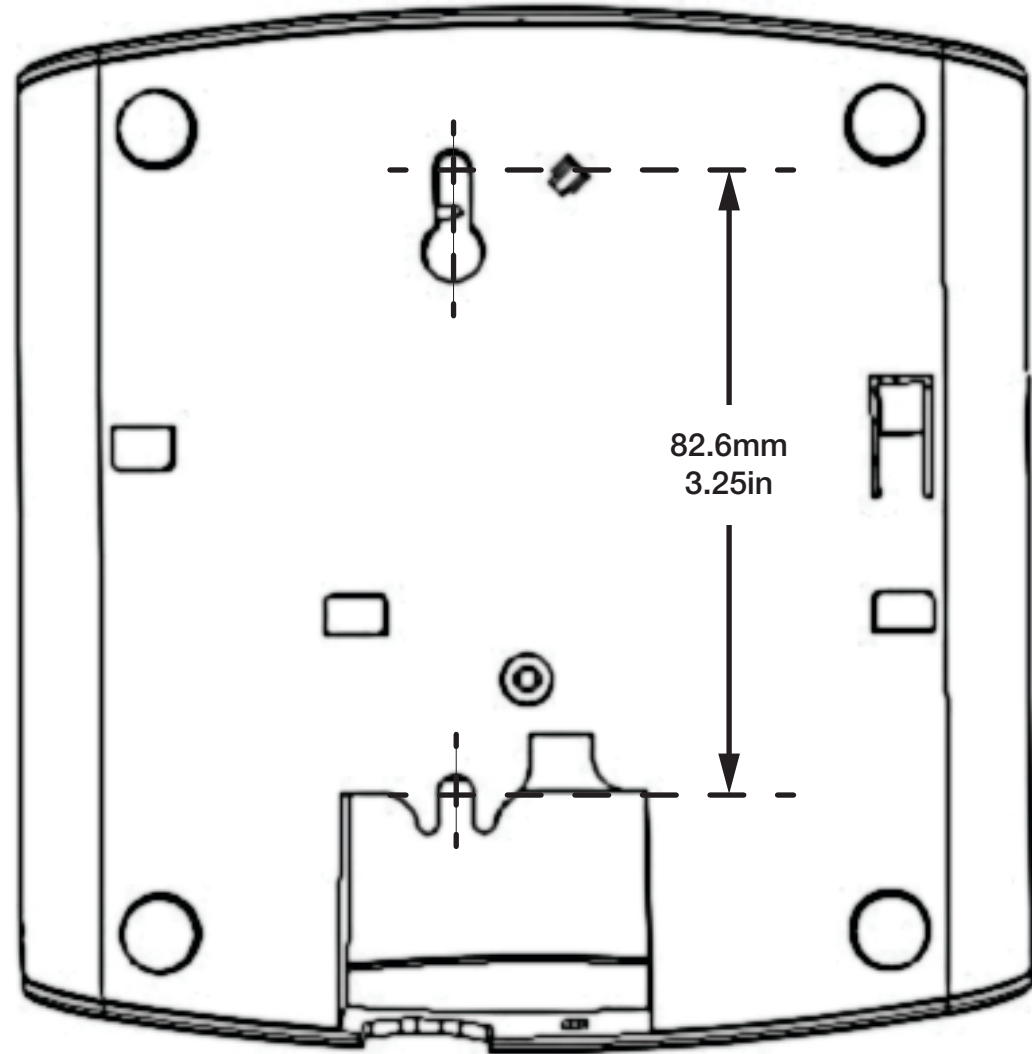

Important

The equipment is to be connected only to PoE networks without routing to the outside plant.

Federal Communications Commission Notices

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this equipment that have not been approved by Ruckus Wireless may void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Statement

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems; the maximum antenna gain permitted for devices in the bands 5250-5350 MHz and 5470-5725 MHz shall comply with the e.i.r.p. limit; and the maximum antenna gain permitted for devices in the band 5725-5825 MHz shall comply with the e.i.r.p. limits specified for point-to-point and non point-to-point operation as appropriate.

Le dispositif de fonctionnement dans la bande 5150-5250 MHz est réservé à une utilisation en intérieur pour réduire le risque d'interférences nuisibles à la co-canal systèmes mobiles par satellite, le gain d'antenne maximal autorisé pour les appareils dans les bandes 5250-5350 MHz et 5470-5725 MHz doit se conformer à la pire limite, et le gain d'antenne maximal autorisé pour les appareils dans la bande 5725-5825 MHz doivent être conformes avec le pire limites spécifiées à point-à-ponctuelles et non point-à-point de fonctionnement selon qu'il convient.

Operation in the 5600-5650 MHz band is not allowed in Canada. High-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

Opération dans la bande 5600-5650 MHz n'est pas autorisée au Canada. Haute puissance radars sont désignés comme utilisateurs principaux (c.-à-d. utilisateurs prioritaires) des bandes 5250-5350 MHz et 5650-5850 MHz et que ces radars pourraient causer des interférences et / ou des dommages à dispositifs LAN-EL.

Radiation Exposure Statement

The device has been found to be compliant to the requirements set forth in CFR 47 Sections 2.1091 and Industry Canada RSS-102 for an uncontrolled environment. The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

Le dispositif a été jugé conforme aux exigences énoncées dans les articles 47 CFR 2.1091 et Industrie Canada RSS-102 pour un environnement non contrôlé. L'antenne (s) utilisée pour ce transmetteur doit être installé pour fournir une distance de séparation d'au moins 20 cm de toutes les personnes et ne doit pas être co-localisés ou fonctionner en conjonction avec une autre antenne ou transmetteur.

Mexico Statement

"La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada."

Professionally Installed Products

The product is to be installed according to the installation instructions. The Use/Operator does not have access to the device once the device is installed and in use. Provisions for permanent grounding are provided.

1. Installation personal: This product is designed for specific application and needs to be installed by a qualified personal who has RF and related rule knowledge. The general user shall not attempt to install or change the setting.
2. Installation location: The product shall be installed at a location where the radiating antenna can be kept 20 cm from nearby person in normal operation condition to meet regulatory RF exposure requirement. Additionally, installation locations with 35km of Terminal Doppler Weather Radar locations shall follow instructions below.
 - a. Any installation of either a master or a client device within 35 km of a TDWR location shall be separated by at least 30 MHz center-to-center) from the TDWR operating frequency.
 - b. A voluntary WISPA sponsored database has been developed that allows operators and installers to register the location information of the UNII devices operating outdoors in the 5470 – 5725 MHz band within 35 km of any TDWR location (see <http://www.spectrumbridge.com/udia/home.aspx>). This database may be used by government agencies in order to expedite resolution of any interference to TDWRs.
 - c. Addition information can be obtained from the FCC Knowledge Database, Publication Number 443999. <https://apps.fcc.gov/oetcf/kdb/index.cfm>
3. External antenna: Use only the antennas which have been approved by Ruckus Wireless. The non-approved antenna(s) may produce unwanted spurious or excessive RF transmitting power which may lead to the violation of FCC limit and is prohibited.
4. Installation procedure: Please refer to user's manual for the detail.
5. Warning: Please carefully select the installation position and make sure that the final output power does not exceed the limit set force in US Rule CFR 47 part 15 section 15.247 & 15.407. The violation of the rule could lead to serious federal penalty.

External Antenna Notice

This radio transmitter has been approved by the FCC and Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (identifier le dispositif par son numéro de certification ou son numéro de modèle s'il fait partie du matériel de catégorie I) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Model: ZoneFlex 7441 [ZF7441]: This device has been designed to operate with an antenna having maximum gain of 2dBi. Other antenna types or having greater gain are strictly prohibited for use with this device. The required antenna impedance is 50 ohms.

Model: ZoneFlex 7372E [ZF7372E]: This device has been designed to operate with an antenna having maximum gain of 7dBi. Other antenna types or having greater gain are strictly prohibited for use with this device. The required antenna impedance is 50 ohms.

Products intended to be powered by an external power supply:

Caution –This product is intended to be supplied by a Listed Direct Plug-In Power Unit marked Class 2 or LPS (sub-clause 2.5 of standard EN 60950-1). Available Ruckus power supplies intended for product operation are identified in the product datasheet. The last two digits of the power supply part number represent the country code. For additional applicable power supplies/options, see user instructions and product datasheet.

Medical Statement

Ruckus Wireless Access Points shall only be used in ME systems where the intended EM ENVIRONMENT does NOT rely on the WLAN radio link for BASIC SAFETY or ESSENTIAL PERFORMANCE of the ME SYSTEM.

Australia Statement

This device complies with the ACMA requirements for a Wi-Fi device namely Radio Communications (Low Impact Potential Devices) Class Licence 2000 Amd. 1:2007 and Radiocommunications (Compliance Labelling – Electromagnetic Radiation) Notice 2003. The equipment complies with the ACMA requirements for radiation exposure for a "general user/non-aware user". This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. This equipment complies with the Australian safety requirements and should only used with the specified power adapter according to the product datasheet.

Brazil Statement

For Brazil, those products are designed for specific application and needs to be installed by a qualified personal who has RF and related rule knowledge. Regarding the operation on range of 5150 MHz to 5350 MHz, the average output power of the equipments must be adjusted to the maximum limit of - 0,48 dBm and for 5470 MHz to 5725 MHz, the average output power of the equipments must be adjusted to the maximum limit of 6,44 dBm.

Para o Brasil, esses produtos são projetados para aplicações específicas e necessidades a serem instalados por um pessoal qualificado que tenha conhecimento regra RF e afins. Em relação à operação em série de 5150 MHz a 5350 MHz, a potência média de saída dos equipamentos deve ser ajustado para o limite máximo de - 0,48 dBm e para 5470 MHz a 5725 MHz, a potência média de saída dos equipamentos deve ser ajustada ao limite máximo de 6,44 dBm.

Taiwan Statement

本產品為 5.25-5.35 GHz 頻帶內操作之 UNII 設備，僅限於室內使用 The frequency band 5250 – 5350 MHz is restricted to indoor use.

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

The control, adjustment and on/off operation of this device does not violate the "Administrative regulations on low power radio waves radiated devices". Any adjustments to the device should be carried out or be monitored by a specialist who has expertise on radio frequency devices. Replacement of components which may lead to the violation to the regulations is not allowed. Without permission granted by the NCC, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to an approved low power radio-frequency devices. The low power radio-frequency device shall not influence aircraft security and interfere with legal communications; if found, the user shall cease operating immediately until no interference is achieved. The said legal communications means radio communications is operated in compliance with the Telecommunications Act. The low power radio-frequency devices must not be susceptible with the interference from legal communications or ISM radio wave radiated devices.

European Union Notices and National Restrictions



AT	FI	IT	PL	GB	RO
BE	FR	LV	PT	IS	TR
CY	DE	LT	SK	LI	
CZ	GR	LU	SI	NO	
DK	HU	MT	ES	CH	
EE	IE	NL	SE	BG	

The frequency band 5150 – 5350 MHz is restricted to indoor use

Italy

This product meets the National Radio Interface and the requirements specified in the National Frequency Allocation Table for Italy. Unless operating within the boundaries of the owner's property, the use of this 2.4 GHz Wireless LAN product requires a 'general authorization'. Please check with <http://www.comunicazioni.it/> for more details.

Questo prodotto è conforme alla specifiche di Interfaccia Radio Nazionali e rispetta il Piano Nazionale di ripartizione delle frequenze in Italia. Se non viene installato all'interno del proprio fondo, l'utilizzo di prodotti Wireless LAN a 2.4 GHz richiede una "Autorizzazione Generale". Consultare <http://www.comunicazioni.it/> per maggiori dettagli.

Belgium

The Belgian Institute for Postal Services and Telecommunications (BIPT) must be notified of any outdoor wireless link having a range exceeding 300 meters. Please check <http://www.bipt.be> for more details. / *Draadloze verbindingen voor buitengebruik en met een reikwijdte van meer dan 300 meter dienen aangemeld te worden bij het Belgisch Instituut voor postdiensten en telecommunicatie (BIPT). Zie <http://www.bipt.be> voor meer gegevens. / Les liaisons sans fil pour une utilisation en extérieur d'une distance supérieure à 300 mètres doivent être notifiées à l'Institut Belge des services Postaux et des Télécommunications (IBPT). Visitez <http://www.ibpt.be> pour de plus amples détails.*

Česky [Czech]	Ruckus Wireless tímto prohlašuje, že tento Radio LAN je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Dansk [Danish]	Undertegnede Ruckus Wireless erklærer herved, at følgende udstyr Radio LAN overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Deutsch [German]	Hiermit erkläre Ruckus Wireless, dass sich das Gerät Radio LAN in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
Eesti [Estonian]	Käesolevaga kinnitab Ruckus Wireless seadme Radio LAN vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
English	Hereby, Ruckus Wireless declares that this Radio LAN is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Español [Spanish]	Por medio de la presente Ruckus Wireless declara que el Radio LAN cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Ελληνική [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Ruckus Wireless ΔΗΛΩΝΕΙ ΟΤΙ Radio LAN ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/EK.
Français [French]	Par la présente Ruckus Wireless déclare que l'appareil Radio LAN est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Italiano [Italian]	Con la presente Ruckus Wireless dichiara che questo Radio LAN è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latviski [Latvian]	Ar šo Ruckus Wireless deklarē, ka Radio LAN atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių [Lithuanian]	Šiuo Ruckus Wireless deklaruoją, kad šis Radio LAN atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Nederlands [Dutch]	Hierbij verklaart Ruckus Wireless dat het toestel Radio LAN in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Malti [Maltese]	Hawnhekk, Ruckus Wireless, jiddikjara li dan Radio LAN jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Direttiva 1999/5/EC.
Magyar [Hungarian]	Alulírott, Ruckus Wireless nyilatkozom, hogy a Radio LAN megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Polski [Polish]	Niniejszym Ruckus Wireless oświadczam, że Radio LAN jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
Português [Portuguese]	Ruckus Wireless declara que este Radio LAN está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Slovensko [Slovenian]	Ruckus Wireless izjavlja, da je ta Radio LAN v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Slovensky [Slovak]	Ruckus Wireless týmto vyhlasuje, že Radio LAN spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Suomi [Finnish]	Ruckus Wireless vakuuttaa täten että Radio LAN tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Svenska [Swedish]	Härmed intygar Ruckus Wireless att denna Radio LAN står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Íslenska [Icelandic]	Hér með lýsir Ruckus Wireless yfir því að Radio LAN er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
Norsk [Norwegian]	Ruckus Wireless erklærer herved at utstyret Radio LAN er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.