

# FreshFun

User Guide

 


Y34A FreshFun i50F


# WELCOME

- Congratulations on your purchase of the **FreshFun** mobile phone. Your phone provides many functions which are practical for daily use, such as a hands-free loudspeaker, camera, MP3 player, Ultra clear video
- You can read the manual to understand how to use **FreshFun** mobile phone and experience the well-established functions and simple operation method. Please use the original accessory in order to achieve the best use of effects. **FreshFun** shall not be responsible for any damage in machinery due to use of non-original components.

# YOUR PHONE-FRONT VIEW

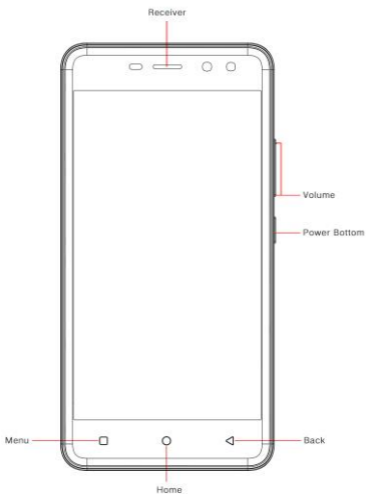

## YOUR PHONE-BACK VIEW

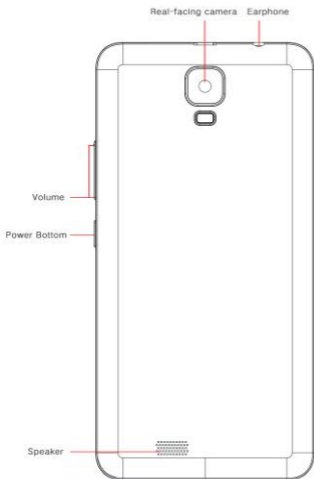 

## CHARGE THE BATTERY



Connect this end to phone's USB port.

**Tip:** Be sure to charge your phone's battery completely after inserting it in the phone for the first time.

 
## INSERT SIM AND Micro SD CARD



Please insert the SIM card(s) according to the label on the phone. Make sure that the clipped corner of the SIM card and the metallic contacts are facing the correct direction. Slide the SIM card into the slot until it doesn't move up any further.

Micro SD card slot is above the SIM card slot. The direction in which the micro SD card has to be inserted into the designated slot is shown by a label on the phone.

**Tip:** For additional media storage insert a micro SD card.

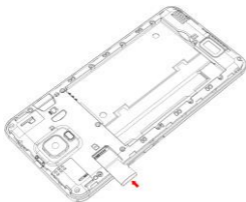


## TURN THE PHONE ON& OFF



Hold down the power button to turn the phone on.

 Hold down the power button, then touch Power off to turn the phone off

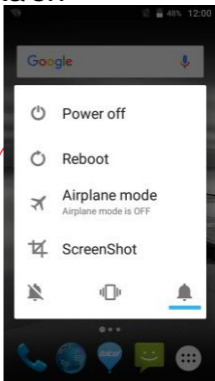

## DIM LOCK & WAKE THE PHONE

When the power is on and you want to dim the screen, press the power button.



When the screen is dimmed and you want to wake the phone, press the power button and then drag the lock to the right



Google



Google



Claro Ideas



Claro apps



Play Store



# HOME SCREEN



Phone status bar and notifications

Touch and hold an empty spot to change the wallpaper

Touch it to main menu

 
Touch it to enter message

Touch it to Telcel

Touch it to enter web

Touch it to enter dial pad interface

# APPS

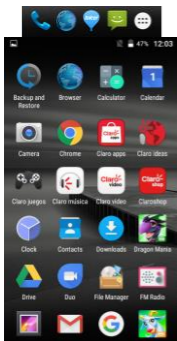


1. Touch it to enter app tray.
2. Touch an app to launch it

# STATUS BAR

 The status bar shows your phone's status and notifications. (Notifications are described on the next page.)











Notification icons

Status icons



## Status icons

 The following status icons may appear on your screen:

Icon	Statement	Icon	Statement
	SIM Network signal level		Headset is inserted
	Indicates battery capacity		Bluetooth is activated
	Unread messages		Wi-Fi is connected
	Missed calls		Airplane mode is activated
	Alarm is activated		USB is connected


## NOTIFICATION PANEL

The notification panel is your center for new events: like new e-mail, voicemail, updates, and more.

Drag down to display notifications

Touch a notification to respond

 
 
## MAKE & ANSWER A CALL

1. From the Home screen, touch 

2. Touch ,

Dial a number using the dial pad.

3. Touch to initiate the call 

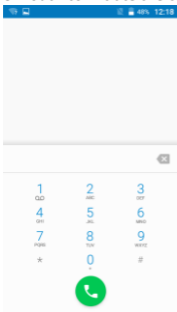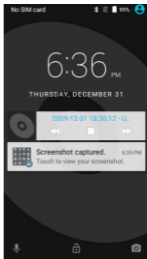

Answer a call


Drag 

Decline a call

Drag 




## VOLUME CONTROL WHEN CALLING

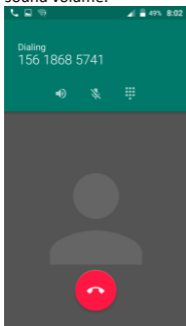 Volume key is at the left side of the phone. During a conversation, you can press the volume key to tune the sound volume.



## SEND A TEXT



 
1. From the Home screen, touch 
2. Touch 
3. Touch the To field, then enter a recipient.
4. Touch the Type message field, then enter a message
5. Touch  Send the message

## ADDING EMAIL ACCOUNTS

The first time you open Email, you are prompted to set up an email account. After that, you can configure Email to send and receive email from additional accounts.

To add an email account:

- 1) Tap the e-mail icon. In Your account interface, tap Next. In e-mail address option, enter your e-mail address. In password option, → enter your e-mail password. Tap Next.
- 2) Filling the email address and password, tap next to setup email
- 3) Tap next to enter your email.

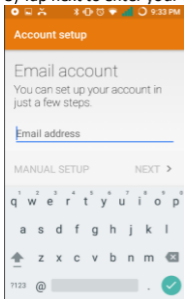

# SETTINGS

## the settings for various features of the phone

Get to know the settings in your phone so that you can personalize them to your own requirements. Go to Settings to configure how your phone looks, sounds, communication, privacy, and operations in a variety of ways:

<b>Wi-Fi</b>	You can use Wireless & Network settings to manage your SIM card, configure and manage connections to networks and devices by using Wi-Fi. You also can set Bluetooth, data usage, airplane mode, VPN, tethering & portable hotspot and mobile networks in this interface.
<b>Audio profiles</b>	There are four profiles: General, Silent, Meeting and Outdoor. You can set the profiles according to different conditions.
<b>Display</b>	You can set Wallpaper, Auto-rotate screen, Brightness, Daydream, wireless display, Sleep and Font size in this interface.
<b>Storage</b>	Use the Storage settings to monitor the used and available space on your phone and on your SD card and to manage your SD card.
<b>Battery</b>	You can view your battery status, battery level and battery use in this interface.



<b>Apps</b>	You can use the Applications settings to view details about the applications installed on your phone, to manage their data and force them to stop, to view and control currently running services, and to view the storage used by applications, etc.
<b>Location</b>	You can turn on Wi-Fi & mobile network location, GPS satellites, etc through this function.
<b>Security</b>	You can set the parameters about security through this function.
<b>Language &amp; input</b>	Use the Language & Keyboard settings to select the language for the text on your phone and for configuring the input method.
<b>Backup &amp; reset</b>	You can backup your data and reset your phone in this interface.
<b>Add account</b>	You should add account first before using this function.
<b>Data &amp; time</b>	You can use Date & Time settings to set your preferences for how dates are displayed. You can also use these settings to set your own time and time zone, rather than obtaining the current time from the network, etc.
<b>Timer switch machine</b>	You should set a certain time, when the time arrive, the phone would power on/off automatically.

## Accessibility

Enable your installed accessibility applications and adjust related settings.

## About phone

This function enables you to view some phone related information.

## SET A RINGTONE



Press **Settings** **Profiles** **audio**, select the profiles you want to set, you can customize the ringtone and volume of incoming call, notification ringtone in this interface.

 
## MULTIMEDIA

*listen it, watch it, capture it, enjoy it!*

## FM RADIO

1. Pull out the telescopic antenna or insert earphone, then Tap the Power icon to stop or play FM.
2. Tap the forward by 0.1 MHz or scroll the knob icon to change channel frequency. Press volume key to adjust the volume.
3. Tap Auto search, Record and Favorites icon to adjust.

# MUSIC

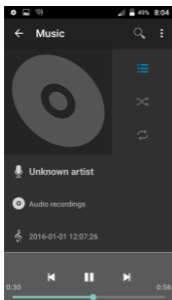

## Controls


Play/Pause

Touch 

Previous/Next

Touch 

Rewind/Forward

Touch and hold  


Volume adjust

Press side key

Now playing: Touch to open the current playlist.

Touch 

Shuffle: Touch to shuffle the current playlist.

Touch 

Repeat: Touch to repeat the current playlist; touch again to repeat the current track.

Touch 

## Camera

1. Launch the camera by pressing the camera icon on the home screen
2. In the camera app, tap the screen to focus on a specific area.
3. Press the camera button all the way down to take a picture.

## SHOOT A VIDEO

1. Press and hold the camera button until it vibrates then release.



2. In the Camera app, select video
3. Press the camera button to begin filming and press again to stop filming.

## Calculator

1. Launch the calculator by pressing the calculator icon on the home screen.
2. In the calculator app, enter numbers and arithmetic operators on the basic screen.

## Calendar

You can use the calendar to keep track of important events. After entering the calendar function menu you can select year, month and date. Slide the Calendar screen up and down to switch month.

## Sound Recorder

Use this function to record audio files. Two function icons at the bottom of the Recorder screen are corresponding to start recording and review record file.

## Clock

 
The clock allows you to view time and date. You can also add an alarm, set the alarm and turn it on. Then, the alarm can ring at a specific time you set.

## Gallery

Both pictures and videos taken by camera or stored in SD card can be scanned through this function.

## Video player

With Videos, you can play video clips in your device (for example, the video you captured by the camera) or video files stored in compatible SD card (if inserted)

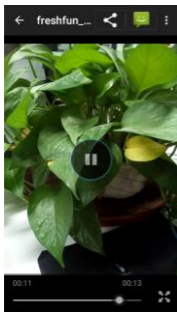

## SIM1 Toolkit

STK features are provided by your service provider. If your SIM card supports STK feature, you will see the STK menu. Different STK has different STK main menu.

Please contact your service provider if the STK does not work.

## Browser

 
To let you browse the Internet.

## File Manager

The phone supports the SD card. You can use the File Explorer to conveniently manage various directories and files on the SD card.


## USE AS MODEM VIA USB

You can connect your phone to a computer with a USB cable, to transfer music, pictures, and other files between your phone's SD card and the computer.

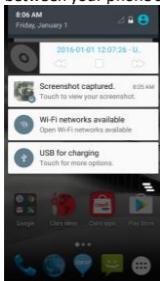

## CONNECT TO Wi-Fi NETWORKS

 Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

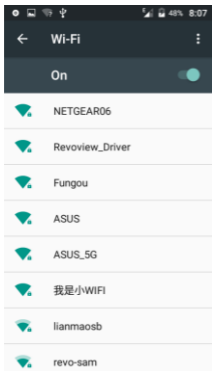

Touch Settings> WI-FI . Check Wi-Fi to turn it on. The phone scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon.

## 1.FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a ClassB digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



## SAR Information Statement

This phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure information and Statement the SAR limit of USA (FCC) is 1.6W/kg averaged over one gram of tissue. Device type I50F (FCC ID: 2ALCI-FRESHFUNI50F) has also been tested against this SAR limit.

SAR information on this and other device can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body.

To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0cm separation distance between the user's bodies. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.